

## Pretreatment

Regular maintenance is vital in order to keep the wood floors in a strong and beautiful condition for a long time. Well-kept surfaces also result in fast and easy cleaning and maintenance.


## Products Needed

Padco Roller

WOCA Polishing Cloth

Padco Roller Tray

Padco Roller Refill

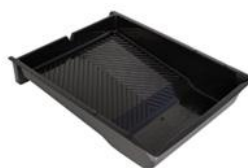

Buy Now!

Buy Now!

Buy Now!

Buy Now!

## Instructions

1. The unfinished woodwork must be sanded finely (grit 100-120) and it must be completely clean and dry before application of the pretreatment product.
2. Shake the container. Pour the pretreatment product into a plastic bucket and stir regularly to get a uniform result.
3. Apply the pretreatment product undiluted with the WOCA Applicator, a nylon brush or roller in an even coat on the floor lengthwise. Apply at least 1 litre of pretreatment product to 10 m<sup>2</sup> of wood. On vertically mounted woodwork, apply from bottom to top.
4. After a drying time of 24 hours at 20°C/68°F (the wood must be completely dry), de-nib standing fibres with a fine sanding polishing pad before the final basic treatment. Subsequently, vacuum clean the floor.
5. Finish the floor with one of the well-known WOCA oils or treat with Basic Soap or Natural Soap, White.
6. Clean tools with water after use.

With Active Stains, the use of WOCA Wood Cleaner should occur after application and sealed with oil.

