

POD HOLES


Step 1

Locate the vehicle battery and disconnect the negative battery terminal.

Step 2

Locate the vehicle taillight wiring harness connector. It will be connected to the vehicle's 7-way trailer connector, mounted to the bumper. The connector will be similar to that on the custom wiring harness extension.

Separate the 7-way connector from the vehicle wiring harness by carefully releasing the gray locking clip and gently pulling the connector apart while holding down on the connector locking latch.

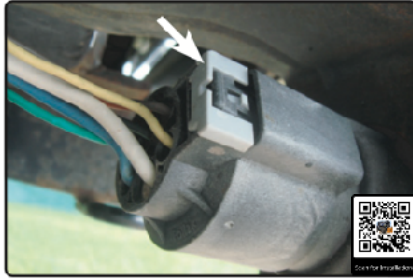

Step 3

Position the paired extension harness ends between the separated connectors. Insert the longer of the paired connectors into the vehicle wiring harness connector. Make sure the connectors are fully inserted with locking tabs in place.

Insert the shorter of the paired connectors into the rear of the factory 7-way socket. Make sure the connectors are fully inserted with locking tabs in place. Return the locking clip to its original position.



Step 4

Locate a suitable mounting point for the relay using the supplied zip tie and route the harness across the rear of the vehicle.

Note: Be sure the harness will not pinch or bind when turning.

Step 5

Locate the connector on the driver's side of the vehicle with the red locking clip. Release the clip and remove the connector. Insert the supplied "T" harness with the paired connectors into the vehicle wiring harness connector.

