



COLUMN TOP VIEW

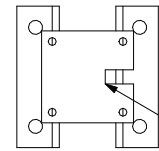

WHEN INSTALLING COLUMNS MAKE SURE SLOTS IN UPPER PLATE FACE EACH OTHER ALONG RUNWAY.

COLUMN BOTTOM VIEW

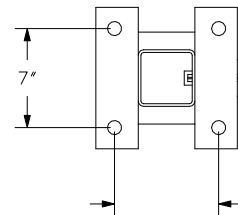

USE 3/4" ANCHOR BOLTS
 ANCHOR BOLTS MUST BE EMBEDDED AT LEAST 4" INTO FLOOR.
 HAVE A MINIMUM OF TWO THREADS ABOVE NUT
 MAKE SURE COLUMN WELDMENTS ARE PLUMB
 ATTACH RUNWAYS TO COLUMN HEADERS USING 1/2-13 1.5" LG. BOLTS
 LEVEL RUNWAYS AND MAKE SURE THAT THEY ARE PARALLEL WITHIN ±.125"

GORBEL
 600 FISHERS RUN
 P.O. BOX 593
 FISHERS, NY 14453-0593

TOLERANCE: ±1/8	LINE:	DATE: AUG 4, 2016
QTY.	DRAWN:	
ID #: Sdarby00006		