



COLUMN TOP VIEW

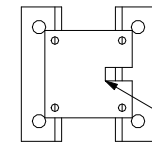

WHEN INSTALLING COLUMNS
MAKE SURE SLOTS IN
UPPER PLATE FACE EACH
OTHER ALONG RUNWAY.

COLUMN BOTTOM VIEW

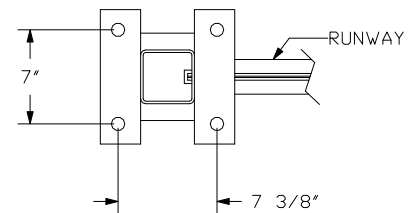

USE 3/4" ANCHOR BOLTS
ANCHOR BOLTS MUST BE EMBEDDED AT LEAST 4" INTO FLOOR.
HAVE A MINIMUM OF TWO THREADS ABOVE NUT
MAKE SURE COLUMN WELDMENTS ARE PLUMB
ATTACH RUNWAYS TO COLUMN HEADERS USING 1/2-13 1.5" LG. BOLTS
LEVEL RUNWAYS AND MAKE SURE THAT THEY ARE PARALLEL WITHIN $\pm .125"$

GORBEL

**600 FISHERS RUN
P.O. BOX 593
FISHERS, NY 14453-0593**

TOLERANCE: $\pm 1/8$ | LINE: | DATE: AUG 4, 2016

QTY. | DRAWN:

ID #: Sdarby00006