
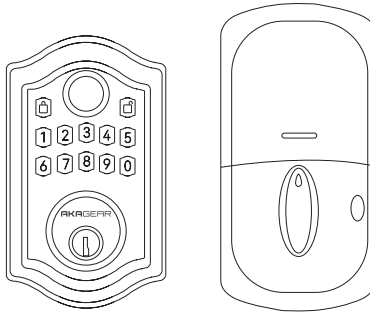


SMART DEADBOLT

Installation and User Guide

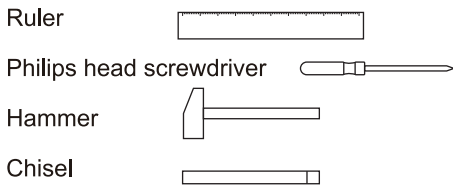

Required tools



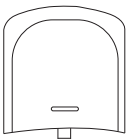



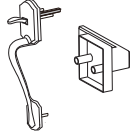











IMPORTANT




Do not load batteries until lock is completely installed.

Parts List

(A) Exterior Assembly x1 	(B) Interior Assembly x1 	(C) Battery Cover x1 	(D) Deadbolt latch  (M) Lever latch 	(E) Mounting plate x1 	(F) Handleset 
(G) Plastic box x2 	(H) Strike plate x2 	(I) Backup key x2  (O) Washer x1 	(J) Mounting Plate Screws (Longer) x2  (P) Back lock screws x1 	(K) Latch and Strike Screws x4 	(L) Interior Assembly Screws (Shorter)x2  (N) Interior Assembly Screws (Lever)x2 

Thank you for purchasing our products. Please review this manual thoroughly before operating your device. All pictures in this manual are for illustration purpose only. Actual product may vary due to product upgrade.

Installation Overview


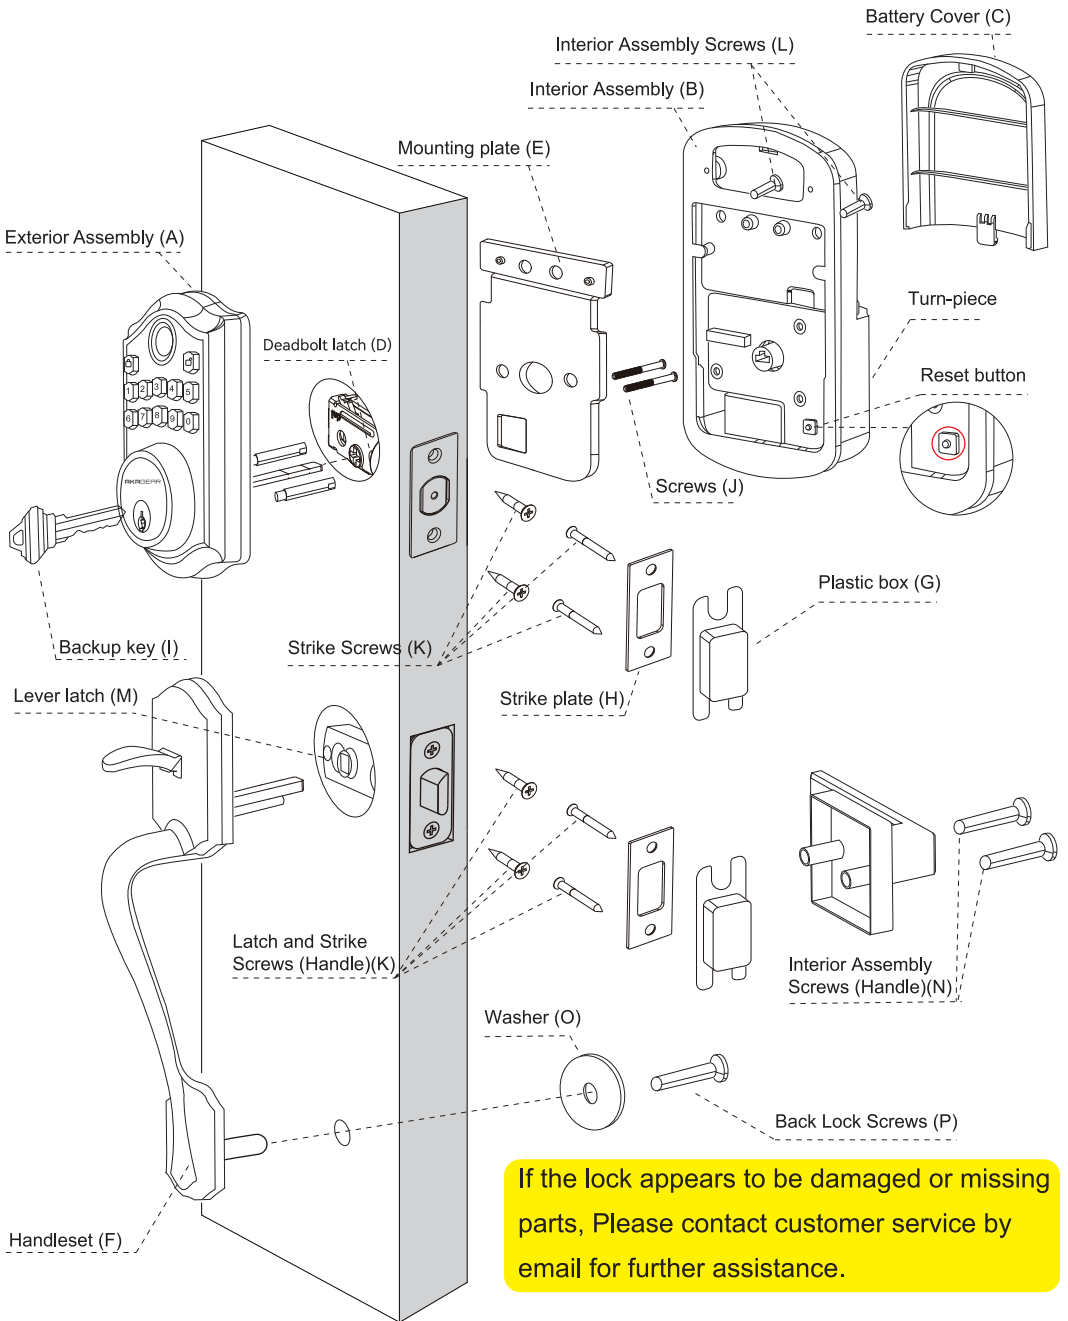


If the lock appears to be damaged or missing parts, Please contact customer service by email for further assistance.

Installation instructions

- ① Don't insert the key to the cylinder when installing the deadbolt !!!
- ② Battery:
 - a. Use new and NON-rechargeable 4 AA batteries for the best use.
 - b. Don't load batteries until the lock is completely installed.
- ③ Adjust latch to insert horizontally.

If you any problems, don't hesitate to contact with us through customer service at the first time.

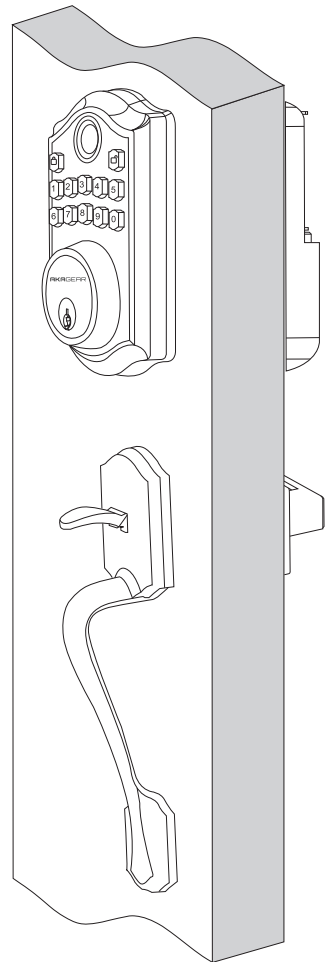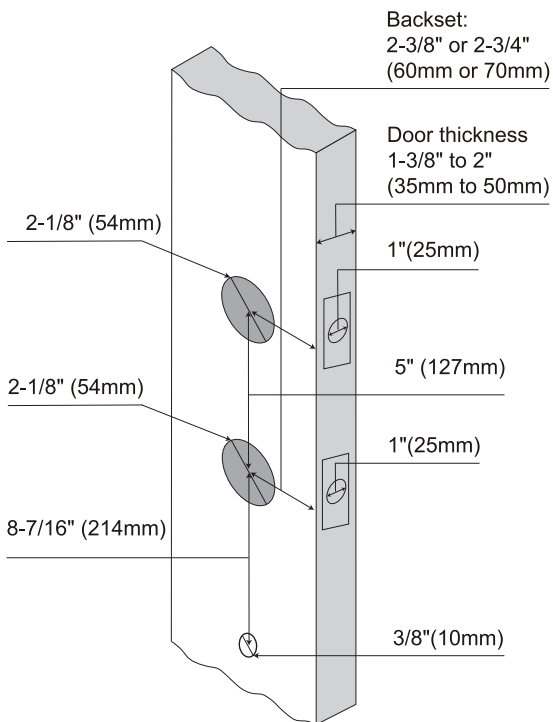


Before installing the lock, Please check door jamb and door preparation.

STEP

1 Prepare the door and check dimensions

A


Measure to confirm that the backset is either 2-3/8" or 2-3/4" (60 or 70mm)

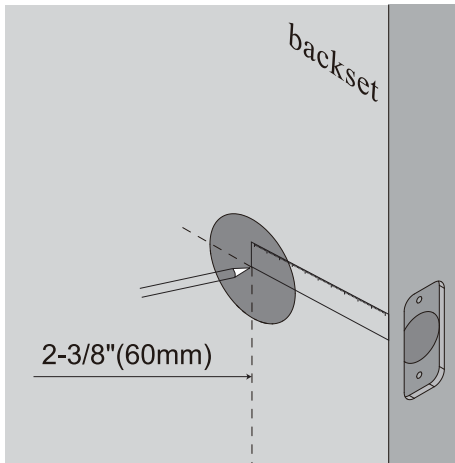

B


Measure to confirm that the hole in the door is 2-1/8" (54mm).

Measure to confirm that the hole in the door edge is 1" (25mm).

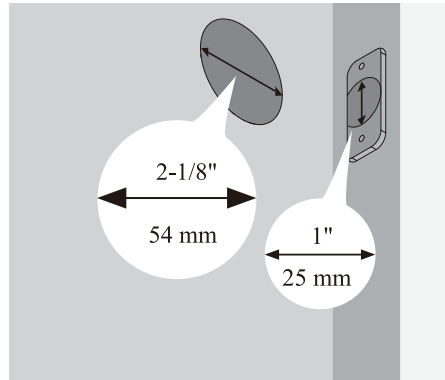


C

Make sure the hole in door frame is drilled a minimum of 1" (25mm) deep.

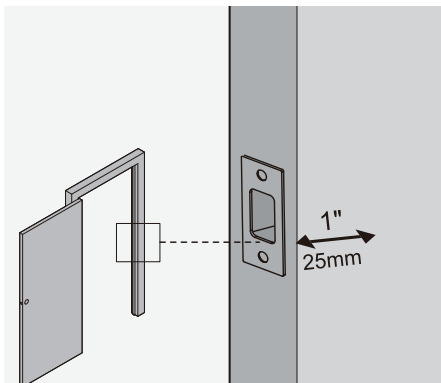

D


Measure to confirm that the door is 1-3/8" to 2" (35 mm or 50mm) thick.

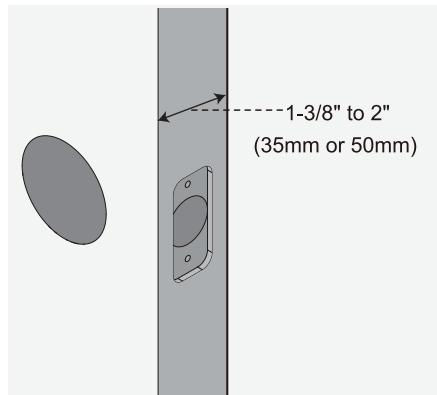


STEP

2 Install the latch and strike

A Determine backset and adjust the latch

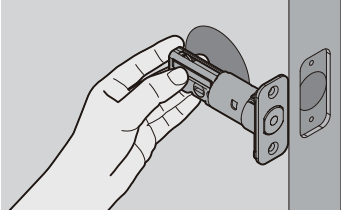


Hold the latch in front of the door hole, with the latch face flush against the door edge. Is the slotted hole centered in the door hole?

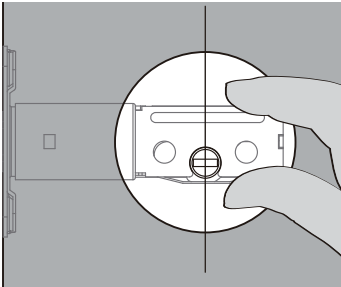

YES


No adjustment is required.
Proceed to next step.

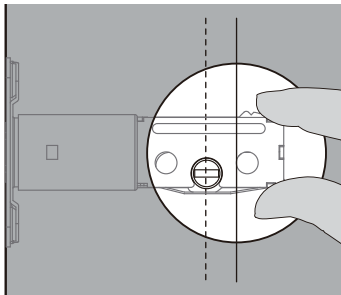








NO

Slotted hole is NOT centered.


Rotate and pull the latch as shown to extend latch.

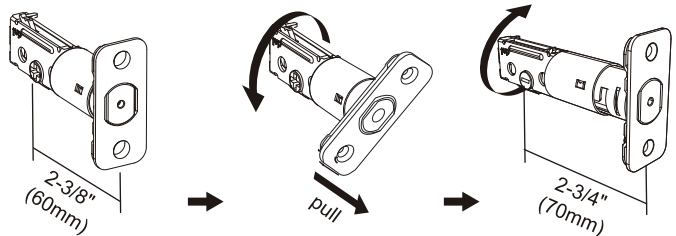

B Install the latch

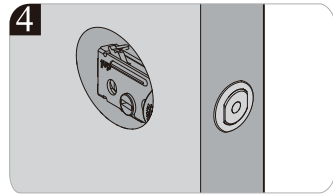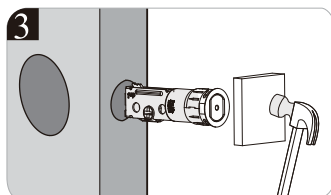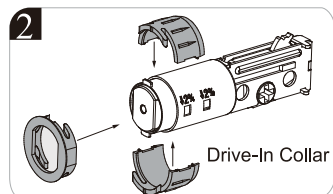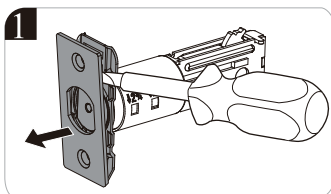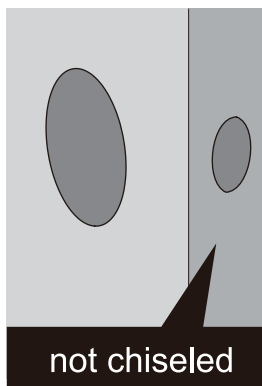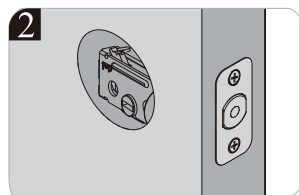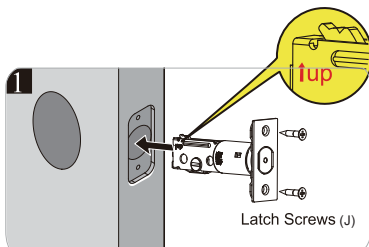


C Use a screwdriver to test if deadbolt works smoothly.

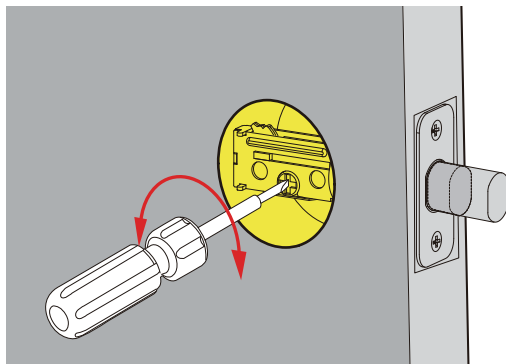

D Install strike on the door frame.

! IMPORTANT:

Make sure the hole in door frame is drilled a minimum of 1" (25mm) deep.

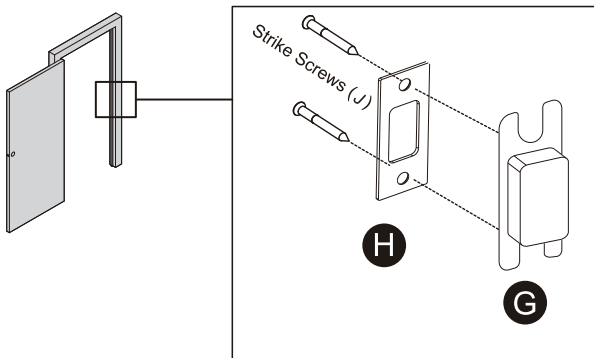


STEP

3 Install exterior assembly



! IMPORTANT:

Before installation, make sure the latch is fully retracted (in the unlocked position)


Unlocked

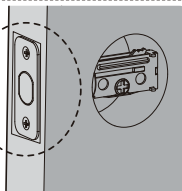

Locked

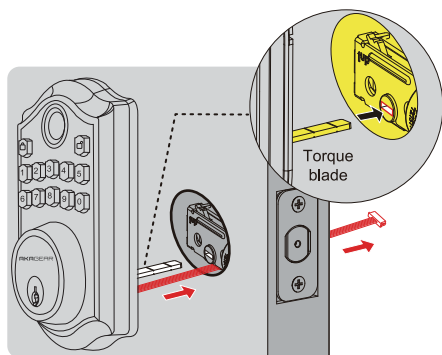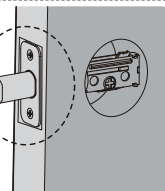

A With the latch fully retracted (in the unlocked position), route the cable below the latch, and insert the torque blade through the slot in the

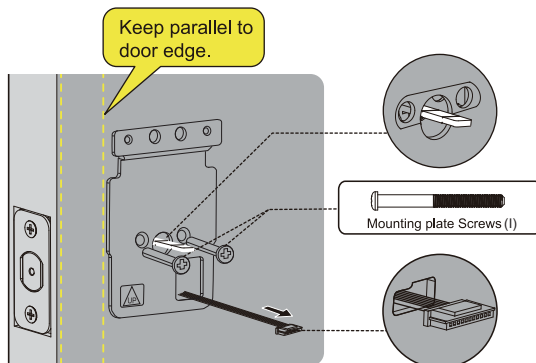

B Secure the mounting plate with the supplied screws. Do not overtighten screws.

STEP

4 Install interior assembly


A

Push the battery cover out in the direction as illustrated.




IMPORTANT:

Do not load batteries until lock is completely installed.

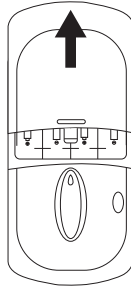


B

Insert the cable connector to the socket. Push the connector in firmly until it is completely attached.

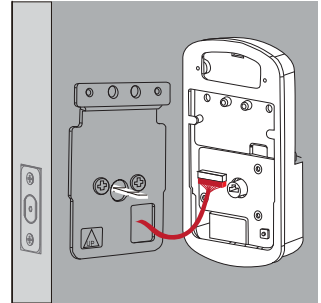



C

Keep the thumb turn in vertical position and install the interior assembly.

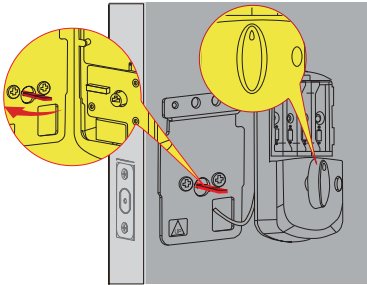


D

Attach Interior Assembly to Mounting Plate and tighten 3 Screws.

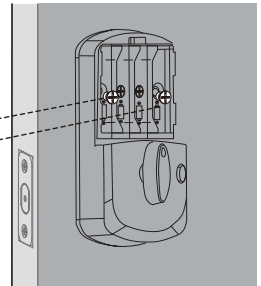

E

Install the batteries and cover.

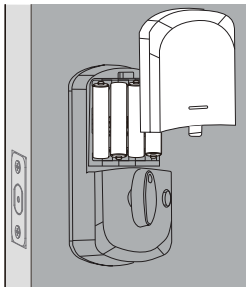


F

Detect door's opening direction.


Completely & properly install the door lock

- Under unlocking state.
- Put on 4 AA batteries.
- Voice programming successfully in 5s, and green light flashes as well.
- Door lock itself can detect the door's opening direction (L or R)
- Enter passcode to check if the deadbolt can extend / retract correctly.

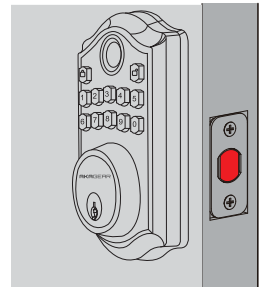

Please wait for 5s for it to finish automatically being oriented before proceeding with setup operation after installation and power on.

Installation Instructions of **Handleset**

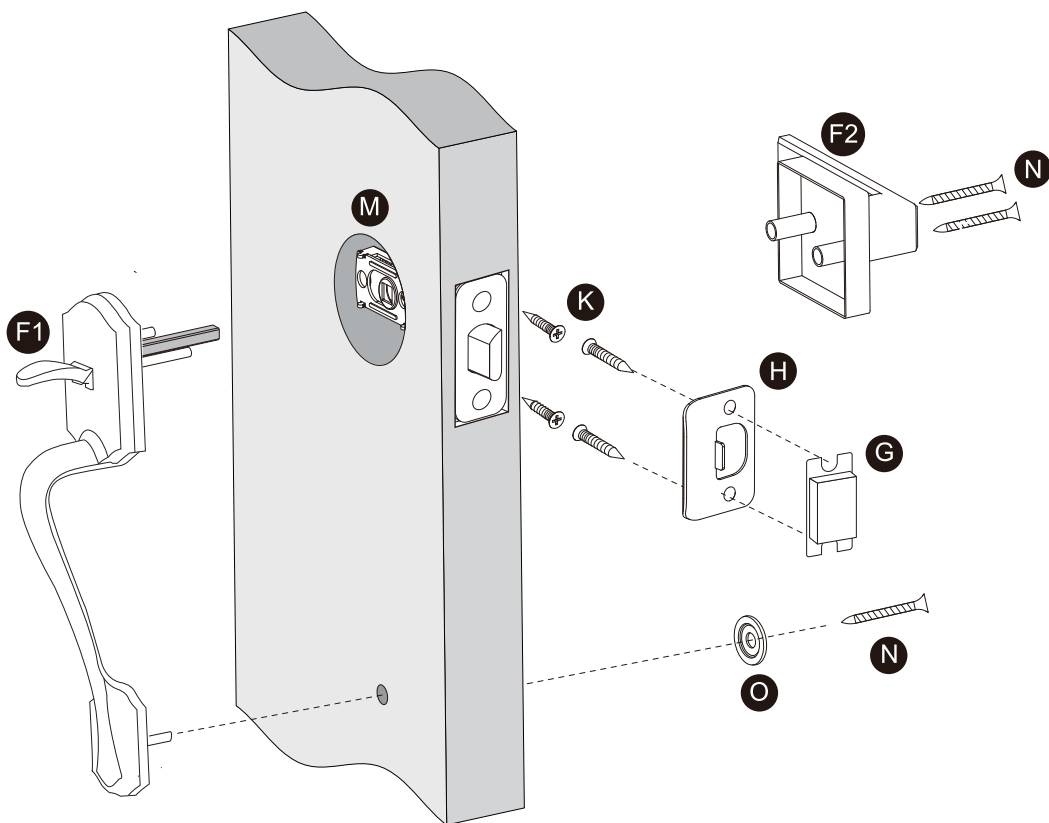

F1 Handleset x1

M Latch x1

H Strike x1

G Dust Cover x1 (optional)


F2 Handle Lever x1

N Handle Lever
& Handleset screws x3


K Latch&Strike screws x4

O Spacer x1

1. Prepare the door and check dimensions

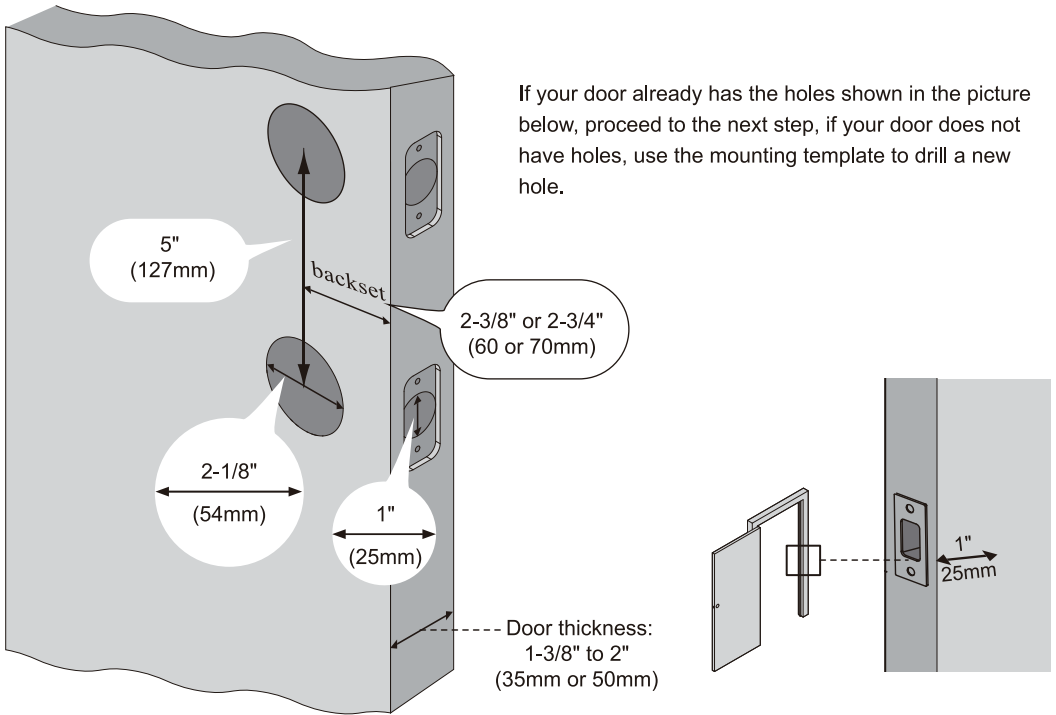


2. Latch backset adjustment

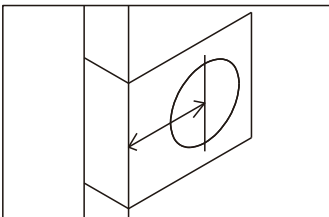


Backset is the distance from the door edge to the center of the hole in the door. The latch is provided with adjustable design which can fit either 2-3/8" (60mm) or 2-3/4" (70mm) backset.


A. If the backset of your door is 2-3/8" (60mm), no need to adjust the latch.

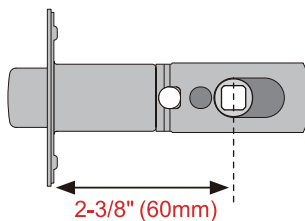

B. If the backset of your door is 2-3/4"(70mm), please adjust the latch.

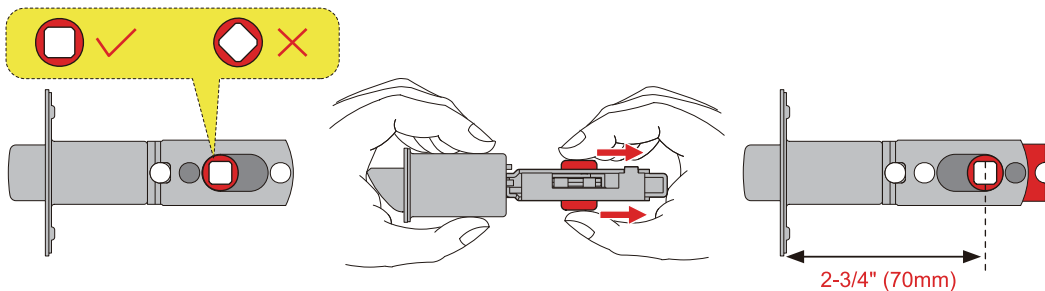


3. Install latch and strike

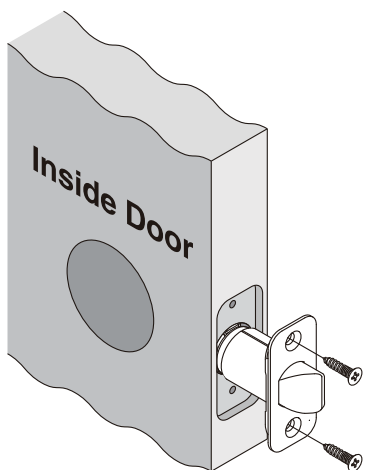

IMPORTANT:


The latch should be aligned with the chiseled properly.

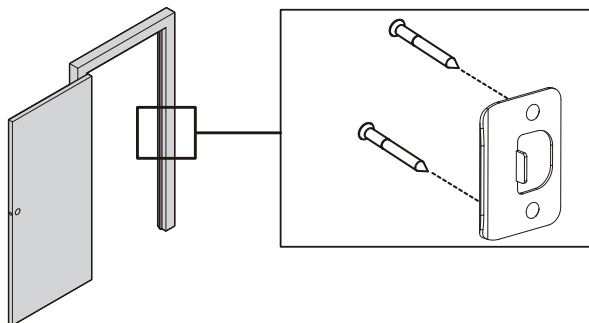

IMPORTANT:

Make sure the hole in door frame is drilled a minimum of 1" (25mm) deep.

4. Install Handleset

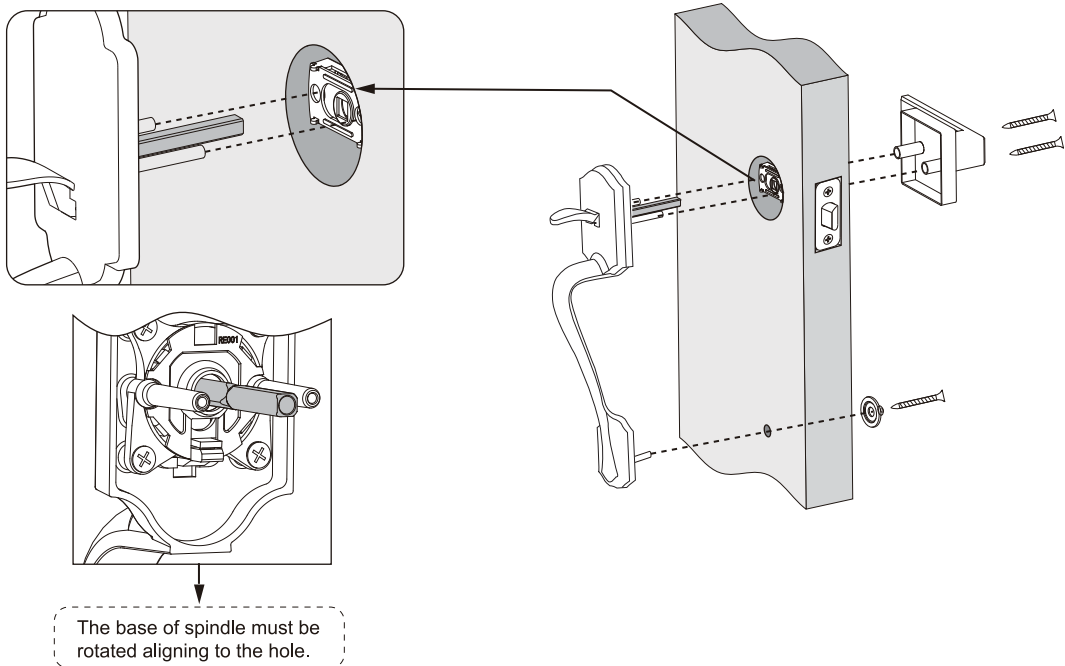

5. Install Handle Lever

