



## ECO 25 Enclosures – Assembly Instructions

Tools needed are: Phillips head screwdriver

Please take a moment to read the entire instructions before beginning, to avoid making mistakes.



1. Place the **Bottom** piece of the enclosure on a table, bench or other slightly elevated surface. This is to allow space for you to screw the sides onto the **Bottom** panel. **Important: Make sure the labels are facing down and the front arrow is facing you.**

2. Now take the **Front** panel and position it at 90 degrees to the **Bottom** and screw the parts together, making sure it's lined up with the **Bottom** before adding the screws.



**As we pre-assemble these enclosures, please dial down any drills to the lowest clutch setting in order to not over tighten the screws. We recommend tightening by hand with only a Philips head screwdriver for best results.**



3. Now locate the **Left Side** and screw it into place from the front and from below until all the screws are in place.

4. Now do the same for the **Right Side** as shown.




5. The **Top** can now be secured in place.

6. By carefully placing the enclosure facing down, you can now screw into place the **Back** and your enclosure is now complete.



Like any PVC enclosure, if you are adding plants or a wet substrate layer, be sure to silicone around the bottom so that you don't have any leaks when watering.

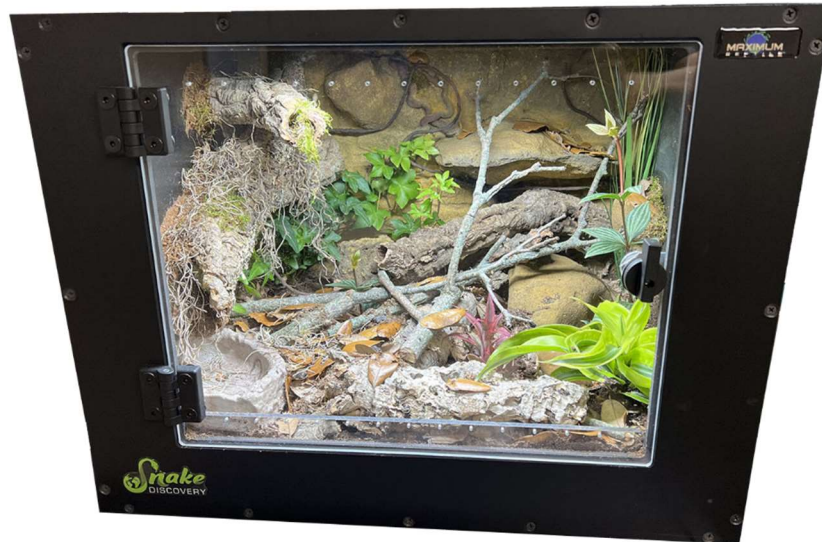

Should you run into any issues or have any questions regarding this assembly, or anything else, please contact our customer service team for help. <https://customreptilehabitats.com/pages/contact-us>

For full color images of these instructions, we recommend viewing online by clicking on the Assembly link in our FAQ section, or just use the below QR code on your Smart Phone.

