


Contract Felt Tamperproof Lockable Noticeboard

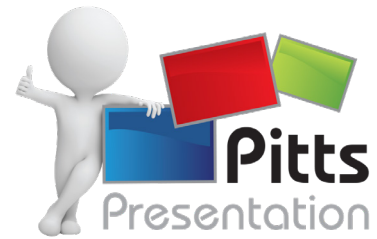

**A compact slimline tamperproof noticeboard for the protection
and safe keeping of your notices**

- No certified fire rating
- Key locks
- Overall depth 45mm
- Overall size: PSD0906C 970mmx650mm; PSD1209C 1270mmx950mm
- Tough corners with concealed wall fixings
- Units are side-hinged as standard
- Interior use only

Sizes and dimensions

PSD0906C	900x600mm	single door	4.5kg
PSD1209C	1200x900mm	single door	8.6kg



Care and Maintenance

Recommended Procedures

Dust down with a soft, clean brush only. Do not use excessive force when removing staples as this may damage the material. Water or cleaning agents should not be used.

To reduce the risk of fire, please make sure that notices on the board do not protrude out of the board and are in single layers. Notice boards should not be fitted near, or directly above any gas heaters or other sources of combustion.

Tamperproof Door Cleaning

Surfaces of items made from polycarbonate should not generally require cleaning until after fabrication and before packaging. If however any surface decoration process is planned such as vacuum metallisation or screen printing it is advisable to wash the sheet surfaces to be decorated with clean, fresh water using a chamois leather or soft cloth. This has the advantage of removing all traces of static charge from the sheet after removal of the film which might otherwise attract dust. For all general purpose cleaning operations, polycarbonate should be washed simply with clean cold water to which a little detergent has been added. The use of any solvents such as methylated spirits, turpentine, white spirit or proprietary window cleaning products is neither necessary nor recommended.

Fixing Instructions

1. Place the Tamperproof on the wall in the desired position with the doors open, using a spirit level.
2. Using a marker push through the holes in the 4 corner fixings on the noticeboard to mark the wall when removed. (On boards 1500mm and over there is an additional optional centre fixing point in the aluminium trim top and bottom to be marked)
3. Using the appropriate drill bit, drill the 4 (or 6) holes marked
4. Place the appropriate rawl plug, depending on wall type in to the hole
5. Hold the Tamperproof back to the wall and using the screws supplied screw through the corner into the wall plug behind until secure. Using the 4 grey pipits supplied cover the screw heads in the plastic corner pieces.

Disclaimer: The above cleaning/maintenance recommendations have been derived from years of practical experience and should be regarded as helpful guidelines only.