

Pitts Premier Felt Unframed Noticeboards




Pitts Unframed Premier Felt noticeboards are made with a good quality felt available in six colours, all manufactured in our UK factory.

- The felt is flame retardant to BS476, Part 7, Class 1
- 9mm pinboard core
- Unframed
- The felt is wrapped around the edges and stapled to the back of the board
- 2 fire ratings are available - Class 1 and Class B. All public buildings require Class 1 in offices and Class B in corridors and stairwells.
- Class B Fire Rated backing pinboard is used for Class B Noticeboard, tested in accordance with BS EN ISO 11925- 2 and has been found to meet the higher demands of Class B (BS EN 13501 Class B)
- 6 colours are available: Silver, Burgundy, Cherry, Oxford Blue, Dark Green and Black
- 2 years guarantee

Unframed Frame Codes Class 1/Class B, Sizes and Weights:

PM0906U/PMFR0906U 900x600mm 1.3kg
PM1209U/PMFR1209U 1200x900mm 3.5kg
PM1212U/PMFR1212U 1200x1200mm 4.3kg
PM1512U/PMFR1512U 1500x1200mm 5.1kg
PM1812U/PMFR1812U 1800x1200mm 6.7kg
PM2412U/PMFR2412U 2400x1200mm 8.8kg

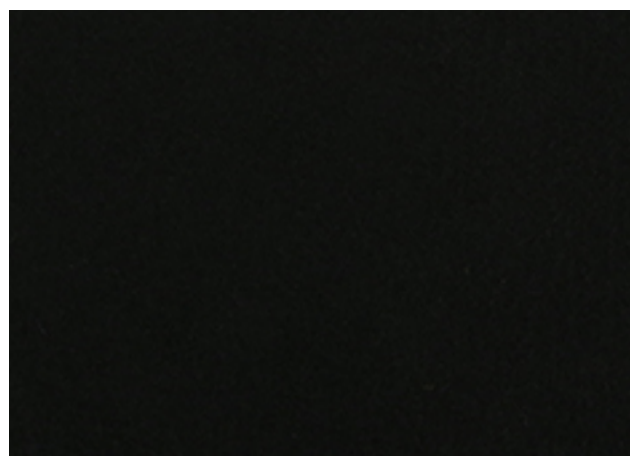

Care and Maintenance

Recommended Procedures

Dust down with a soft, clean brush only. Water or cleaning agents should not be used.

To reduce the risk of fire, please make sure that notices on the board do not protrude out of the board and are in single layers. Notice boards should not be fitted near, or directly above any gas heaters or other sources of combustion.

Instructions to install an Unframed Board

When fixing an unframed board, you will need to drill through the fabric.

Standard cups and screws are supplied. You will need one high speed drill and a thin piece of wood.

When installing the board drill the holes first, lay you board onto a flat surface, mark with a pen where the holes need drilling.

Now drill a hole through the thin piece of wood, this will be used to put on top of the fabric and over the pen marked, this will stop the fabric being pulled by the drill bit.

Once the holes have been drilled, position the board against the wall using a spirit level and mark the wall using the drill.

Remove the board and drill the full holes. Complete the install by fixing to the wall.

We offer a range of different fabrics and finishes: Pitts Polycolour FR[®], Camira Cara, Camira Lucia, Corded Hessian, Charles Twite, Cork, Universe Screen, Sundeala and Forbo Nairn.