
POCKET DOOR FRAME


CUTTING SCHEDULE AND ASSEMBLY DETAIL

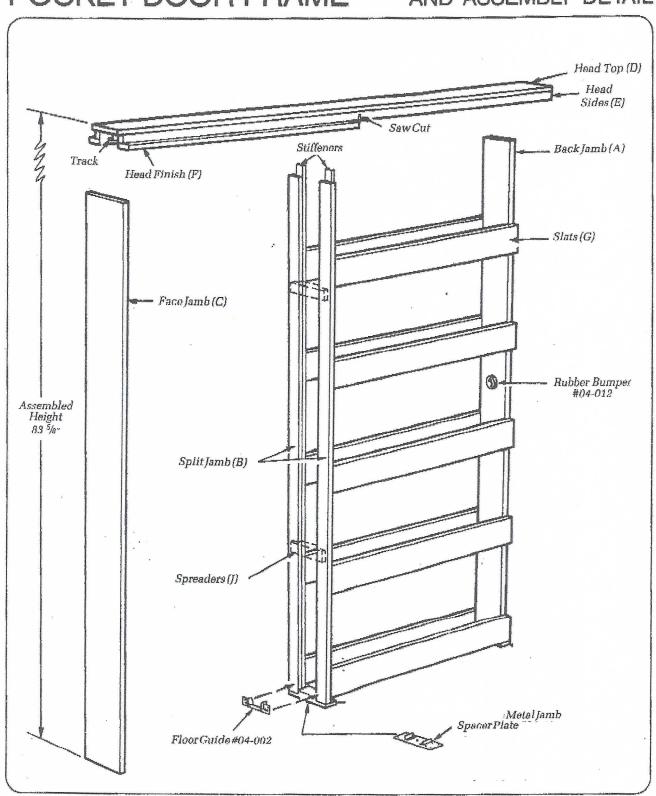

Pocket Door Frame Installation Instructions

For 1-3/8" doors

1. COMPONENTS

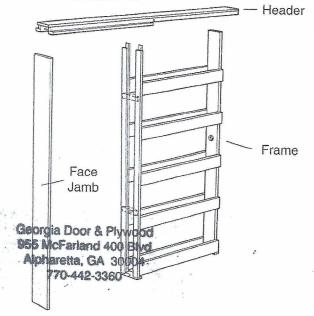

C®X HARDWARE COMPONENTS (POLY BAG)







BRACKETS (2) NYLON GUIDE (1)









3/4" NAILS (4) 1-1/2" SCREWS (4)

WRENCH (1)




3. ADDITIONAL SUPPLIES

1-1/2" FINISHING NAILS (6) OR 1-1/2" SCREWS (6)



2-1/2" FINISHING NAILS (18) OR 2-1/2" SCREWS (18)


84" WOOD STOP OR TRIM (6)






CONCRETE NAILS (4)

4. CHECK ROUGH OPENING DIMENSIONS

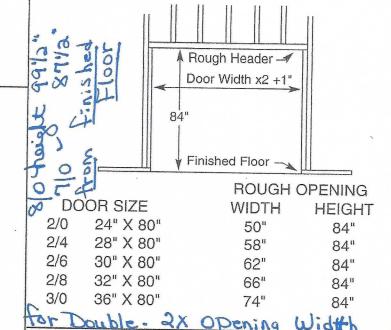


5. ATTACH HEADER TO FRAME


(USE 1-1/2" NAILS OR SCREWS AT [A] AND [B]

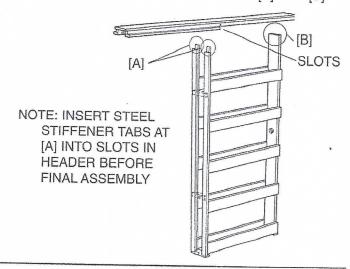

6. INSTALL FRAME INTO OPENING

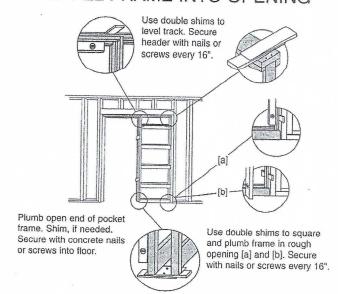


7. INSTALL FACE JAMB

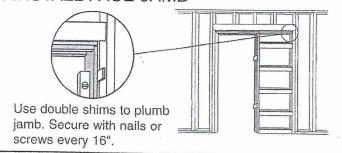


8. DRYWALL INSTALLATION

IMPORTANT: must be installed using 3/4" drywall nails or 3/4" drywall screws to prevent interference with operation of door.


9. REMOVE FRAME SHIPPING SPACERS

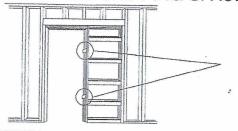

10. INSTALL HANGERS INTO TRACK

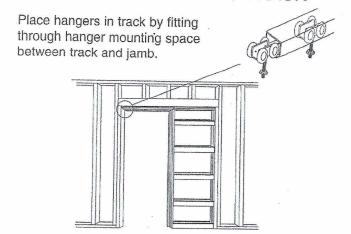


11. INSTALL HANGER BRACKETS

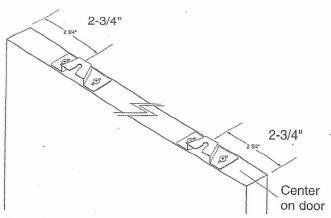

Screw brackets to top of door, 2-3/4" from edge of door, using 1-1/2" screws.


12. INSTALL AND ADJUST DOOR

Attach bracket to hanger by lifting door and inserting adjusting bolt into slot until bolt head becomes seated. Align doors by turning adjusting bolt with wrench.

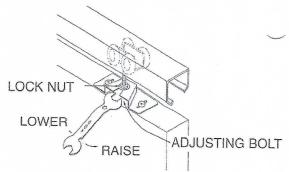


After final adjustment, tighten lock nut down to bracket as shown.


13. INSTALL NYLON GUIDE



Nail nylon guide No. 04-002 to split jamb as shown, centering door in pocket.

14. INSTALL STOP OR TRIM

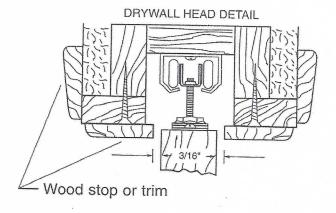

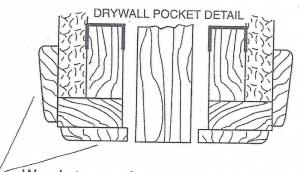

Wood stop or trim

Install trim around pocket frame as for a standard hinged door, covering pouter tabs of No. 04-002 guide.

955 McFarland 400 Blvd Alpharetta, GA 30004

770-442-3360 CX07-232 8/02 Printed in U.S.A.