

# STRANGE

11-Sep-2017

## 1.0 LED

**LED** 7/10W | 350-500mA | 18Vf | COB 3-step | excl. power supply  
 CE IP20 10.3m 36° 35°/35° 355°

white texture 131161W\_  
 black texture 131161B\_

### LIGHT COLOUR

2700K | >90CRI | 420-590lm 3  
 3000K | >90CRI | 470-640lm 5  
 1800-2850K | >95CRI | 320-440lm 9

### ALWAYS USE

plaster kit 90017116-02 or 90017120-01  
 for power supplies see our catalogue

## 1.0 PAR16

PAR16 max. 35W | GU10 | 100-240VAC | 50-60Hz  
 CE IP20 10.9m 35°/35° 355° DO NOT COVER

white texture 131120W0  
 black texture 131120B0



### ALWAYS USE

plaster kit 90017116-02 or 90017120-01


### OPTIONAL

for PAR16 lamps see our catalogue

plaster kit (has to be ordered separately)





### SAFETY DISTANCE FOR HALOGEN LAMPS

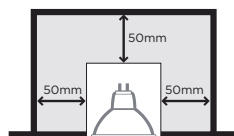



## 1.0 LED

## 1.0 PAR16

①





②

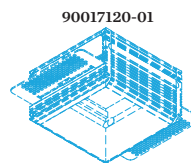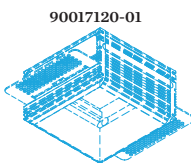

or


or

④

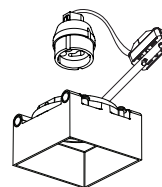

## DIMENSIONS


1.0 LED with plaster kit 90017120-01




1.0 PAR16 with plaster kit 90017120-01



1.0 LED with plaster kit 90017116-02



1.0 PAR16 with plaster kit 90017116-02




## MOUNTING INSTRUCTION


- ① Make a hole in the ceiling according to the prescribed dimensions (always use a plaster kit)
- ② Click in the upper part of the fixture into the ceiling and plaster the borders seamlessly

## POWER CONNECTION

- ③ SERIAL CONNECTION - for LED  
**Always use POWER SUPPLY according to the specifications of the LED-module**



### PARALLEL CONNECTION - for PAR16



- ④ Insert the fixture in the upper part. Place the LED-module or PAR16 lamp and fix with spring.


# STRANGE 1.0 & SNEAK 1.0 PLASTER KIT

11-Sep-2017


plaster kit

90017116-02


plaster kit (has to be ordered separately)



NOTE: There are 4 foldable gaskets on the plaster kit.

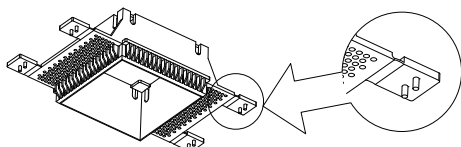

When the thickness of wood board is 13mm, the gasket will be **opened**;


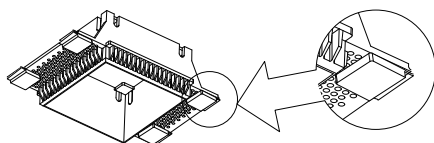


when the thickness of wood board is 10mm, the gasket should be **folded**.



1.0 LED

1.0 PAR16



①



②

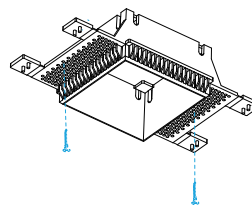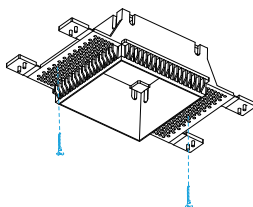


④

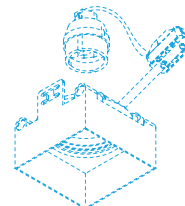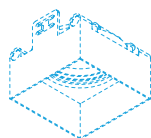


## DIMENSIONS

1.0 LED



1.0 PAR16



## MOUNTING INSTRUCTION

- ① Make a hole in the ceiling according to the prescribed dimensions (always use a plaster kit)
- ② Click in the plaster kit into the ceiling and screw it tightly on the ceiling, then plaster the borders seamlessly.
- ③ POWER CONNECTION
- ④ Insert the fixture in plaster kit.  
for LED: Place the LED-module in the fixture.  
for PAR16: Place the PAR16 lamp in the fixture and fix with spring.



WEVER & DUCRÉ  
LIGHTING

[www.weverducre.com](http://www.weverducre.com)

Wever & Ducré bvba Kwadestraat 153 bus 2.1 8800 Roeselare

INSTALLATION  
INSTRUCTIONS

PAGE 2/2