


Installation Guide - Cushion Link Solid Top

- Start in the corner and connect the tiles together into the desired size or shape. A soft-faced hammer or mallet maybe needed to ensure a secure fit.
- If you are using bevel edges, please note there are two types – female and male. The female bevel connects to the visible interlocking section of the tile and the male bevel connects to the straight edge. The bevels simply click into position to create a ramped edge.
- To cut the tiles or bevel edges to size, use a sharp Stanley knife.
 - Tiles – Use the cut lines on the underside of the tile, as this ensures the tiles can still be connected together and the bevels fit correctly.
 - Bevel edges – once the tile has been cut to the shape/size you need, connect the relevant bevel to the tile and trim each bevel to create a straight edge or miter in the corners as shown in the diagram.
- Superglue can be used to connect the tiles and bevels together, however our interlocking system has been designed to connect securely so is not essential.

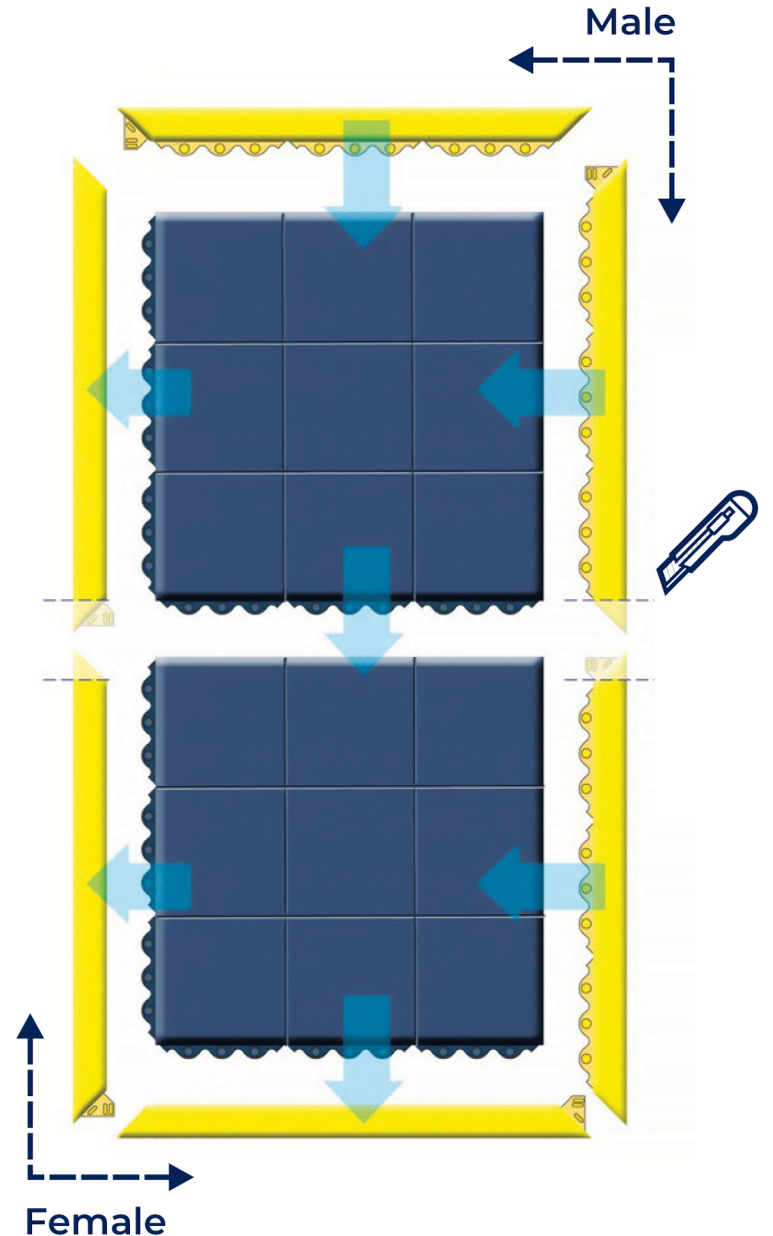

If you have any questions, we're only a phone call away.