


Double IBC Spill Pallet with Framed Cover

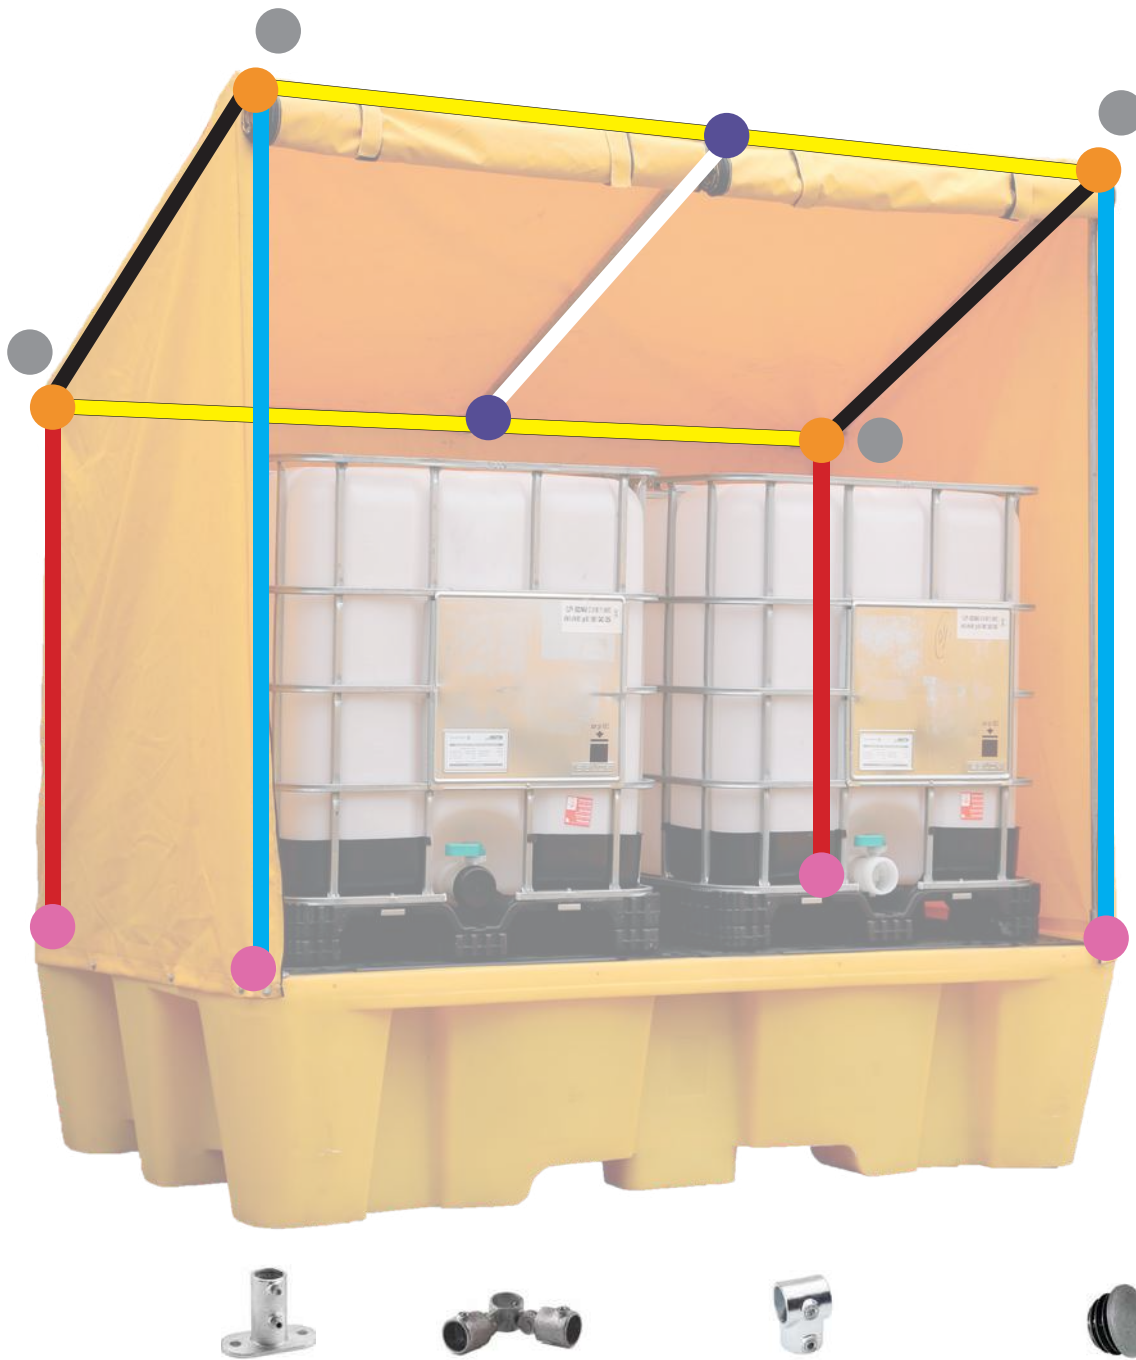

A12 FOOT



A48 CORNER SWIVEL



A2 SHORT TEE



A68 CAPS



A9 INTERNAL JOINER



FITTINGS

PART	A12 Foot	A48 Corner Swivel	A2 Short	A68 Caps	A9 Internal
QUANTITY	4	4	2	4	Joiner 0

TUBES

PART	Side Ridge Bars	Center Ridge Bar	Rear Legs	Front Legs	Front & Rear Cross Bars
QUANTITY	2 x Black 1300mm	1 x White 1370mm	2 x Red 1 Band 1410mm	2 x Blue 1 Band 2000mm	2 x Yellow 2200mm

ACCESSORIES

PART	10mm x 30mm Bolts	10mm x 35mm Bolts	10 x 50mm Bolts	10 Flanged Nuts	8mm Self Tapper
QUANTITY	Bolts 0	0	8	8	13
PART	8mm Big Washer	2.5mm x 12mm Self Tapper	1/4 inch Allen Key	6mm Allen Key	Yellow PVC Cover
QUANTITY	13	Tapper 8	Key 1	1	1

Tools required:

1. Power drill, 8mm driver socket and 4mm drill bit
2. ¼" Allen key
3. 17mm combination spanner
4. Ratchett with 15mm socket and 17mm socket

Frame mounting points (1)

- Fit the four feet to the pre-drilled corners of the base unit using 8mm x 40mm bolts and flanged lock-nuts (8 off)
- Ensure the allen key holes on the upright part of the foot face outwards and are not intruding on the space for the tube
- Replace the black decking grid(s) onto the base unit (1a)

Front legs (2)

- Select the two **blue**-banded tubes. These are the two front legs
- Place front legs into foot sockets on base unit (2a)
- Fit securely in place using ¼" allen key
- Place corner sockets onto top of each leg

Back legs (3)

- Select both **red**-banded tubes; these are the back legs
- Place the red-banded tubes into the rear foot sockets of the base unit
- Fit securely in place using ¼" allen key
- Place corner sockets onto top of legs

Front/rear roof tubes (4)

- Select both **yellow**-banded tubes; these are the front and rear roof tubes
- Slide t-connector onto each tube
- Fit tubes into corner sockets at top of front legs and repeat with back legs
- Secure at each end using ¼" allen key

Side tubes (5)

- Select both **black**-banded tubes; these are the sloping side tubes of the roof
- Fit into corner sockets between front and back legs using ¼" allen key

Centre roof tube

- Select the **white**-banded tube; this is the centre roof tube
- Fit into the t-sockets of the yellow tubes securely using ¼" allen key

Cover (6)

- Place cover over frame and close all zips.
- Ensure Velcro straps are on the outside and cover sits squarely on the frame
- Drill 4mm pilot holes in side of base unit using eyelets as guides
- Secure the cover to the base unit using self-tapping screws (supplied)

Door (7)

- At the base of each door line up the twist fasteners to the twist fastener eyelets and secure in place using two self tapping screws

