


FASST
COMPANY

Installation Instructions

Rear Brake Spring Kit & Clevis

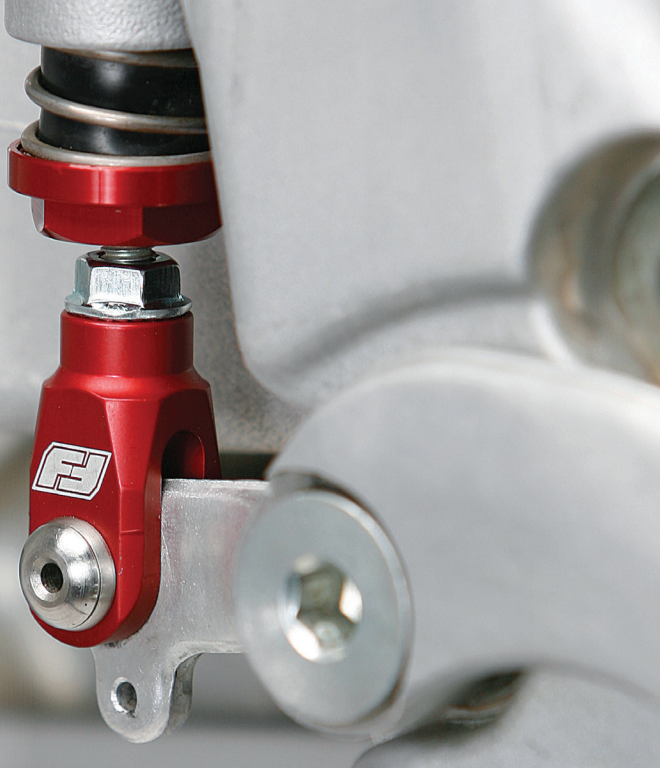



Tools Needed

8MM Allen Wrench

10MM Open End Wrench

Diagonal Pliers

Metric Ruler

Needle Nose Pliers







Rear Brake Spring Kit and Clevis




Use needle nose pliers to remove old stock spring.

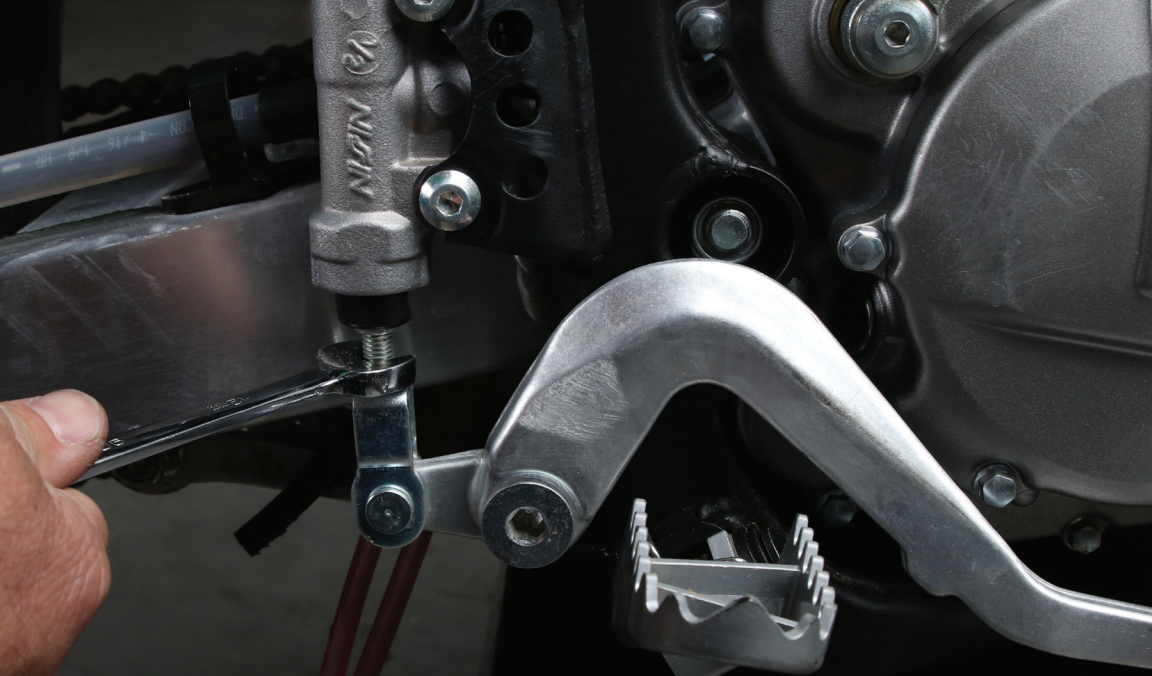

Use 12mm open end wrench to loosen jam nut on stock clevis

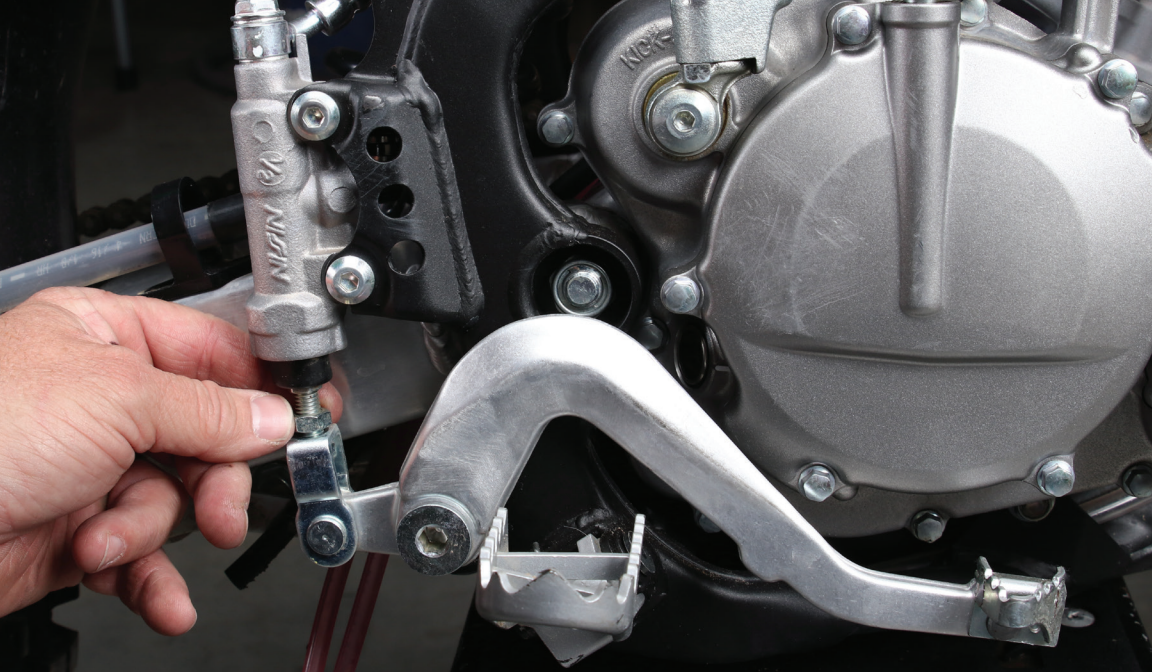

Using your fingers loosen jam nut 3 full turns.

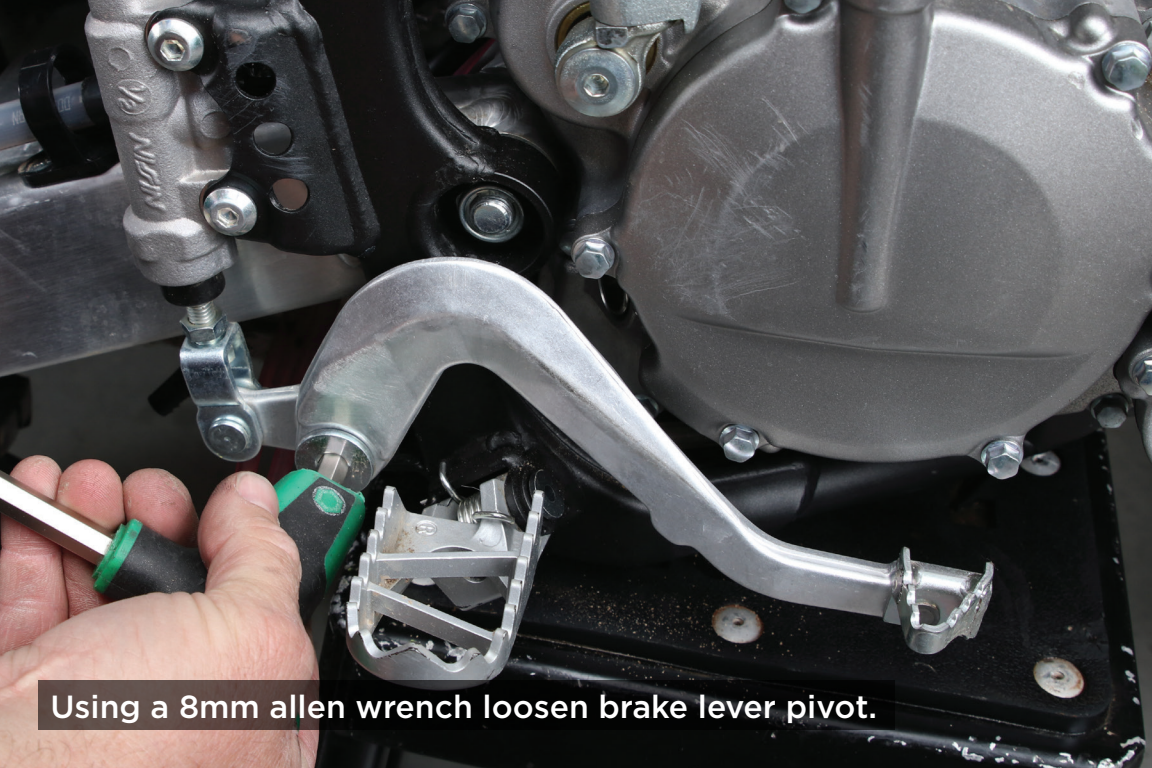

Using a 8mm allen wrench loosen brake lever pivot.




Fully remove brake lever and pivot bolt.




Using needle nose pliers remove cotter pin from stock clevis.



Unscrew stock clevis from bolt.

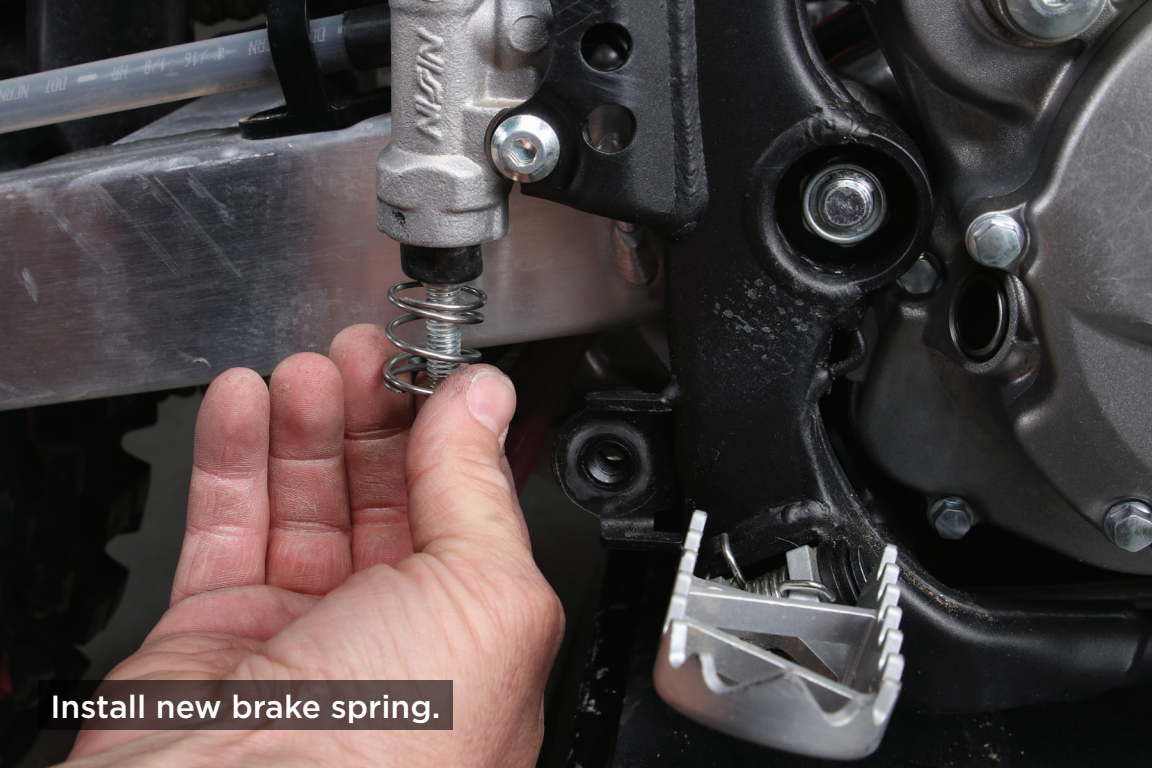

Install new brake spring.

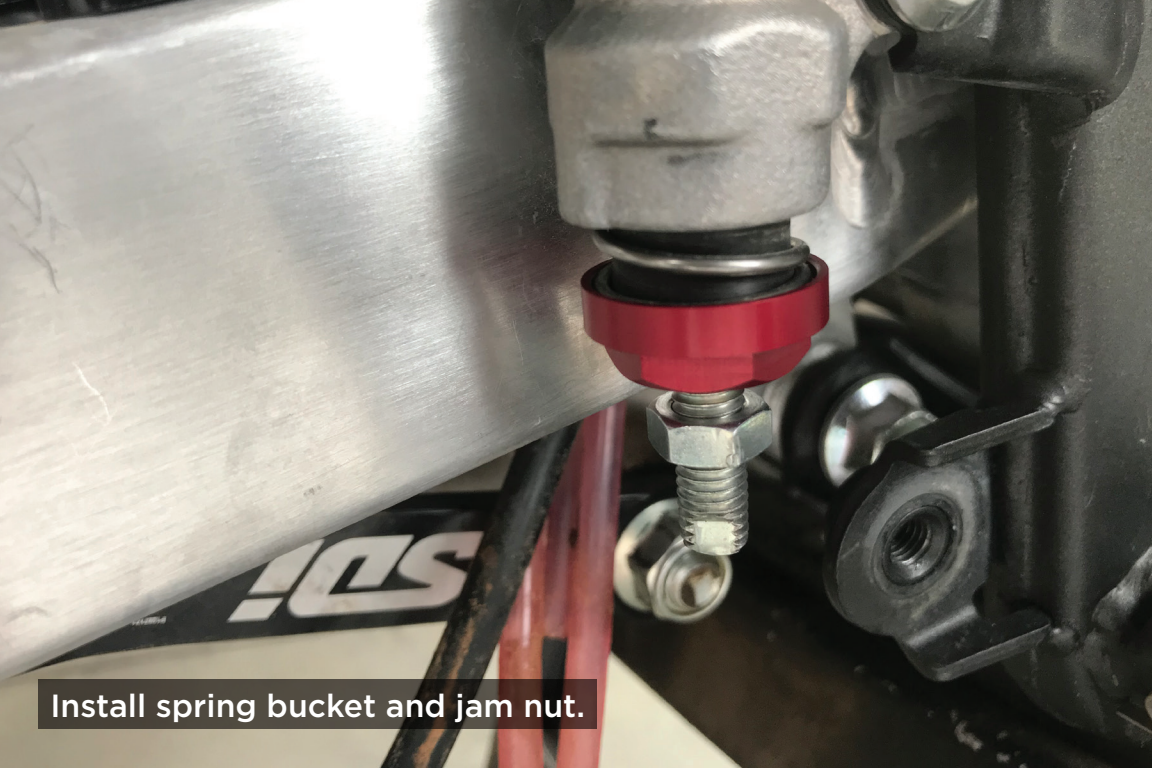

Install spring bucket and jam nut.




Thread on new brake clevis.



Line up pedal, insert pivot pin and install cotter pin.



Reinstall brake pedal pivot bolt.

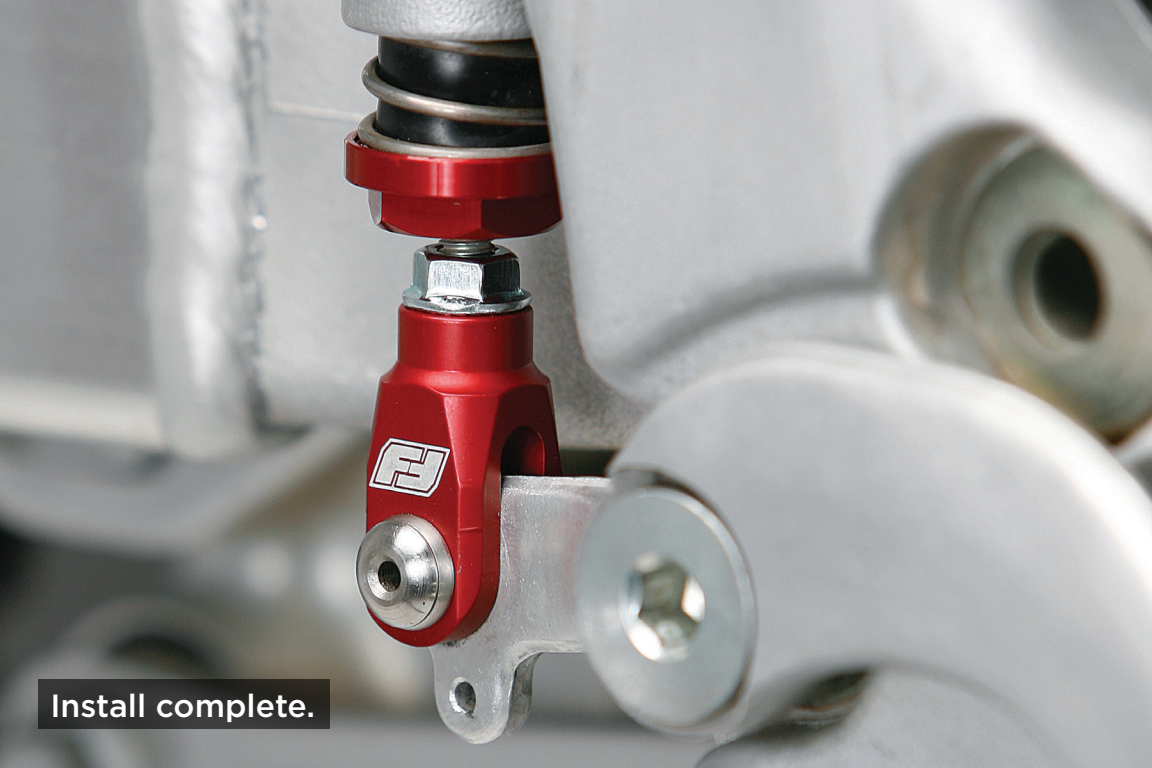

Install complete.



↑
Lower Pedal

Raise Pedal
↓

To adjust pedal preference, thread clevis up or down.