
## **Armstrong**Flooring

# **Installation Instructions Flooring Trims & Accessories**

#### Scotia 15mm

To cover expansion gaps at walls/vertical surfaces.

- · Leave 10mm expansion (as per installation guides).
- Install after floor is laid. Use a multi-tool to ensure correct expansion gap if required.
- Pin/Brad/Glue to wall or vertical surface at A, not to flooring.
- · Can also be used with Laminate Flooring

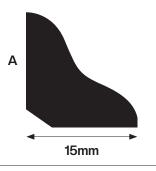

## **Endcap 40mm**

To cover expansion gaps at junctions with carpet/doorways and adjacent to external doorways like sliding aluminium doors.


- · Leave 10mm expansion (as per installation guides).
- Install after floor is laid. Use a multi-tool to ensure correct expansion gap if required.
- · Glue to subfloor with non-foaming polyurethane adhesive at A
- Hold in place with painters tape (and weights where required) for 24 hours – no foot traffic whilst the adhesive cures.



#### T.Mould 45mm

To cover expansion gaps at doorways.

- · Leave 10mm expansion (as per installation guides).
- Install after floor is laid. Use a multi-tool to ensure correct expansion gap if required.
- Glue to subfloor with non-foaming polyurethane adhesive at A
- Hold in place with painters' tape (and weights where required) for 24 hours no foot traffic whilst the adhesive cures.



### Stairnosing 114mm

To professionally finish stairs.

- Step 1: Remove underlay from risers and treads.
- Step 2: Cut riser to finish flush with tread height.
- **Step 3:** Measure and cut trends to finish flush with the Stairnosing, with the tread lock tray under the Stairnosing edge at **C**.
- **Step 3:** Use non-foaming polyurethane adhesive (full coverage) to adhere the riser and tread to the staircase.
- **Step 4:** Use non-foaming polyurethane adhesive (full coverage) to adhere the stairnosing on both **A** and **B** surfaces.
- **Step 5:** Hold in place with painters' tape (and weights where required) for 24 hours no foot traffic whilst the adhesive cures.
- **Step 6:** As the stairs are now fully glued, they can be finished at edges/junctions with a matching caulking compound.

