
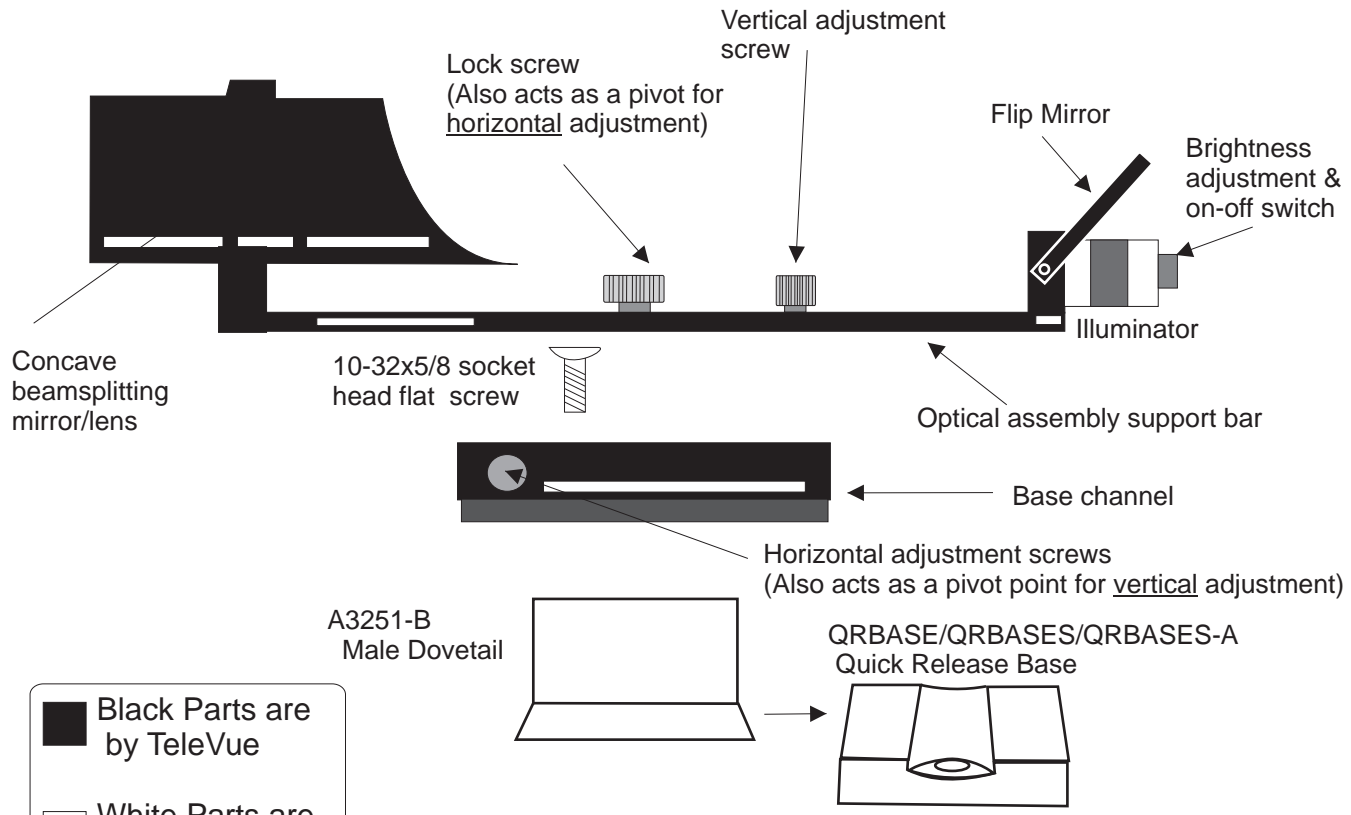


- ### TeleVue StarBeam with Quick Release Base or Sliding Bars
1. Loosen the two horizontal adjustment screws and the lock screw so that the base channel can be removed from the support bar.
  2. Attach the base channel to the Male Dovetail (A3251-B) with the 10-32 x 5/8" socket flat head screw. Tighten securely.
  3. Reassemble the base channel to the support bar.
  4. Now you are ready to use the StarBeam on your telescope. Slip the Male Dovetail (A3251-B) into the Quick Release Base (already attached to your telescope) so that the notch rests against the stop screw of the Quick Release Base. Tighten the two thumbscrews.
  5. Alternative: You can also attach the StarBeam with the Male Dovetail (A3251-B) to either the 7" Sliding Bar (SB0800) to use with the 8" Dovetail or Traveler Accessory Plates (DOVE08, ACPLTR) or 15" Sliding Bar (SB1500) with the 15"

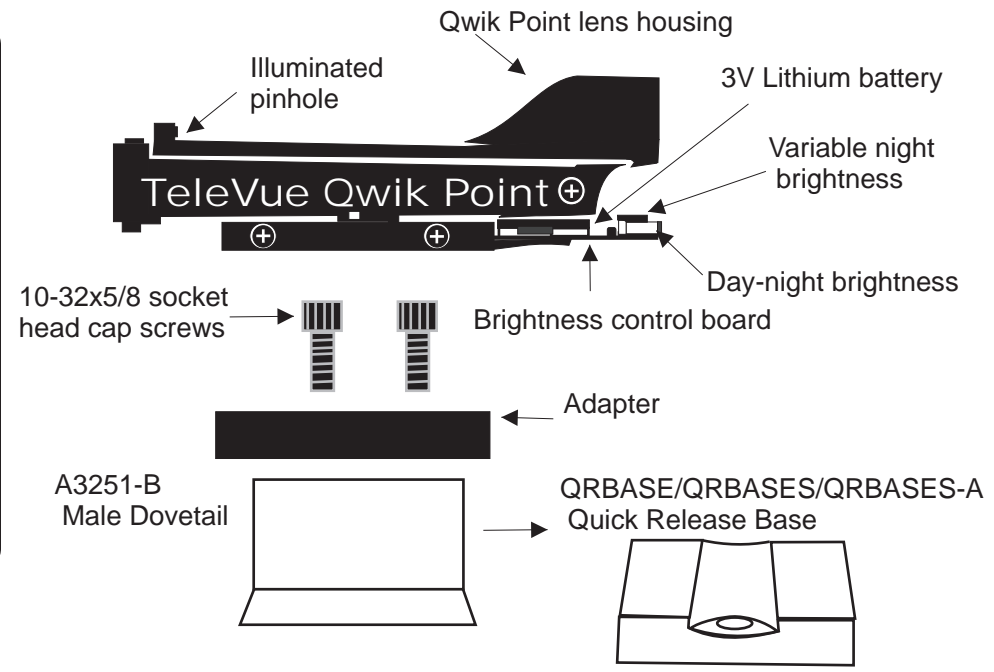

- ### TeleVue Qwik Point with Quick Release Base or Sliding Bars
1. Loosen the two phillips head screws at the side of the Qwik Point unit and remove the adapter.
  2. Attach the adapter to the Male Dovetail (A3251-B) with the two 10-32x5/8" socket head cap screws.
  3. Reassemble the adapter to the Qwik Point.
  4. You are ready to use the Qwik Point on your telescope. Slip the Male Dovetail (A3251-B) plate into the Quick Release Base (already attached to your telescope) so that the notch rests against the stop screw of the Quick Release Base. Tighten the two thumbscrews.
  5. Alternative: You can also attach the Qwik Point with the Male Dovetail (A3251-B) to either the 7" Sliding Bar (SB0800) to use with the 8" Dovetail or Traveler Accessory Plate (DOVE08, ACPLTR) or 15" Sliding Bar (SB1500) with the 15" Dovetail (DOVE15). Use a 1/4-20x3/8" or 1/2" socket head cap screw.

Black Parts are by TeleVue  
 White Parts are by Astro-Physics