





# THE ORIGINAL FLOATING SHOWER BENCH KIT<sup>®</sup>

with Dural<sup>®</sup>


AN ORIGINAL GRANITE BRACKET. PRODUCT

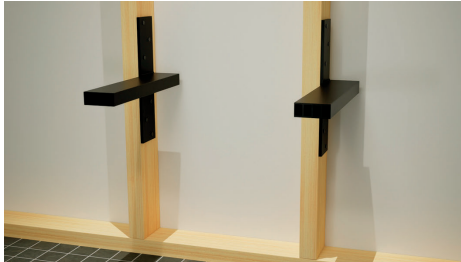


**1. Install brackets at the desired height using the provided hardware. Ensure they are level and securely attached.**

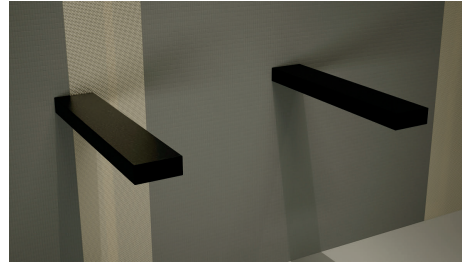

**2. Install preferred backer board to manufacturer specifications.**

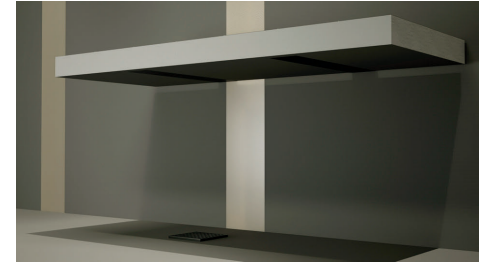

**3. Notch brackets into 1st board. Apply adhesive to the brackets. Set the board onto the brackets.**

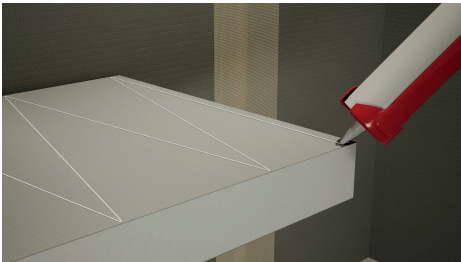

**4. Apply adhesive to the first board.**



**5. Attach the second board to the first board.**



**6. Apply a layer of thin-set and wrap the exposed sides and brackets in provided tape.**



**7. Apply thin-set and your choice of finished product.**

[floatingshowerbench.com](http://floatingshowerbench.com)

