


 **THE ORIGINAL** A DIVISION OF THE ORIGINAL GRANITE BRACKET
FREE FLOATING VANITY KIT®



1. Install brackets at the desired height using the provided hardware. Ensure they are level and securely attached.



2. Apply Dry Wall.

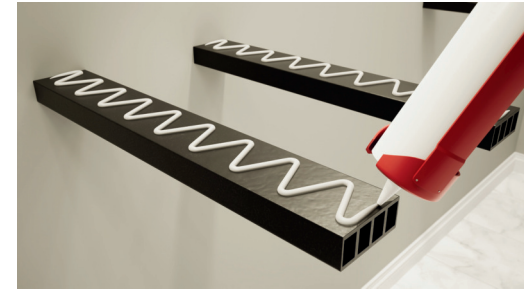

3 Apply adhesive to the brackets, and then set the board.



4. Cut holes for sinks in preferred locations.



5. Glue top of Apron Board and place under top board. Clamp, let dry.



6. Apply a layer of thin-set and your choice of finished product.



7. Enjoy new Vanity.

floatingshowerbench.com



Bench can be cut down to Customized Specifications.