



## THE ORIGINAL CORNER SHOWER SHELF



1. Install backer board according to manufacturer specifications.

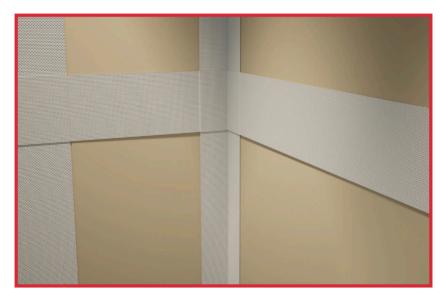

3. Place Corner Shower Shelf in desired location.

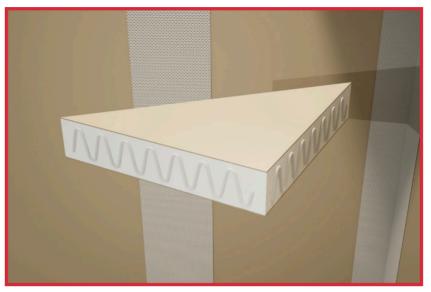

2. Apply adhesive or thinset.



4. Apply thinset and your choice of finished product.