



AN ORIGINAL GRANITE BRACKET™ PRODUCT

THE ORIGINAL FLOATING CORNER BENCH KIT


WITH SCHLUTER® KERDI




1. Install blocking at desired height between pre-existing wall studs. Apply wall board according to manufacturer specifications.



2. Install brackets at desired height using the provided hardware. Ensure they are level and securely attached.

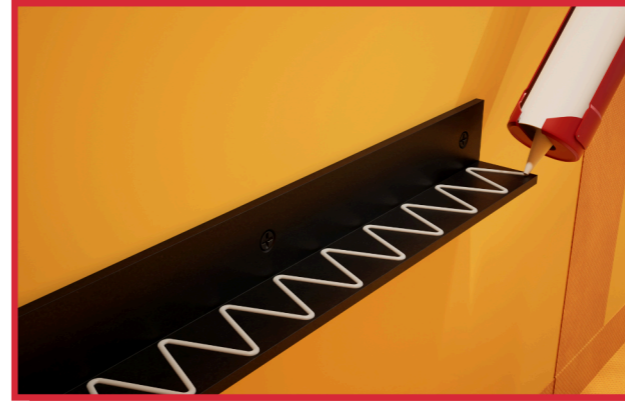

3. Apply Kerdi Fix to the brackets and set the first board onto the brackets.

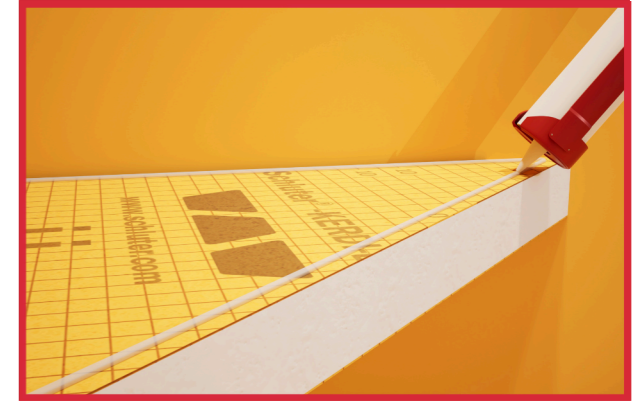

4. Apply Kerdi Fix to the top of the first board.



5. Place the second board on top of the first board with the Kerdi Fix in between both boards.



6. Apply a layer of thin-set then wrap the exposed sides in the provided Kerdi Band.



7. Install your preferred tiling and enjoy!



SCAN HERE FOR MORE SHOWER BENCH KITS



SCAN FOR A HOW TO INSTALL VIDEO GUIDE

ORIGINALGRANITEBRACKET.COM | 888-584-1112

*BENCH CAN BE CUT DOWN TO CUSTOMIZED SPECIFICATIONS.