



AN ORIGINAL GRANITE BRACKET™ PRODUCT

THE ORIGINAL FLOATING SHOWER BENCH KIT


WITH SCHLUTER® KERDI BOARD




1. Install both brackets at the desired height using the provided hardware. Ensure they are level and securely attached.



2. Install preferred backer board to manufacturer specifications. Then apply Kerdi Fix to both brackets.

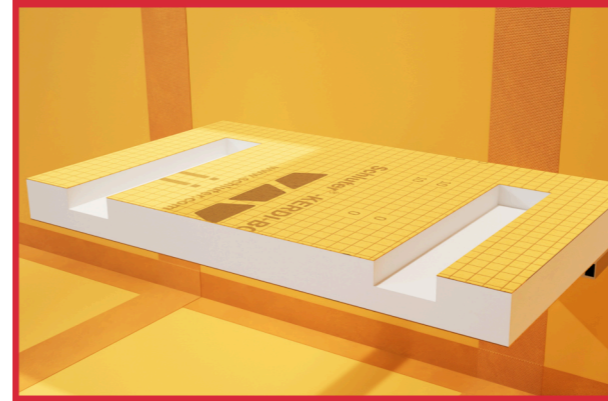


3. Pre cut notches on your first board to fit onto the brackets.

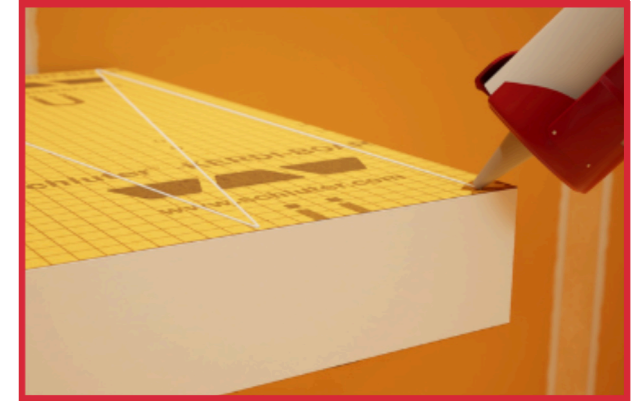

4. Apply Kerdi Fix to the top of the first board.



5. Place the second board on top of the first board with the Kerdi Fix in between both boards.

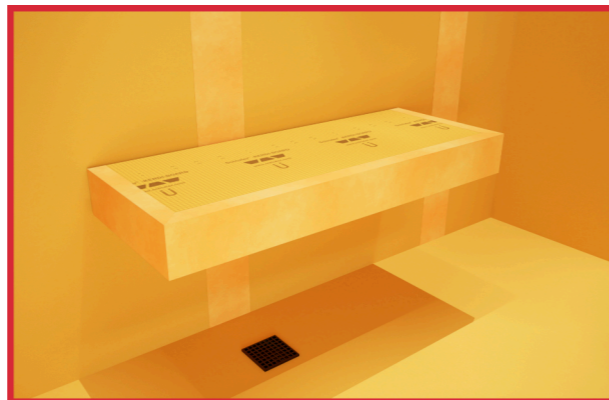

6. Apply a layer of thin-set then wrap the exposed sides in the provided Kerdi Band.



7. Install your preferred tiling and enjoy!



SCAN HERE FOR MORE SHOWER BENCH KITS



SCAN FOR A HOW TO INSTALL VIDEO GUIDE

ORIGINALGRANITEBRACKET.COM | 888-584-1112

*BENCH CAN BE CUT DOWN TO CUSTOMIZED SPECIFICATIONS.