

AN ORIGINAL GRANITE BRACKET. PRODUCT








2. Install preferred backer board to manufacturer specifications. Then apply adhesive to both brackets.

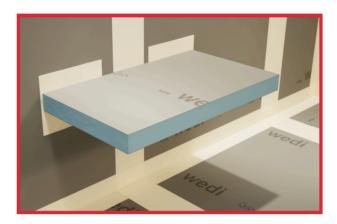

3. Pre cut notches on your first board to fit onto the brackets.

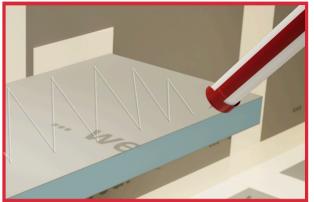

4. Apply adhesive to the top of the first board.



5. Place the second board on top of the first board with the adhesive in between both boards.



6. Apply a layer of thin-set then wrap the exposed sides in the provided tape.



7. Install your preferred tiling and enjoy!



SCAN HERE FOR MORE SHOWER BENCH KITS



SCAN FOR A HOW TO INSTALL VIDEO GUIDE

ORIGINALGRANITEBRACKET.COM | 888-584-1112

*BENCH CAN BE CUT DOWN TO CUSTOMIZED SPECIFICATIONS.