




AN ORIGINAL GRANITE BRACKET™ PRODUCT

THE ORIGINAL SHOWER SHELF

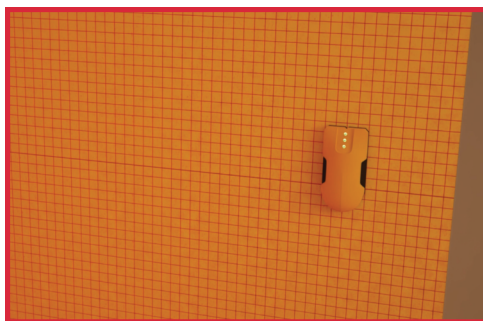


1. Use stud finder to locate studs within your shower wall.

(If necessary install 2x6 blocking between studs)



2. Firmly place the bracket against the wall at your desired height and drill through one of the three mounting holes into the kerdi board panel as well as any blocking or studs on the other side.

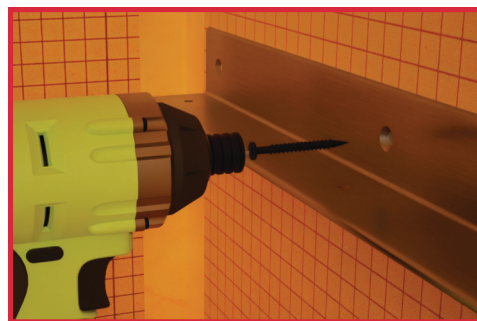

3. Switch to the Phillips bit and fasten one of the provided screws into your pre-drilled pilot hole.



4. Level the bracket and repeat steps 2 and 3 with the other two bracket holes.



5. Fit the notch on your kerdi board to match the width and depth of the bracket.



6. Fasten the remaining provided screws to the under-mount mounting holes of the bracket.

(No need to drill any pilot holes)



7. Wrap the shelf with the Schluter water-proofing wrap & mud the Kerdi-board.



8. Install your preferred tiling and enjoy!



SCAN FOR A
HOW TO INSTALL
VIDEO GUIDE

ORIGINALGRANITEBRACKET.COM | 888-584-1112

*SHELF CAN BE CUT
DOWN TO CUSTOMIZED
SPECIFICATIONS.