



# AN ORIGINAL GRANITE BRACKET™ PRODUCT

## THE ORIGINAL FREE FLOATING VANITY KIT


WITH GO BOARD



**1.** Install brackets at the desired height using the provided hardware. Ensure they are level and securely attached.




**2.** Apply Dry Wall.

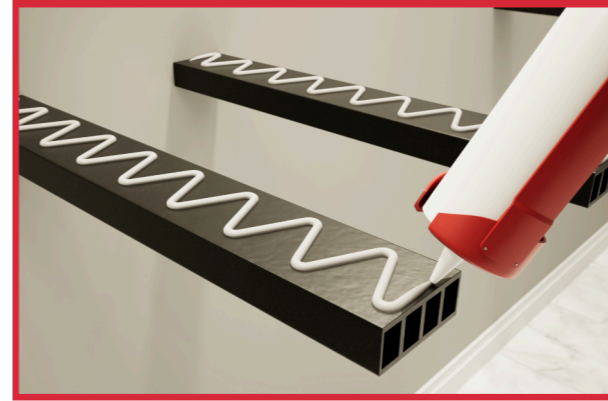

**3.** Apply adhesive to the brackets, and place the board on top.



**4.** Cut holes for sinks in preferred locations.

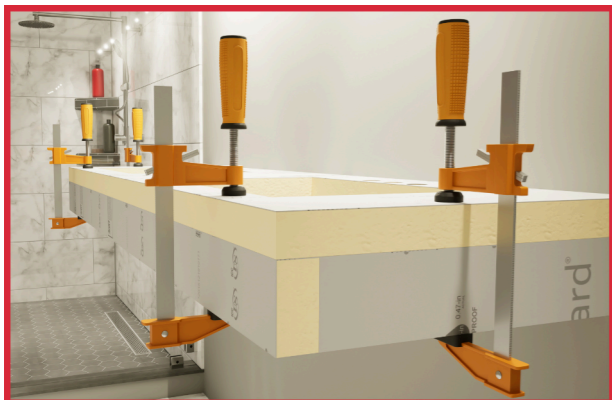

**5.** Glue top of apron board and place under the top board. Clamp, let dry.



**6.** Apply a layer of thin-set and your choice of finished product.



**7.** Enjoy your new Free Floating Vanity!



SCAN HERE FOR MORE  
FREE FLOATING KITS



SCAN FOR OUR  
WIDE VARIETY  
OF PRODUCTS

ORIGINALGRANITEBRACKET.COM | 888-584-1112

\*BENCH CAN BE CUT  
DOWN TO CUSTOMIZED  
SPECIFICATIONS.