



AN ORIGINAL GRANITE BRACKET™ PRODUCT

THE ORIGINAL FREE FLOATING VANITY KIT


WITH SCHLUTER® KERDI



1. Install brackets at the desired height using the provided hardware. Ensure they are level and securely attached.




2. Apply Dry Wall.

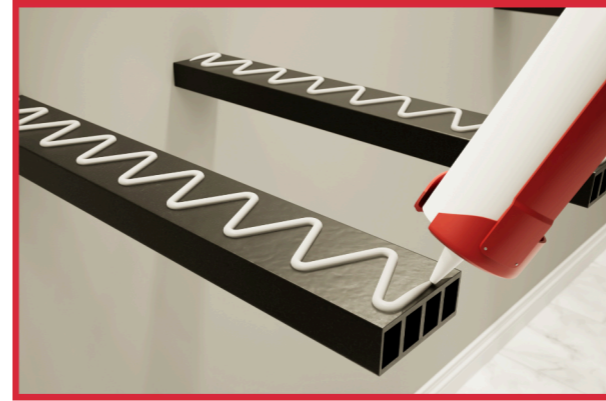

3. Apply Kerdi Fix to the brackets, and place the board on top.



4. Cut holes for sinks in preferred locations.

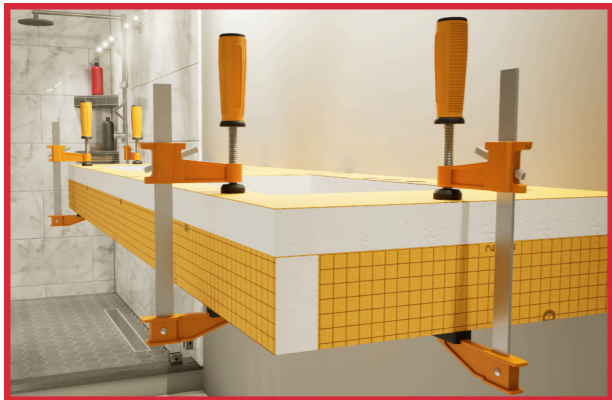

5. Glue top of apron board and place under the top board. Clamp, let dry.



6. Apply a layer of thin-set and your choice of finished product.



7. Enjoy your new Free Floating Vanity!



SCAN HERE FOR MORE
FREE FLOATING KITS



SCAN FOR A
HOW TO INSTALL
VIDEO GUIDE

ORIGINALGRANITEBRACKET.COM | 888-584-1112

*BENCH CAN BE CUT
DOWN TO CUSTOMIZED
SPECIFICATIONS.