

TTLock Smartek Nightlatch Smart Lock - Installation Guide


This shows how to replace a keyed cylinder with a nightlatch smart lock. Most 60mm nightlatch locks are compatible including, Yale, Era, Legge, Union & Asec. Banham locks are not compatible.



1. This shows the existing nightlatch keyed cylinder. This is the part that will be replaced.




2. On the inside of the door, remove the nightlatch. It is usually secured by two screws.

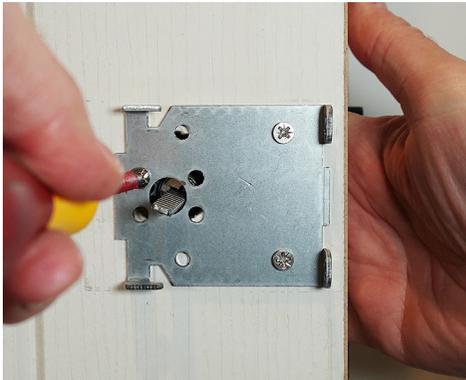

3. Remove the two screws that holds the keyed cylinder in place. Leave the back plate in place. Keep the screws .



4. Remove the keyed cylinder from the door. Keep hold of the ring.

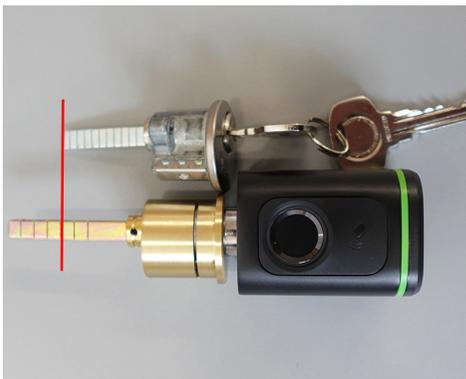

5. Align the keyed cylinder with the lock handle and mark the length of the tail.



6. With a hacksaw, cut the tail to the correct length.



7. Install the existing ring over the brass cylinder.




8. Push the lock handle through the door. TIP: Hold in place with masking tape.



9. Fix the cylinder in place with the 2 existing screws and tighten.



10. Refit the latch on to the backplate.

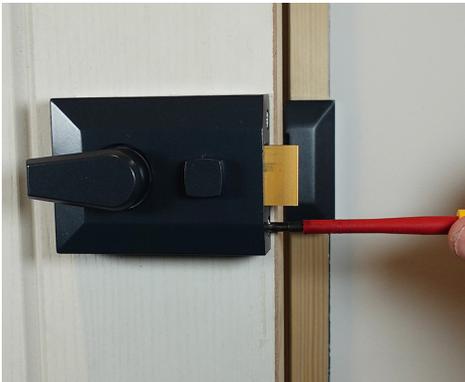

11. Secure the latch using the 2 screws.



12. Installation complete. Rotate 180 degrees so that the sensor faces the floor.

Now go to the User Manual, start at page 6 and follow the instructions. This will explain how to insert a CR123A battery (not included) and how to add the lock to the free TTLock smartphone app.

TIP: If using outdoors we recommend that the fingerprint sensor faces the ground to keep it clean and dry.