


FOLD Hand Towel Dispenser

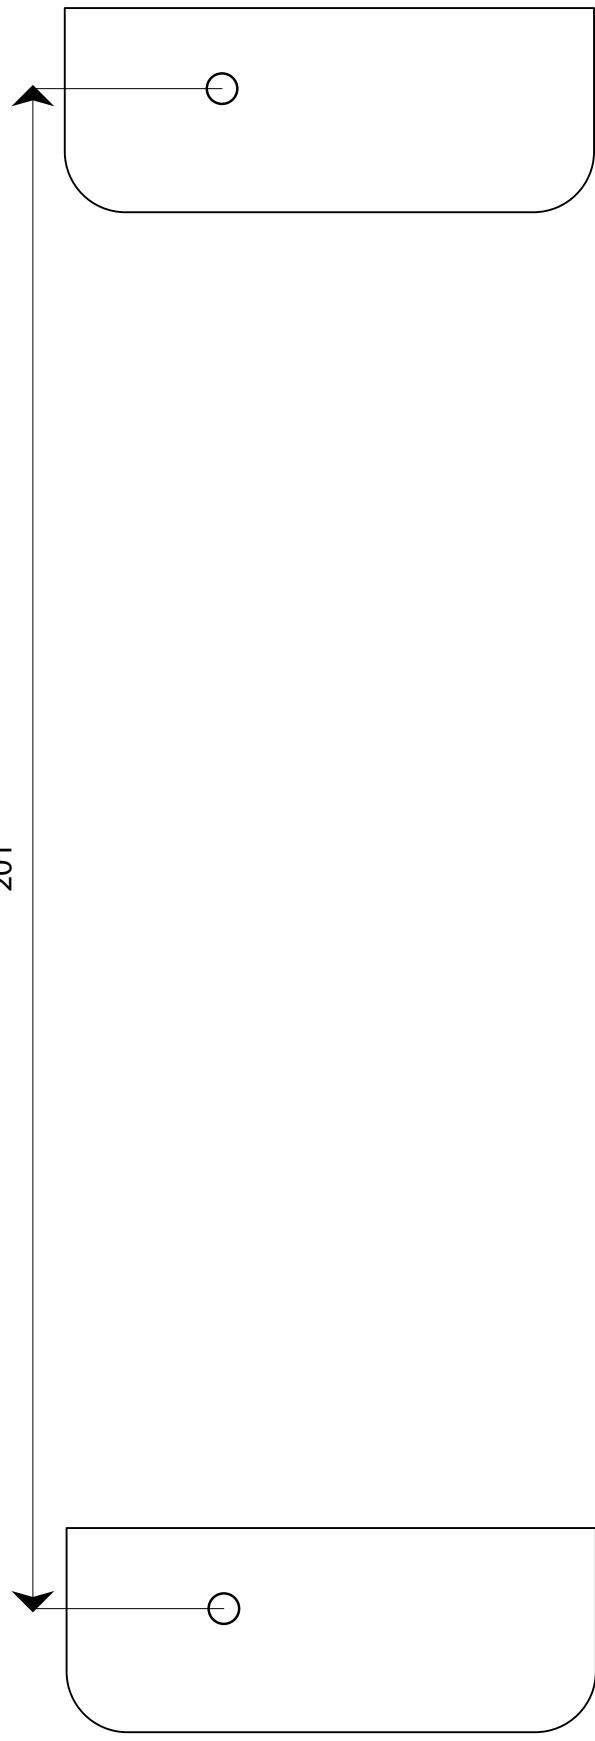

Instructions

1. Print install template at 100% scale or mark holes on a piece of masking tape from the above measurements.
2. Hang on the wall with a small piece of masking tape making sure it's level.
3. Drill pilot holes where marked. Use gib or concrete wall toggles if needed.
4. Screw provided screws almost all the way in, leaving 2mm gap so the steel can slot in sturdily.
5. Remove template before installing the hardware.
6. A little silicone can be added to the back for a stronger fix.

GIB Installation tips

If no stud or nog is in the wall, tile wall toggles are suitable to use.

Tile & concrete installation tips

A diamond drill tip should be used to prevent tile cracking during installation.
If no stud or nog is in the wall, tile wall toggles are suitable to use.

*Please double check all measurements before beginning installation as variations between batches can occur.

Scale 1:1

Variations in measurements can occur between batches
Made of Tomorrow takes no responsibility for any damages made during installation or future
damages due to incorrect fixing. All Rights Reserved.



Made of Tomorrow is the home of
functional homeware, designer accessories
and office goods made for everyday life.
Designed and made in New Zealand from
sustainable and recyclable materials.