

YOU WILL NEED

Mixture of distilled water + green soap




Disinfectant spray




STANDSTILL medical adhesive spray



Inkjet printer

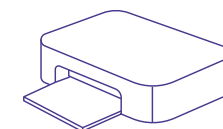


PRINTING

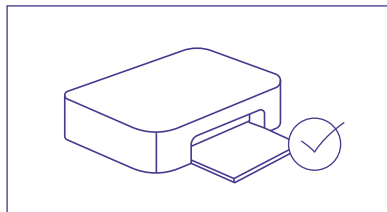


Printers with a front-loading tray (bottom feed) work best.




Any desired color within the CMYK range can be used for printing.

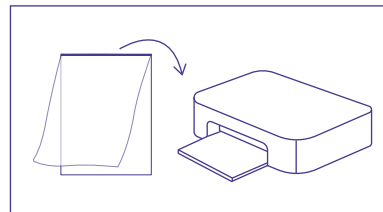

The printer should feed the sheet from the sealed (closed) edge.

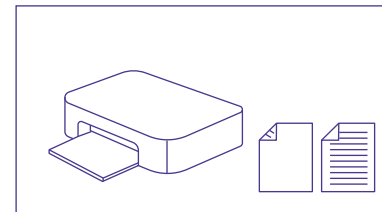

When inserting the STANDSTILL transfer film into the printer, make sure the correct side is facing up.

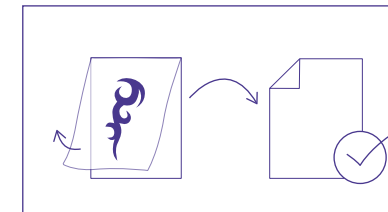

The remaining backing paper can be used as regular copy paper.

APPLYING



1. **PREPARE** and clean the skin with disinfectant spray.




2. **APPLY** the STANDSTILL medical adhesive spray generously and let it dry for a few seconds until it feels tacky, not wet. Reapply if needed. Position your concept gently on the skin.



3. **ACTIVATE** the film by lightly misting it with disinfectant spray from a greater distance to make it more flexible. Make sure to use a very fine spray nozzle.



4. **CHECK** the film with your fingertips – it should feel soft and flexible, and should no longer appear shiny.

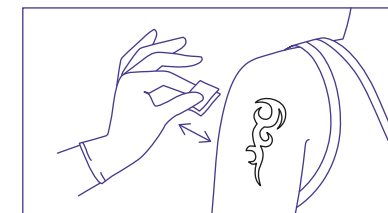

5. Always **dab** the excess ink — never wipe it away. Start with dotwork or at least midtone black for lines to get a feel for the film.


REMOVING



1. **WET** a paper towel with a mixture of distilled water and green soap.



2. **SOAK** the transfer film with the wet paper towel for 5 seconds or more.

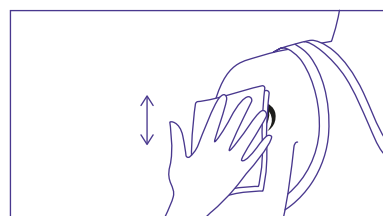

3. **WIPE** off the film with firm yet gentle strokes.



4. **APPLY** some skin oil if the skin still feels sticky.



5. **ADMIRE** your wonderful result.

DAS BRAUCHST DU

Mischung aus destilliertem Wasser + grüner Seife




Desinfektionsspray




STANDSTILL medizinisches Haftspray



Inkjet Drucker




DRUCKEN

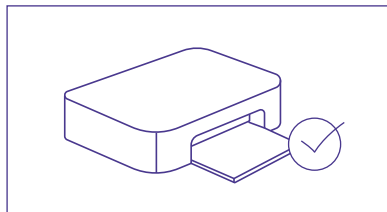


Drucker mit Frontladefach (unterer Papiereinzug) funktionieren am zuverlässigsten.




Jede gewünschte Farbe im CMYK-Farbraum kann für den Druck verwendet werden.

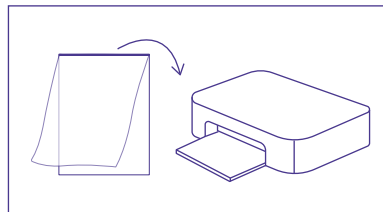

Der Drucker sollte das Blatt von der versiegelten (geschlossenen) Kante einziehen.

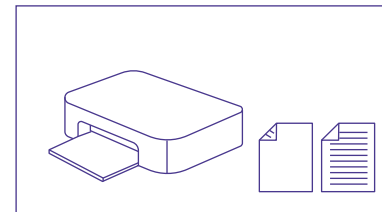

Beim Einlegen der STANDSTILL Transferfolie darauf achten, dass die richtige Seite nach oben zeigt.

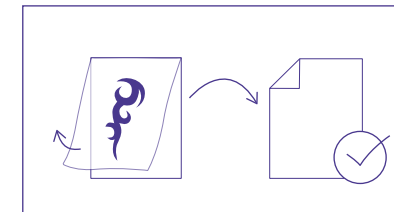

Das übrig gebliebene Trägerpapier kann als normales Kopierpapier verwendet werden.

ANBRINGEN



1. **BEREITE** die Haut vor und reinige sie mit Desinfektionsspray.




2. **TRAGE** das STANDSTILL Haftspray großzügig auf und lass es ein paar Sekunden antrocknen. Bei Bedarf erneut auftragen. Platziere nun die Folie sanft auf der Haut.



3. **AKTIVIERE** die Folie, indem du sie aus größerer Entfernung leicht mit Desinfektionsspray benebelst – das macht sie flexibler. Achte darauf, einen sehr feinen Sprühkopf zu verwenden.



4. **ÜBERPRÜFE** die Folie mit den Fingerspitzen – sie sollte sich weich und flexibel anfühlen und nicht mehr glänzen.

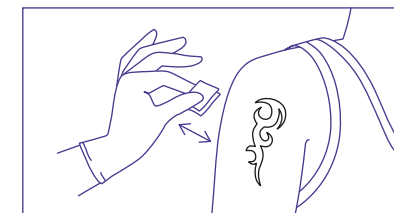


5. Tupfe überschüssige Tinte immer nur ab – niemals wischen. Starte mit Dotwork oder zumindest mit Midtone Black, um ein Gefühl für die Folie zu bekommen.


ENTFERNEN



1. **BEFEUCHTE** ein Papiertuch mit einer Mischung aus destilliertem Wasser und grüner Seife.

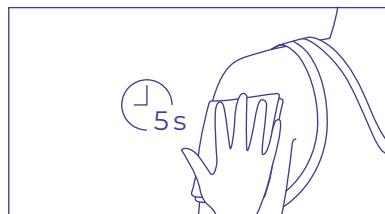

2. **WEICHE** die Transferfolie für 5 Sekunden mit dem feuchten Papiertuch ein.

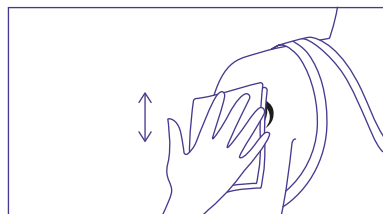

3. **WISCHE** die Folie mit festen, aber sanften Bewegungen ab.



4. **TRAGE** etwas Hautöl auf, falls sich die Haut noch klebrig anfühlt.



5. **BEWUNDERE** dein großartiges Ergebnis.