



25' X 25' DOUBLE GARAGE METAL BARN SHED

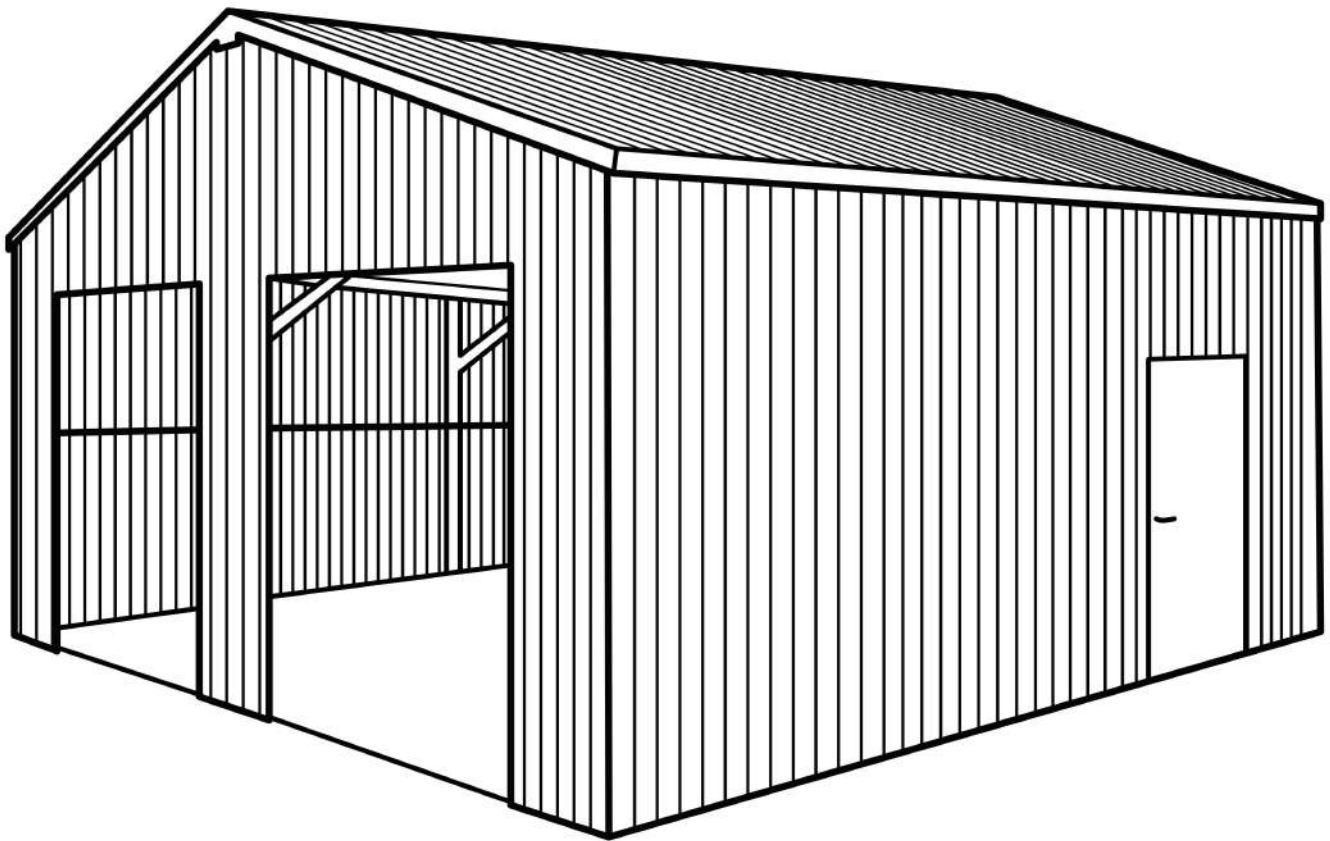

⚠️ WARNING

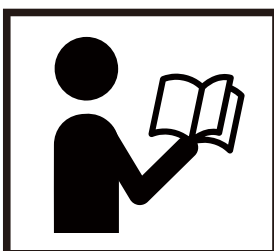

This structure is intended for temporary outdoor storage use only. It is not designed to withstand heavy snow and wind loads and does not come with engineering drawings. To ensure suitability for your specific weather needs, it is your responsibility to verify their appropriateness for your intended use and local weather conditions, especially in areas prone to severe weather.

- Please read and understand the product manual completely before assembly
- Check against the parts list to make sure all parts are received
- Wear proper safety goggles or other protective gears while in assembly
- Do not return the product to dealer. They are not equipped to handle your requests.

Missing parts or have questions on assembly?
Please call: 1-877-761-2819 or email: cs@tmgindustrial.com

Important tips

Dear user:

Hello!

In order to offer you a better use experience, we recommend that after the installation of the product, you shall carry out anti-rust protection treatment for the cutting end directly exposed to the air, the paint scratch and the surface zinc layer damage caused during the installation process. Due to the limitation of shipping conditions, we cannot provide you with flammable and explosive products such as antirust paint or antirust oil. Please purchase them locally or contact the dealer. After antirust treatment, the service life of the product can be effectively extended.









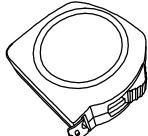

Manufacturer
January 2023

CONTENTS

1. Before You Start	4
2. Option 1 Concrete Pad Layout	5
3. Option 2 Concrete Footing Layout MS2525.....	6
4. Part List.....	7-12
5. Analysis Diagram.....	13-14
6. Installation Of Framework.....	15-31
7. Installation Of Wall Tile.....	32-41
8. Installation Of Side Door	42
9. Installation Of Roller Door (Needs to be purchased separately).....	45
10. Installation Of Framework.....	50
11. Installation Of Transparent Panel.....	52

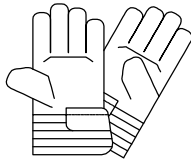BEFORE YOU START

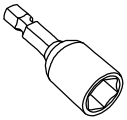Items Required:

Tools					
	gloves	Safety Glasses	Shoes	Riveting Gun	Sleeve
Tools					
	Power drill	Screw driver	Pencil	Tape Measure	Ladder




- Clear a working area to allow access on 4 sides. A raised work surface will make assembly easier.
- Please choose a dry and calm day to start assembly. Do not attempt installation in rainy or windy day.
- Keep roof clear of leaves and snow with long handled, soft-bristled broom. Heavy amounts to snow on roof can damage building, making it unsafe to enter.
- All parts are identified so when working through the instructions page by page the diagrams show where each part is positioned.
- Before starting, to avoid any accidental injury, we recommend the use of gloves to protect your hands, safety glasses to protect your eyes and shoes or boots to protect your feet.
- Please keep children away from your construction site.
- Most assembly can be completed by one person, assistance may be needed when you reach the erection stage.
- Cleaning should be performed as often as is required to remove any dirt, salt, and pollutants.
- Please note: Some local government authorities have rules & regulations on shed installation and you may need approval to erect this shed.

STEPS:


1. When completed place shed in position and anchor securely to the ground.
2. Clean up all metal pieces, rivets and screws.

Unit:mm


Depth of cement

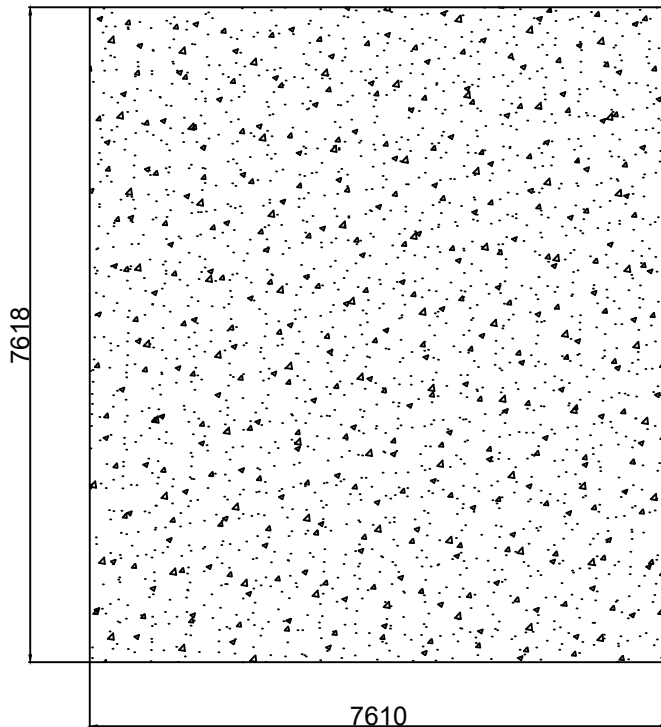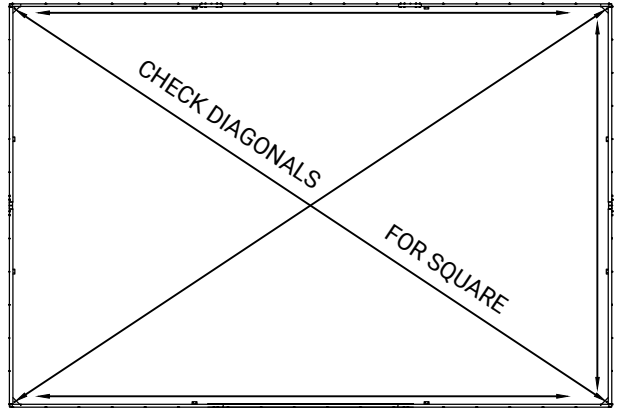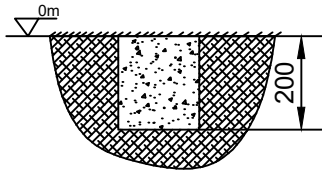

















Depth of cement

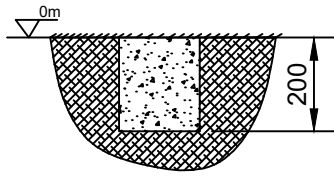





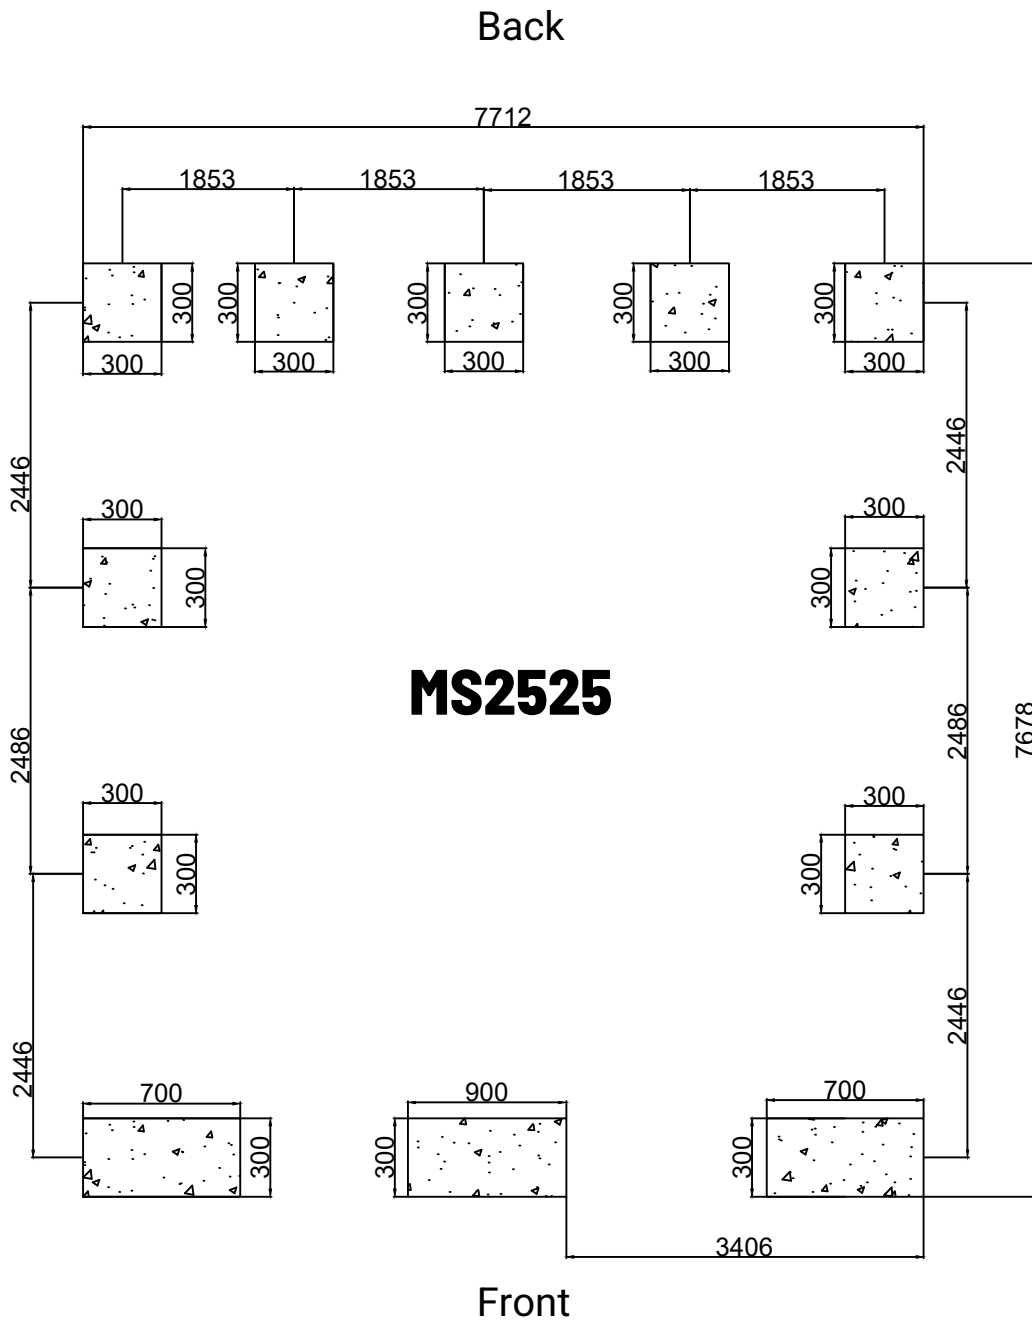











Note: the ground anchor is installed on the cement block.


















PART LIST

Part No.	Picture	Specification	Qty
1		1550*880mm	38
2		1550*880mm	1
3		1550*880mm	4
4		1550*880mm	1
5		1390*880mm	9
6		1390*880mm	1
7		1050*880mm	1
8		1050*300mm	1
9		1830*880mm	18
10		2180*880mm	18
11		1972*880mm	1
12		1550*710mm	2
13		1390*710mm	2
14		432*880mm	1
15		656*880mm	1
16		880*880mm	1

















PART LIST

Part No.	Picture	Specification	Qty
17		1104*880mm	1
18		1210*880mm	1
19		1104*880mm	1
20		880*880mm	1
21		656*880mm	1
22		432*880mm	1
23		692*880mm	1
24		916*880mm	1
25		1140*880mm	1
26		1364*880mm	1
27		1470*880mm	1
28		1364*880mm	1
29		1140*880mm	1
30		916*880mm	1
31		692*880mm	1
32		2968mm	4

















PART LIST

Part No.	Picture	Specification	Qty
33		2900mm	16
34		2090mm	4
35		1370mm	2
36		1890mm	2
37		2862mm	2
38		1851mm	14
39		2420mm	11
40		2484mm	6
41		773mm	1
42		719mm	1
43		924mm	1
44		502mm	4
45		369mm	4
46		1852mm	4
47		1900mm	12
48		1751mm	2









PART LIST

Part No.	Picture	Specification	Qty
49		876mm	4
50		1000mm	8
51		1000mm	8
52		1924mm	8
53		1918mm	16
54		1500mm	8
55		600mm	16
56		2484mm	30
57		200mm	38
58		800mm	6
59		877mm	9
60		2010mm	16
61		828mm	2
62		1920mm	1
63		1920mm	1
64		876mm	1


PART LIST

Part No.	Picture	Specification	Qty
65		1196mm	2
66		2619mm	4
67		2780mm	2
68		2025mm	2
69		932mm	1
70		1996mm	2
C72		50*40*39	21
S12		M5*20	2830
S13		M5*50	15
C20		155*18*24	4
M35		35*0.5	2
C12		75*75*25	4
L3		Ø15*9.2	20
L1A		28*24*16.5	6
S5		Ø11*1.5	20
S3		M5*12	28


PART LIST

Part No.	Picture	Specification	Qty
H13		172*57	1
SH1		63*43	2
S7		Ø3.2*11	24
S11		M8*80	21
C14		40*40*40	60
C73		140*150	14
LOGO		295*190	2
UV3		50	2

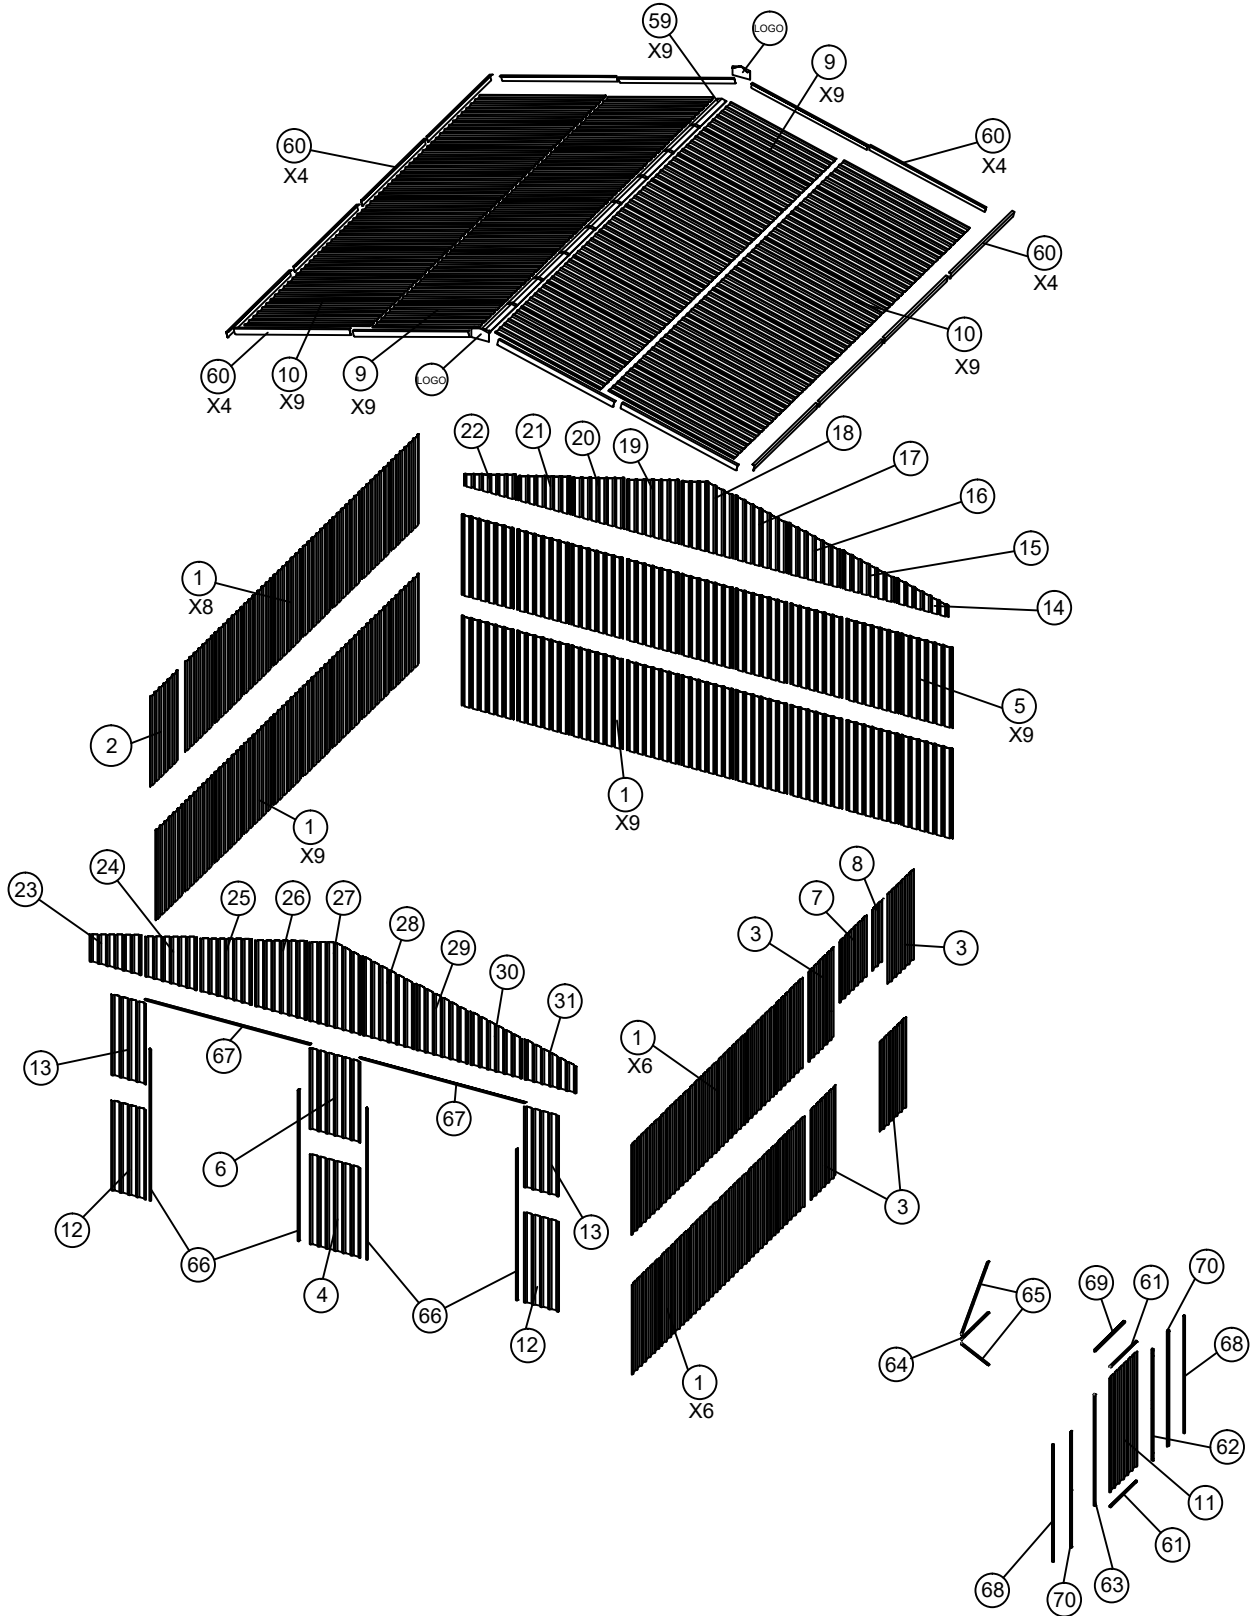

ANALYSIS DIAGRAM

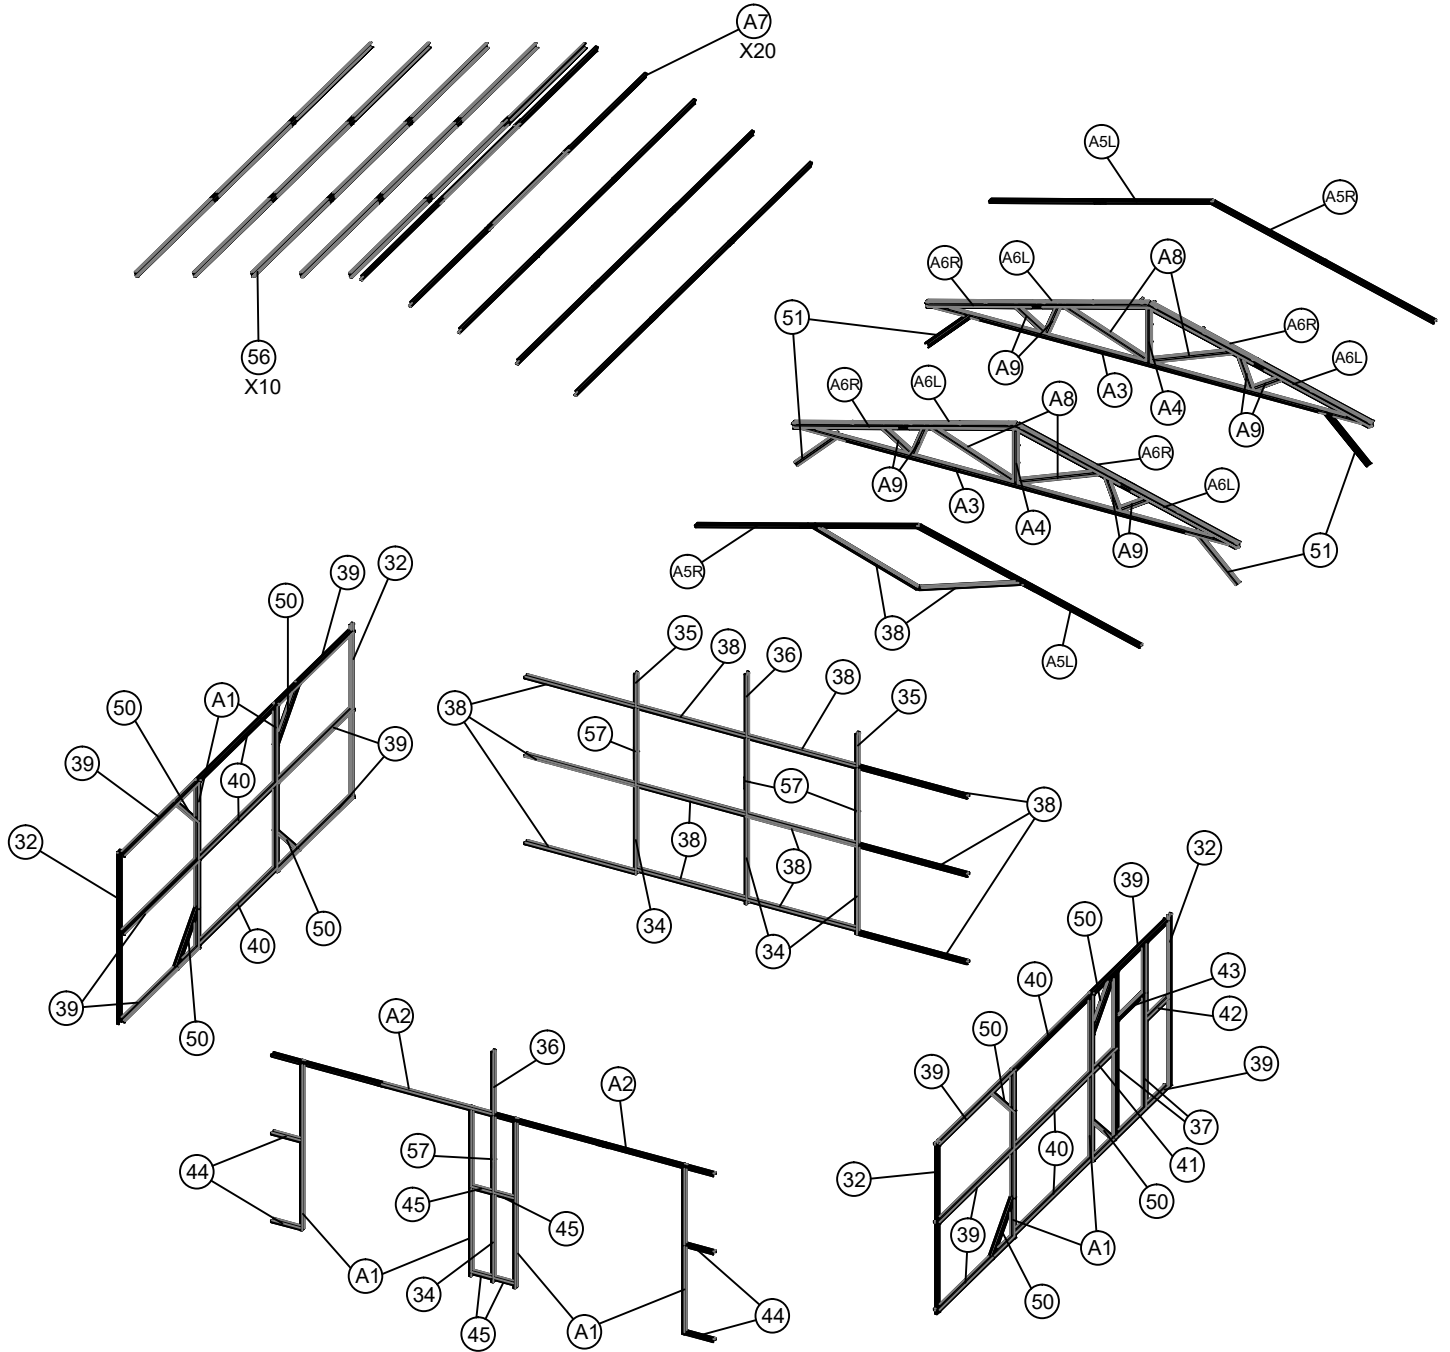


ANALYSIS DIAGRAM






INSTALLATION OF FRAMEWORK

PART	NO.	Qty	PART	NO.	Qty
	33	2		S12	16

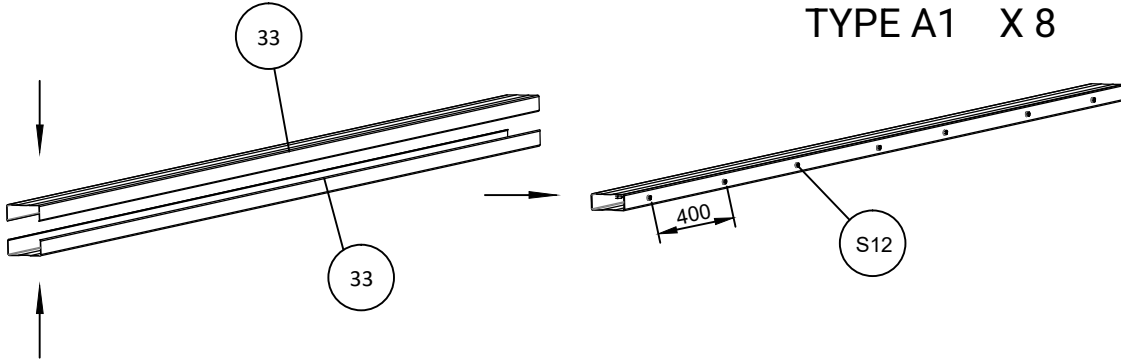X 8




TIPS: Use labels to mark installed components for easy access.





PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty
	46	2		57	1		S12	8

X 2

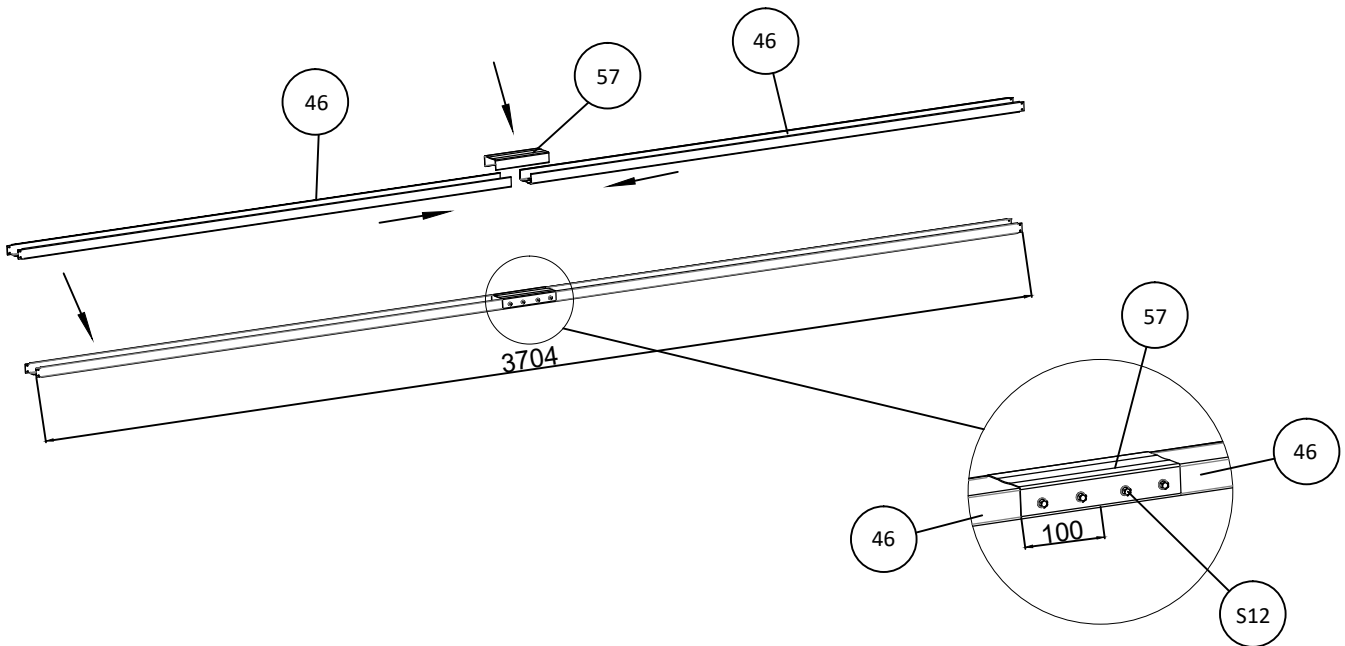TYPE A2 X 2






INSTALLATION OF FRAMEWORK

PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty
	47	6		48	1		49	2		S12	38

X 2


TYPE A3 X 2

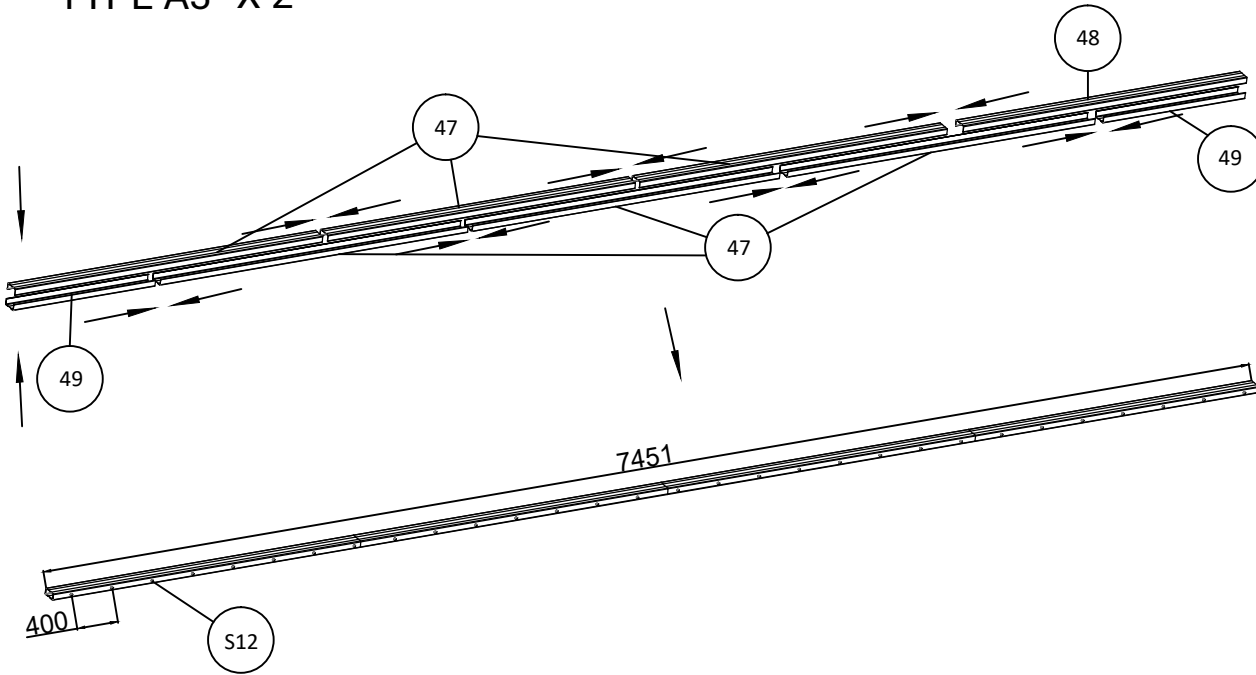





PART	NO.	Qty	PART	NO.	Qty
	51	2		S12	8

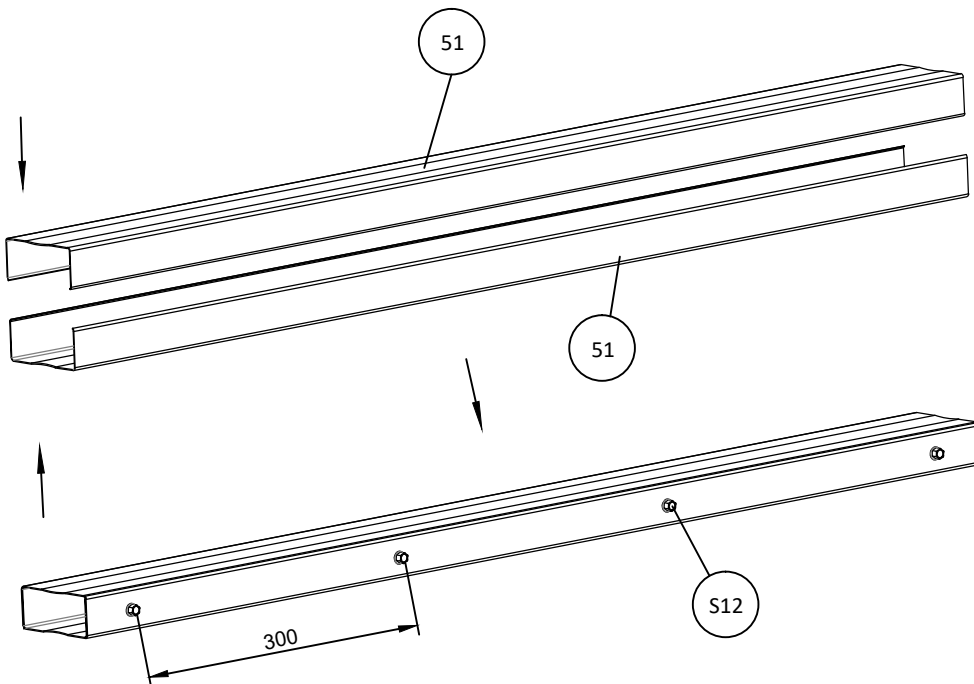X2


TYPE A4 X 2







INSTALLATION OF FRAMEWORK

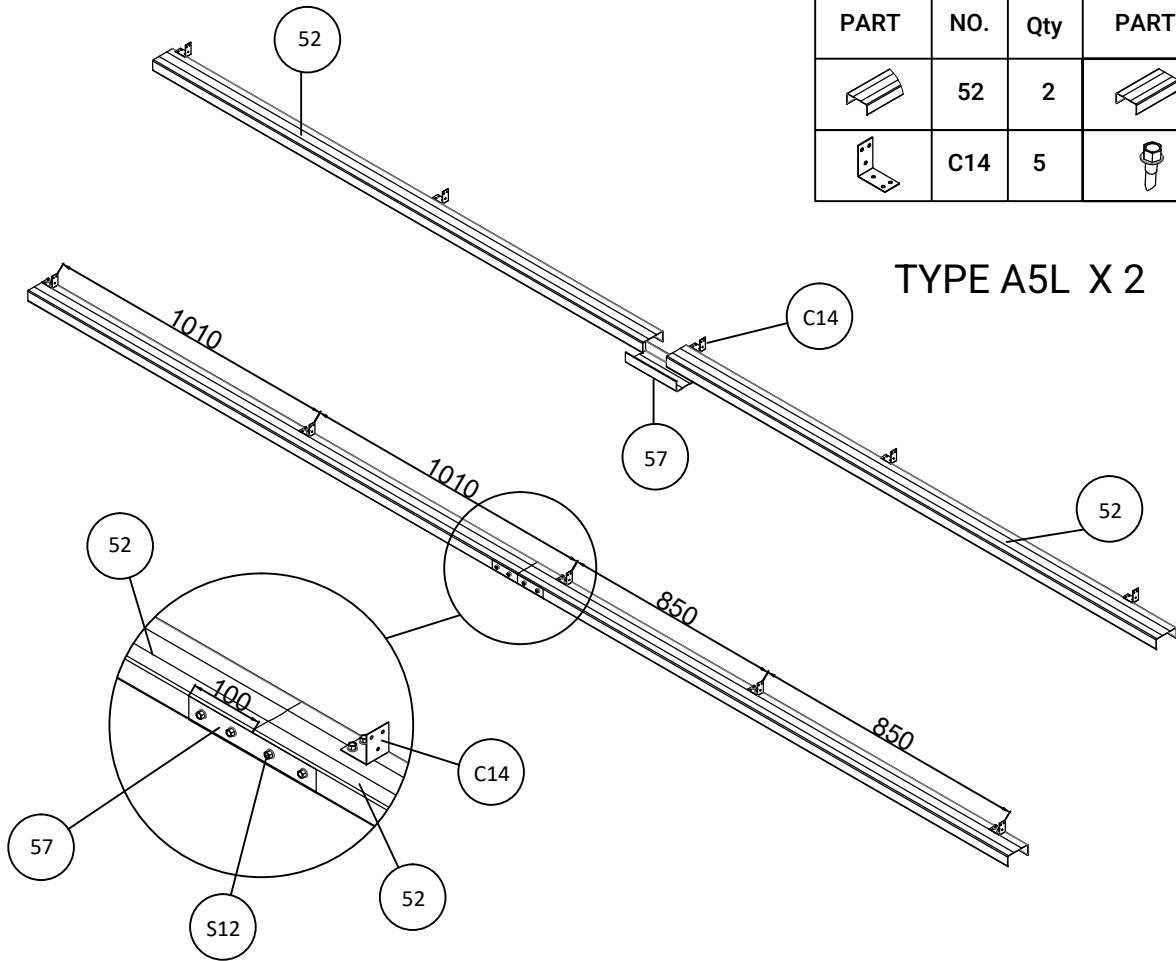PART	NO.	Qty	PART	NO.	Qty
	52	2		57	1
	C14	5		S12	23


X 2







PART	NO.	Qty	PART	NO.	Qty
	52	2		57	1
	C14	5		S12	23

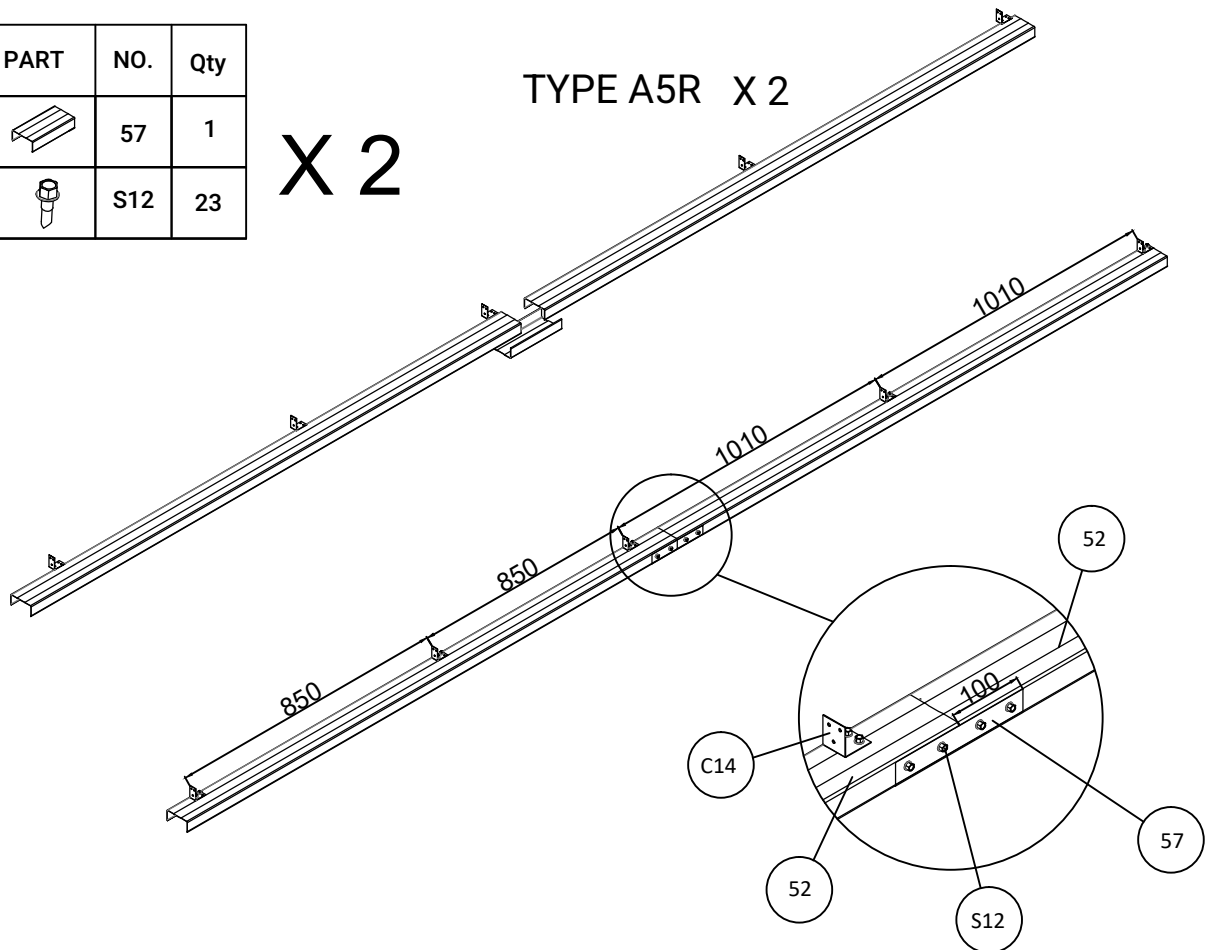X 2


TYPE A5R X 2







INSTALLATION OF FRAMEWORK

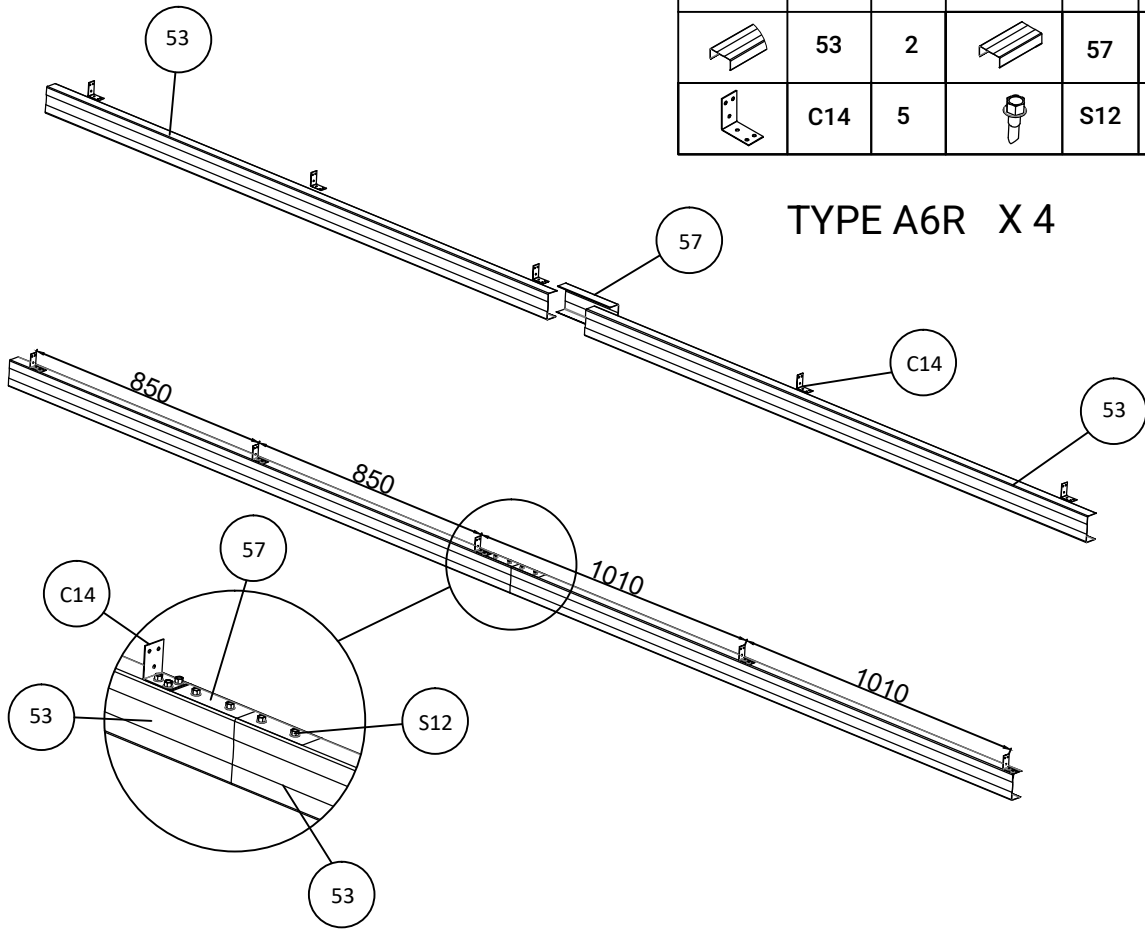PART	NO.	Qty	PART	NO.	Qty
	53	2		57	1
	C14	5		S12	23

X 4




TYPE A6R X 4




PART	NO.	Qty	PART	NO.	Qty
	53	2		57	1
	C14	5		S12	23

X 4

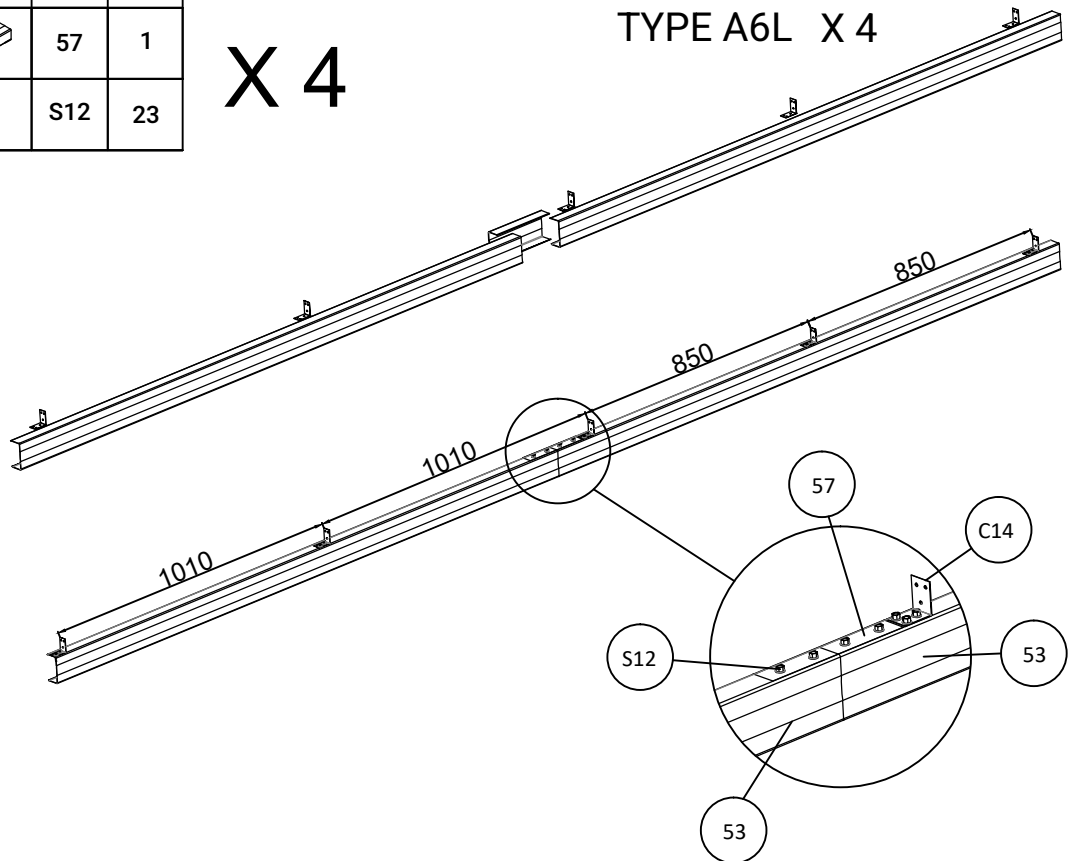TYPE A6L X 4






INSTALLATION OF FRAMEWORK

PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty
	56	1		57	1		S12	4

X 20

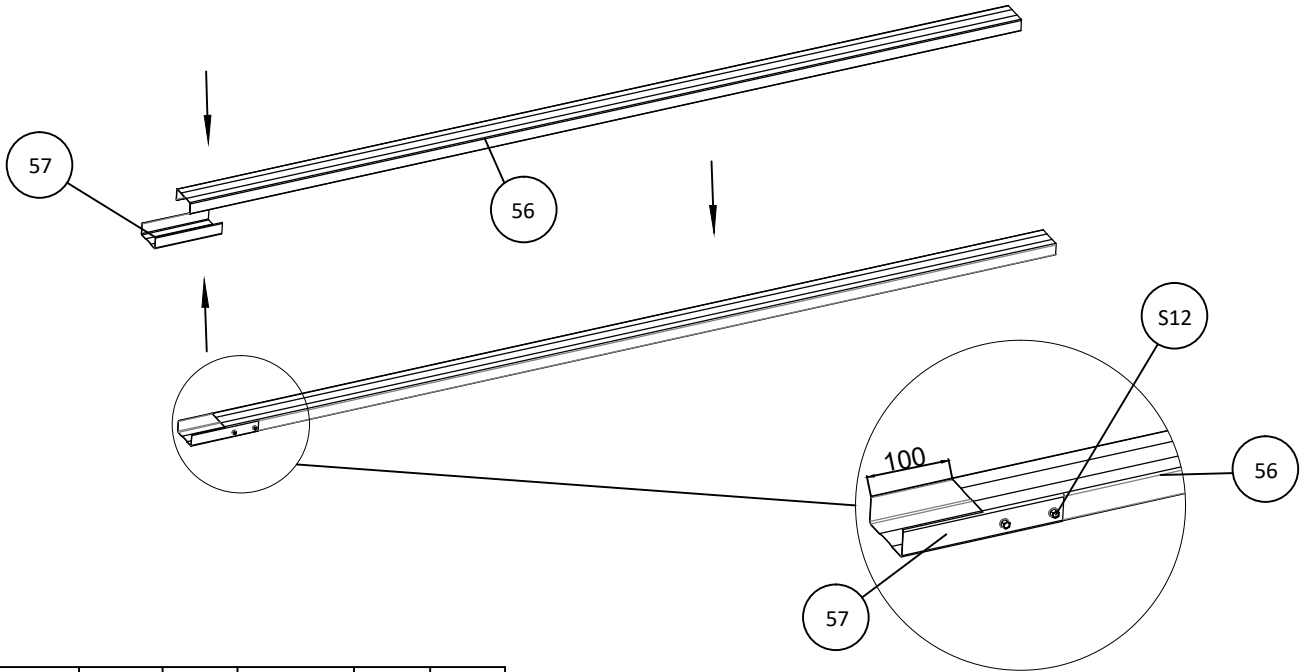
TYPE A7 X 20





PART	NO.	Qty	PART	NO.	Qty
	54	2		S12	12

X 4

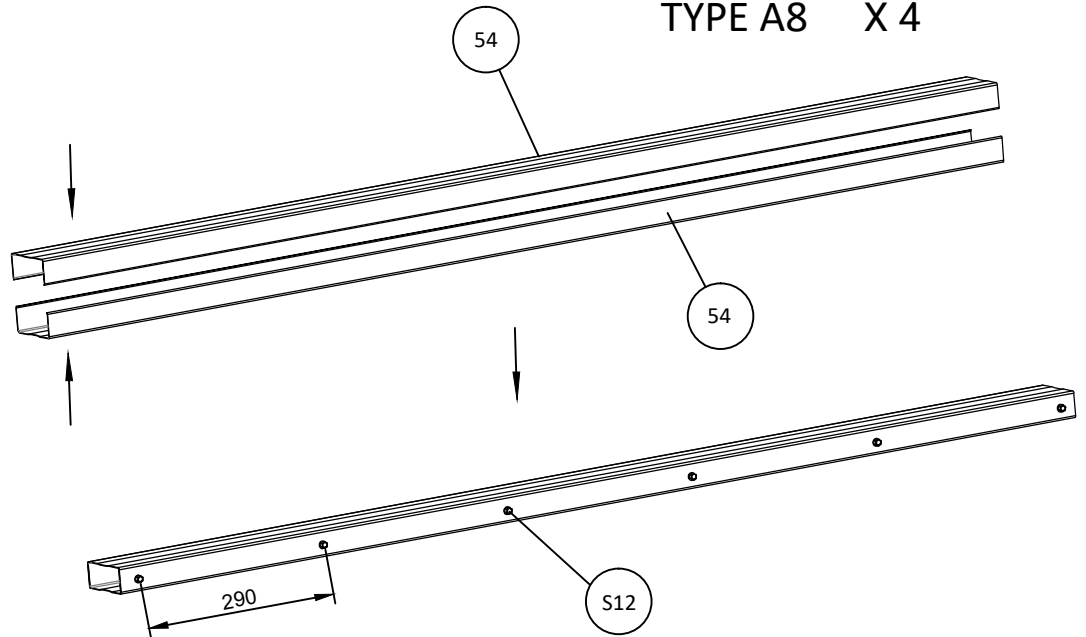TYPE A8 X 4




INSTALLATION OF FRAMEWORK

PART	NO.	Qty	PART	NO.	Qty
	55	2		S12	6






X 8

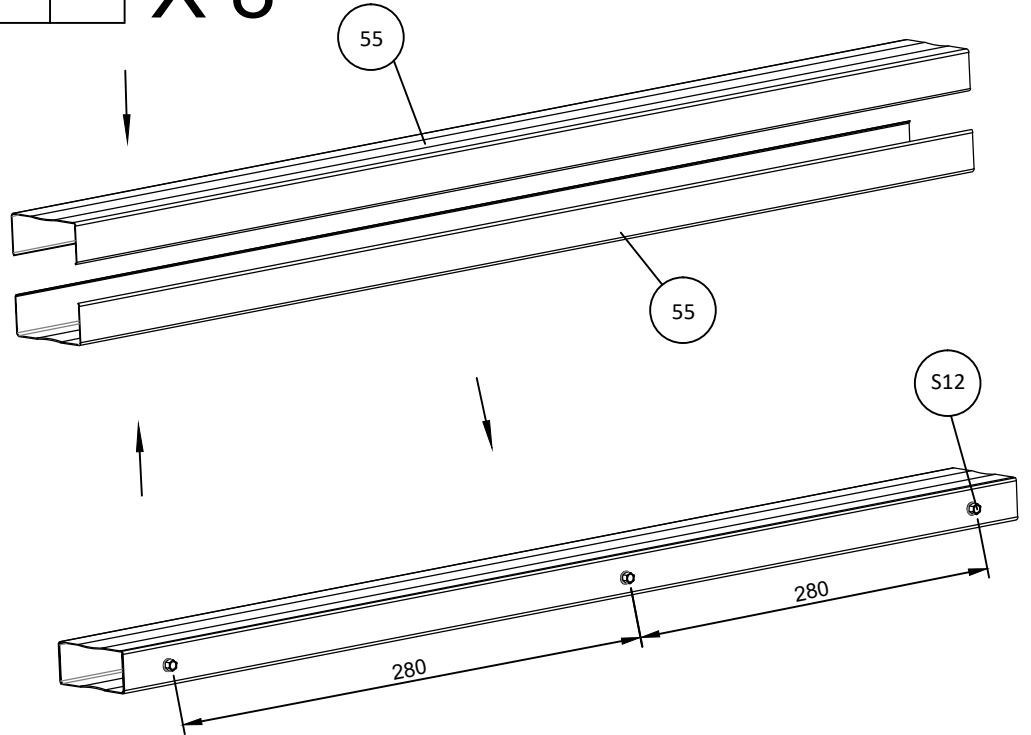
TYPE A9 X 8







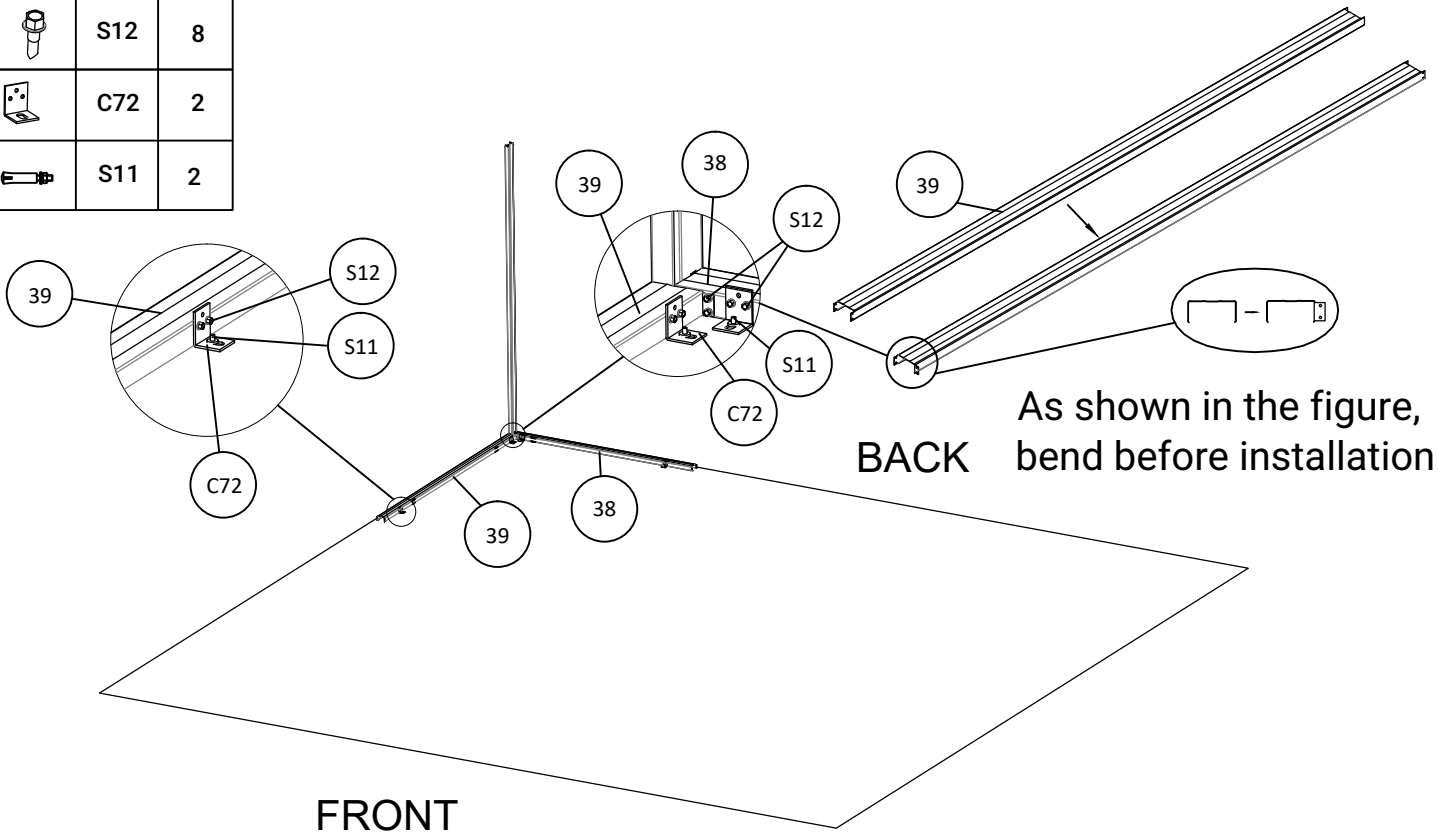
As shown in the figure draw a line before installation.
 Note:

Please install the grounding part on the cement block near the column.

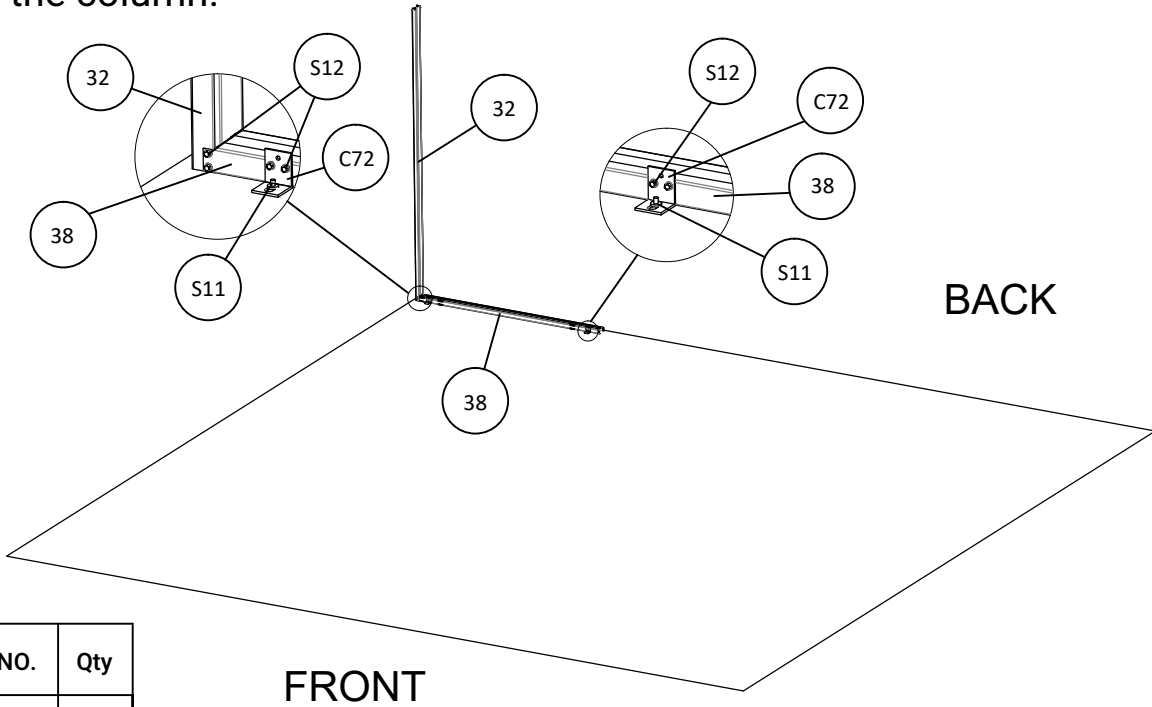PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty
	32	1		38	1		C72	2
	S12	8		S11	2			








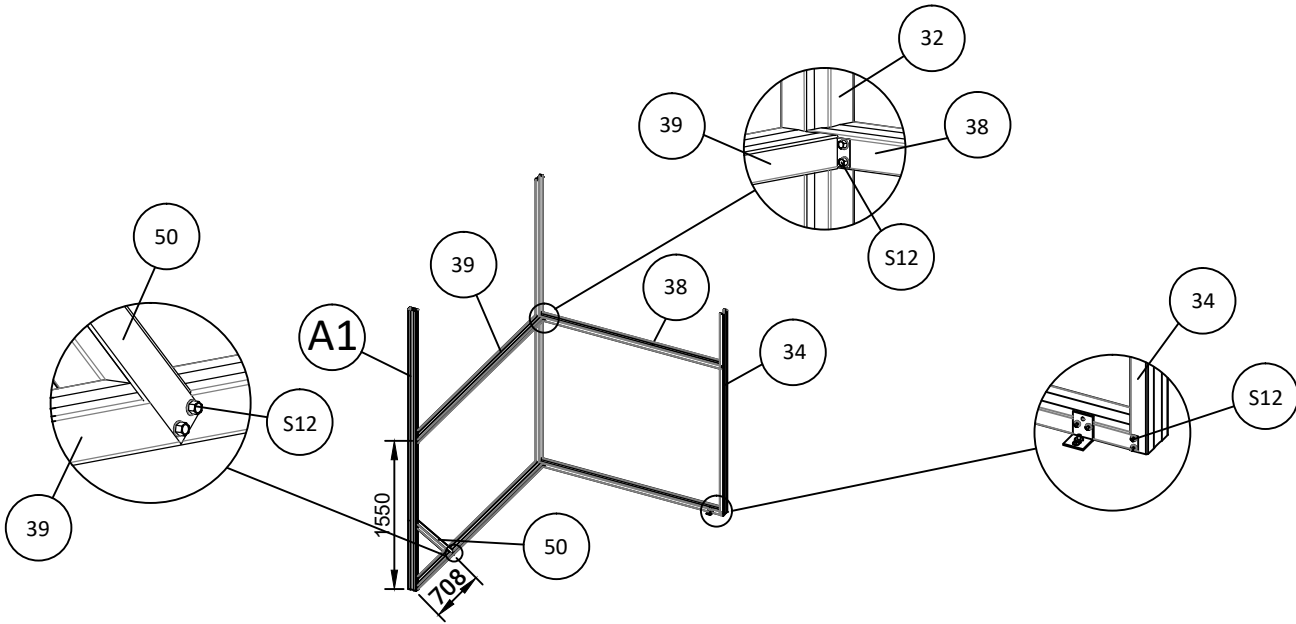
PART	NO.	Qty
	39	1
	S12	8
	C72	2
	S11	2










As shown in the figure,
BACK bend before installation.

INSTALLATION OF FRAMEWORK

PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty
	39	1		38	1		34	1		50	1		S12	32




PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty
	38	6		34	2		32	1		S12	56
	C72	4		S11	4						

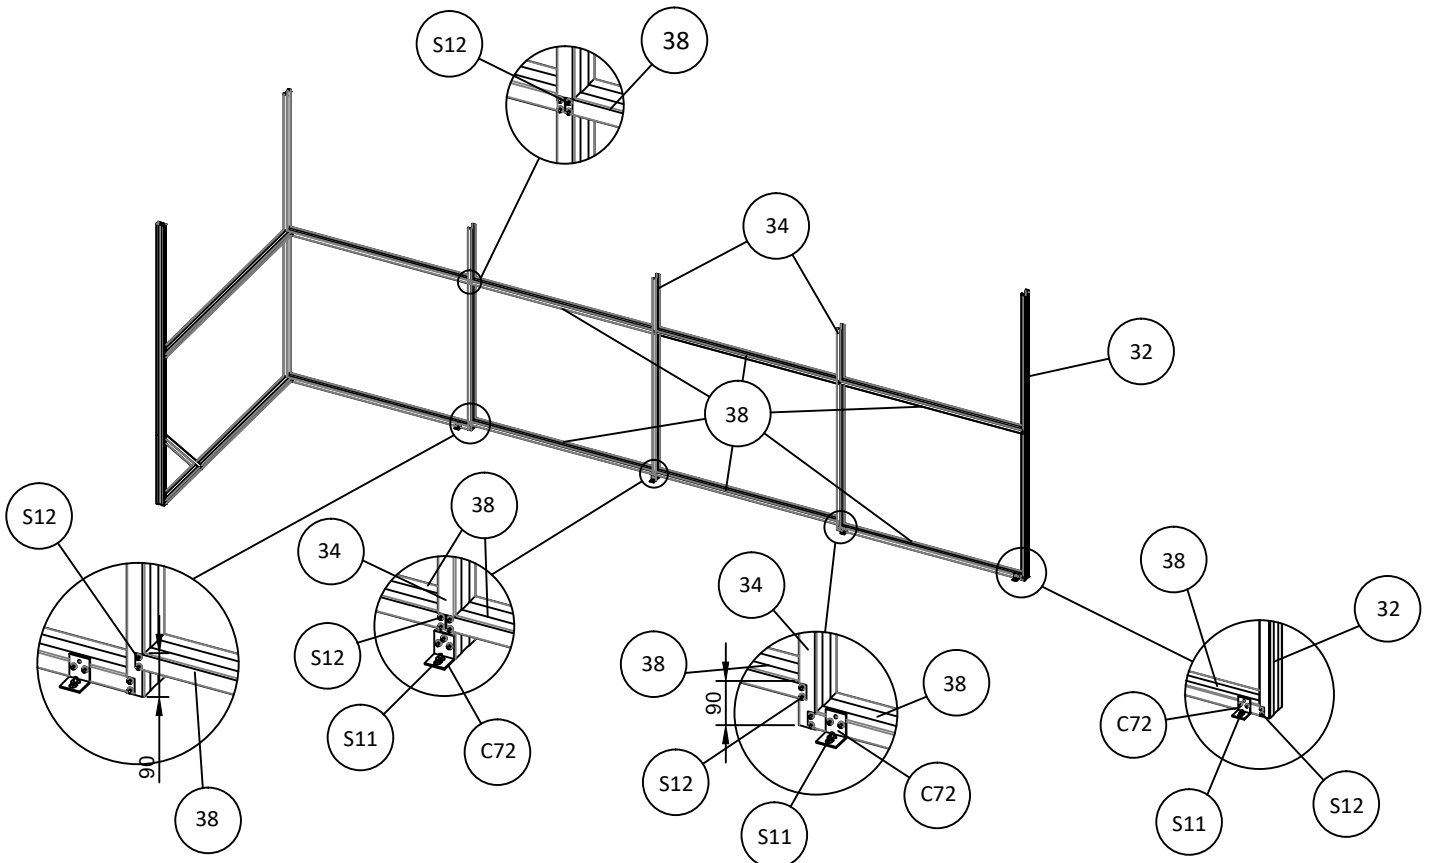


INSTALLATION OF FRAMEWORK

PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty
	39	3		38	4		35	2		36	1		37	2
	50	3		42	1		41	1		43	1		57	3
	S11	2		C72	2		S12	152						

TIPS: If you want to change the door position to the opposite wall, please refer to page p48-49.

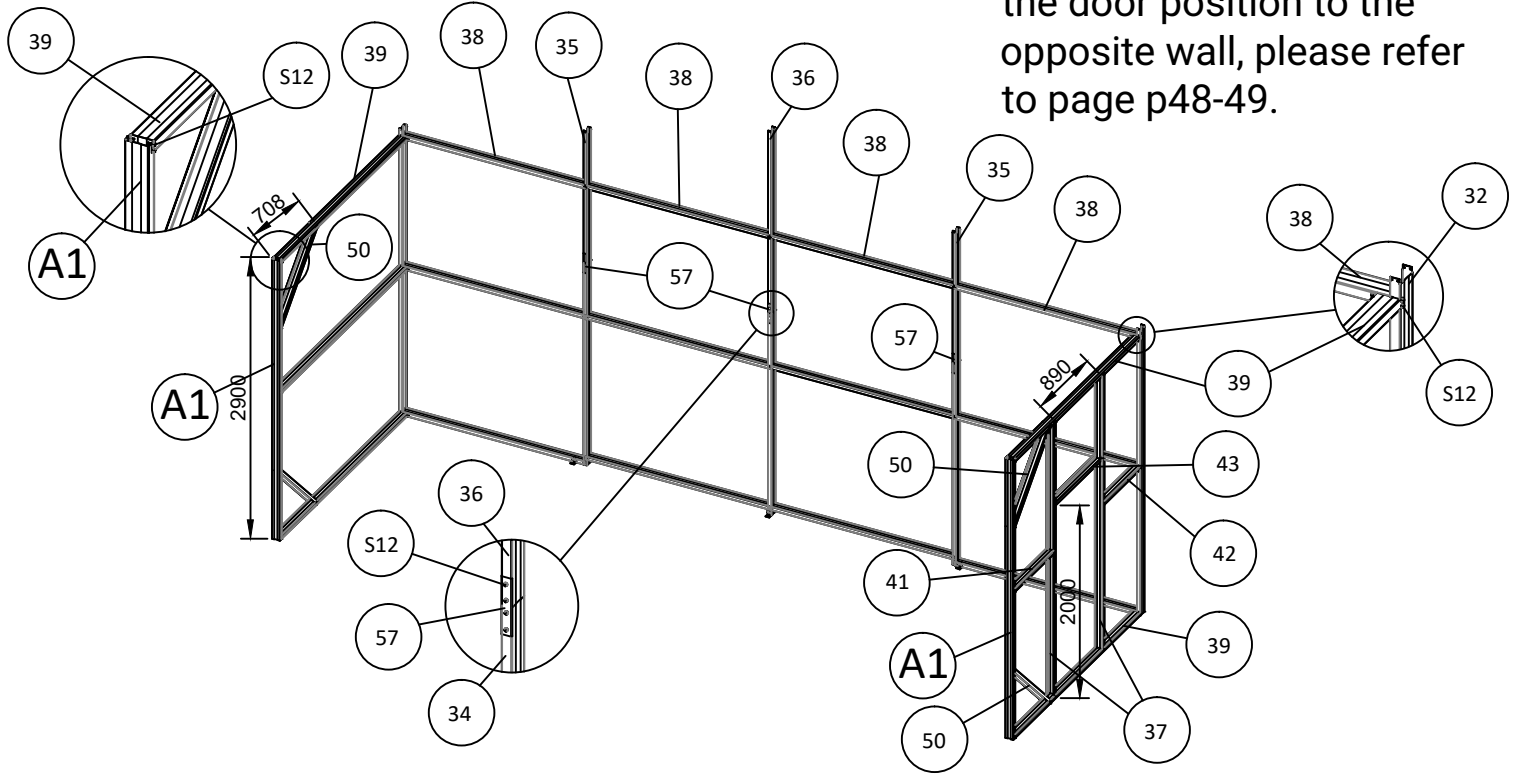

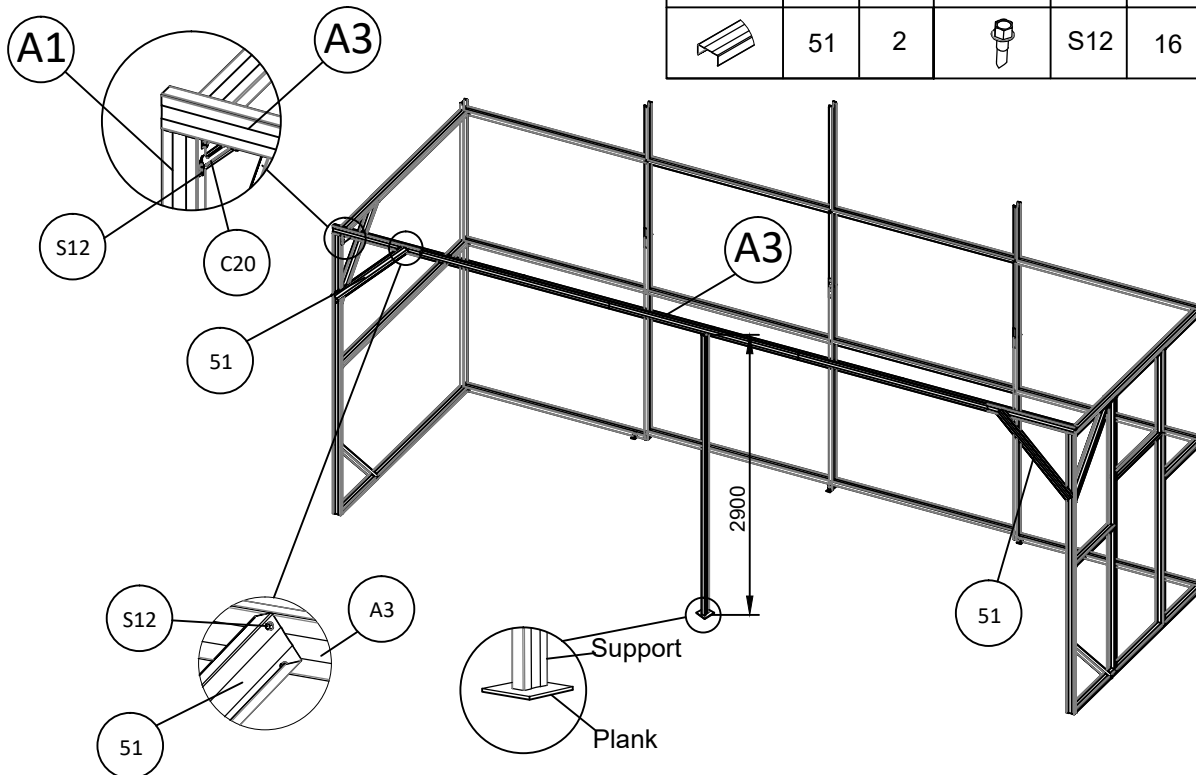



PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty
	51	2		S12	16		C20	2




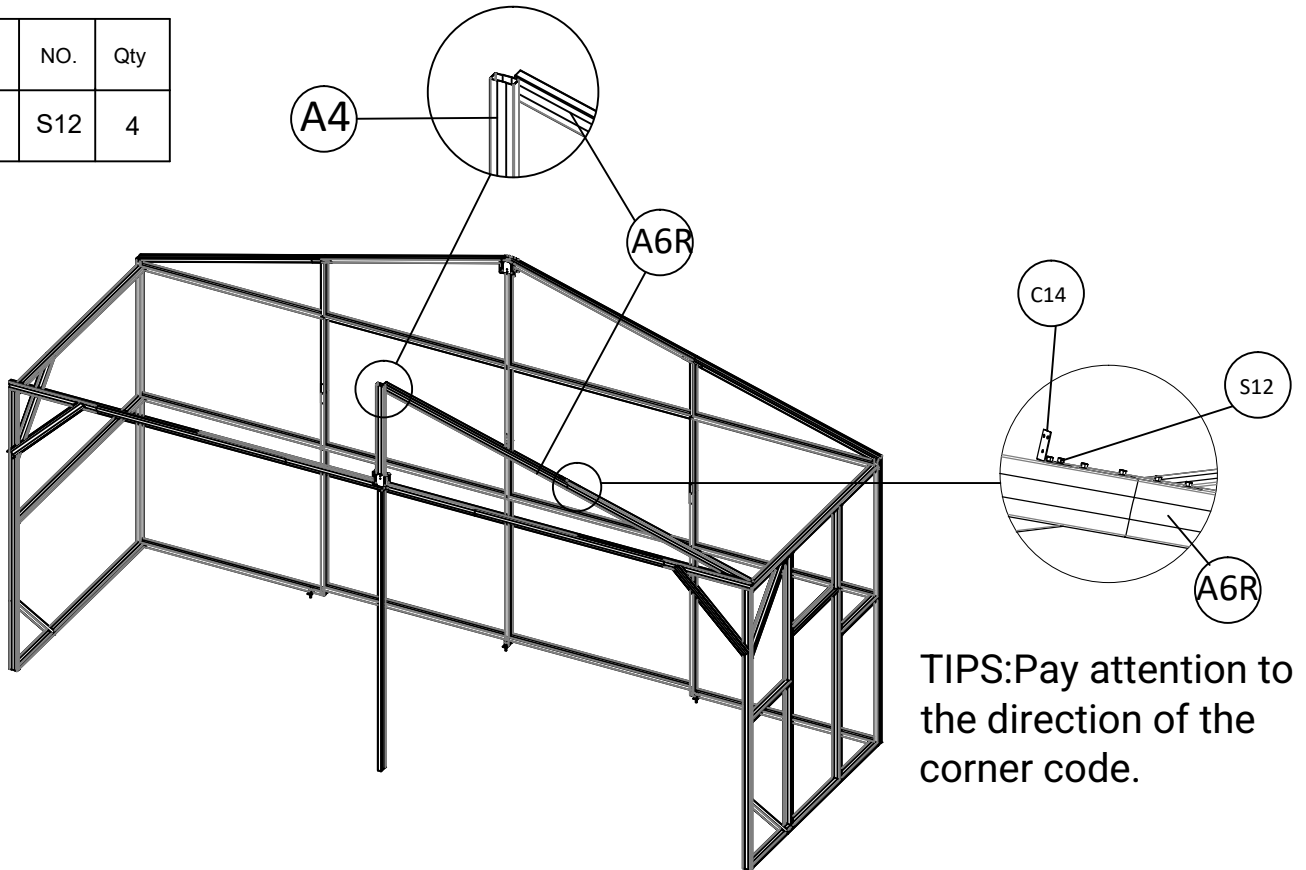
As shown in the figure, when installing A3, support it with an object with a length of 2900mm to prevent it from falling and deformation other parts can be used temporarily. If the ground is not hardened please put a board under the support to make it level with foundation.

INSTALLATION OF FRAMEWORK

PART	NO.	Qty	PART	NO.	Qty
	C73	4		S12	40

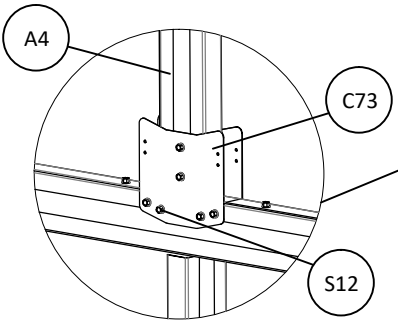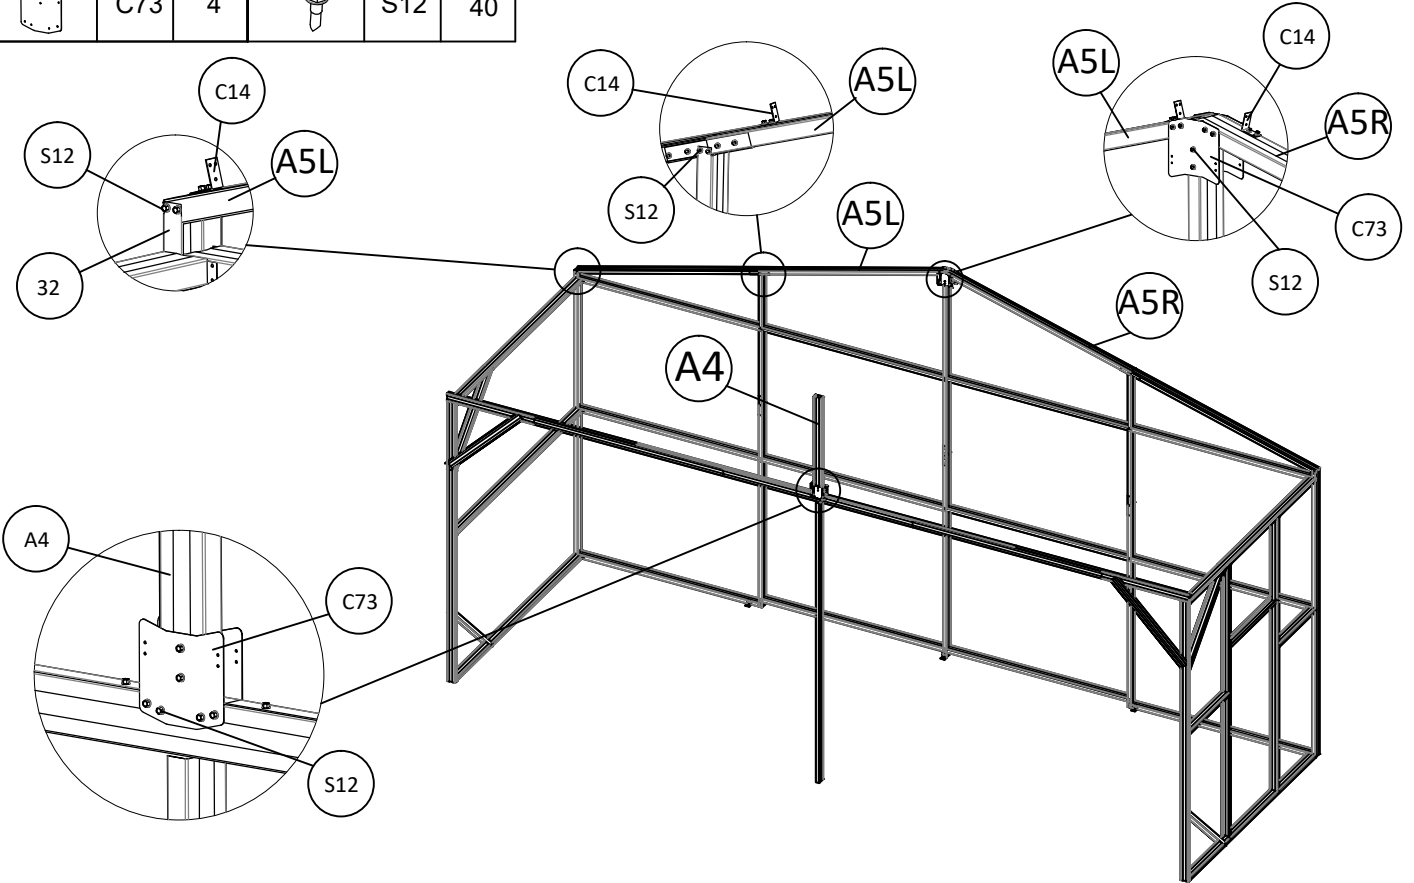


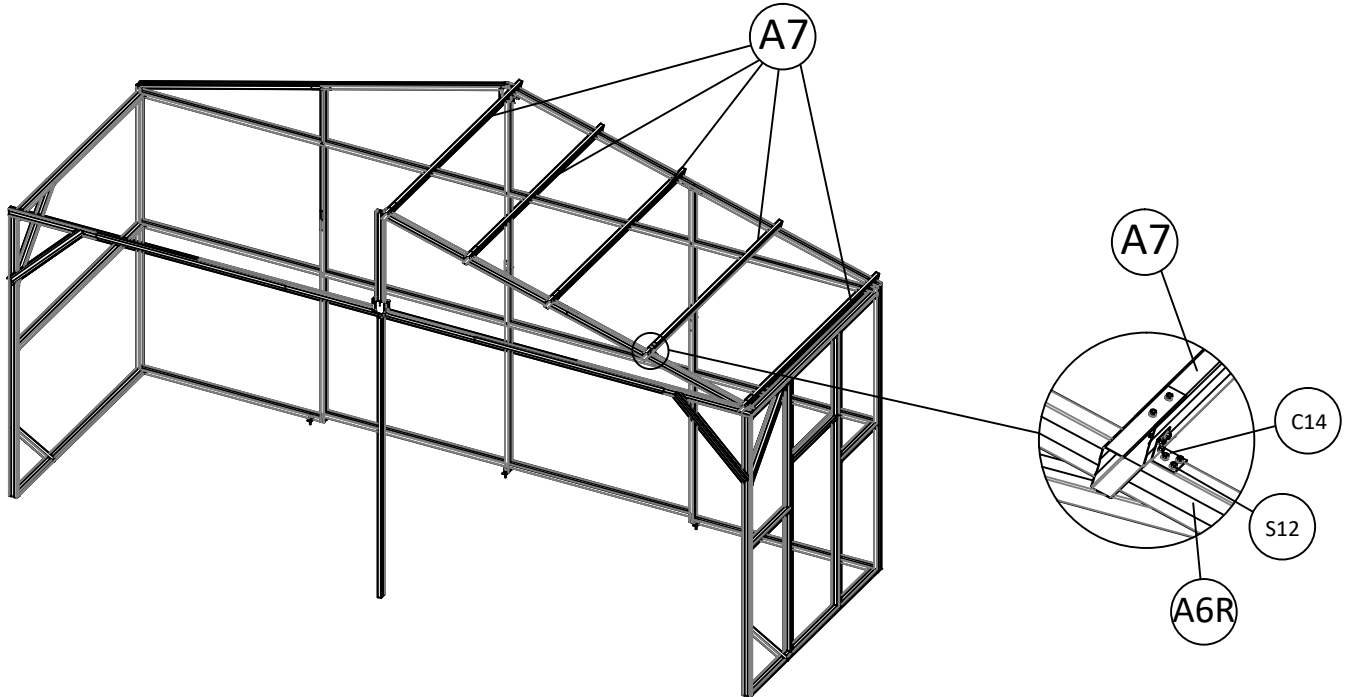
PART	NO.	Qty
	S12	4






TIPS: Pay attention to the direction of the corner code.

INSTALLATION OF FRAMEWORK


PART	NO.	Qty
	S12	30




PART	NO.	Qty	PART	NO.	Qty
	S12	42		58	2

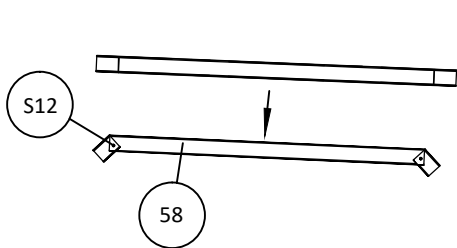


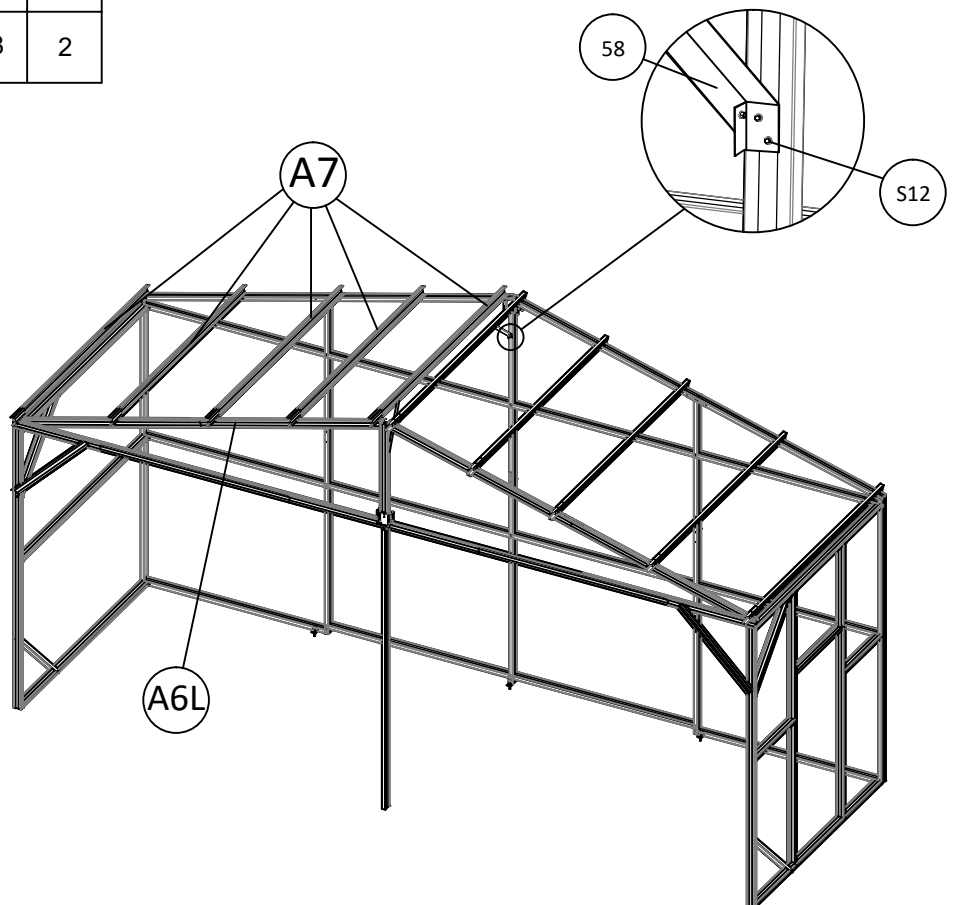

Note: please bend the 58 to a proper angle at the notch before installation.




INSTALLATION OF FRAMEWORK


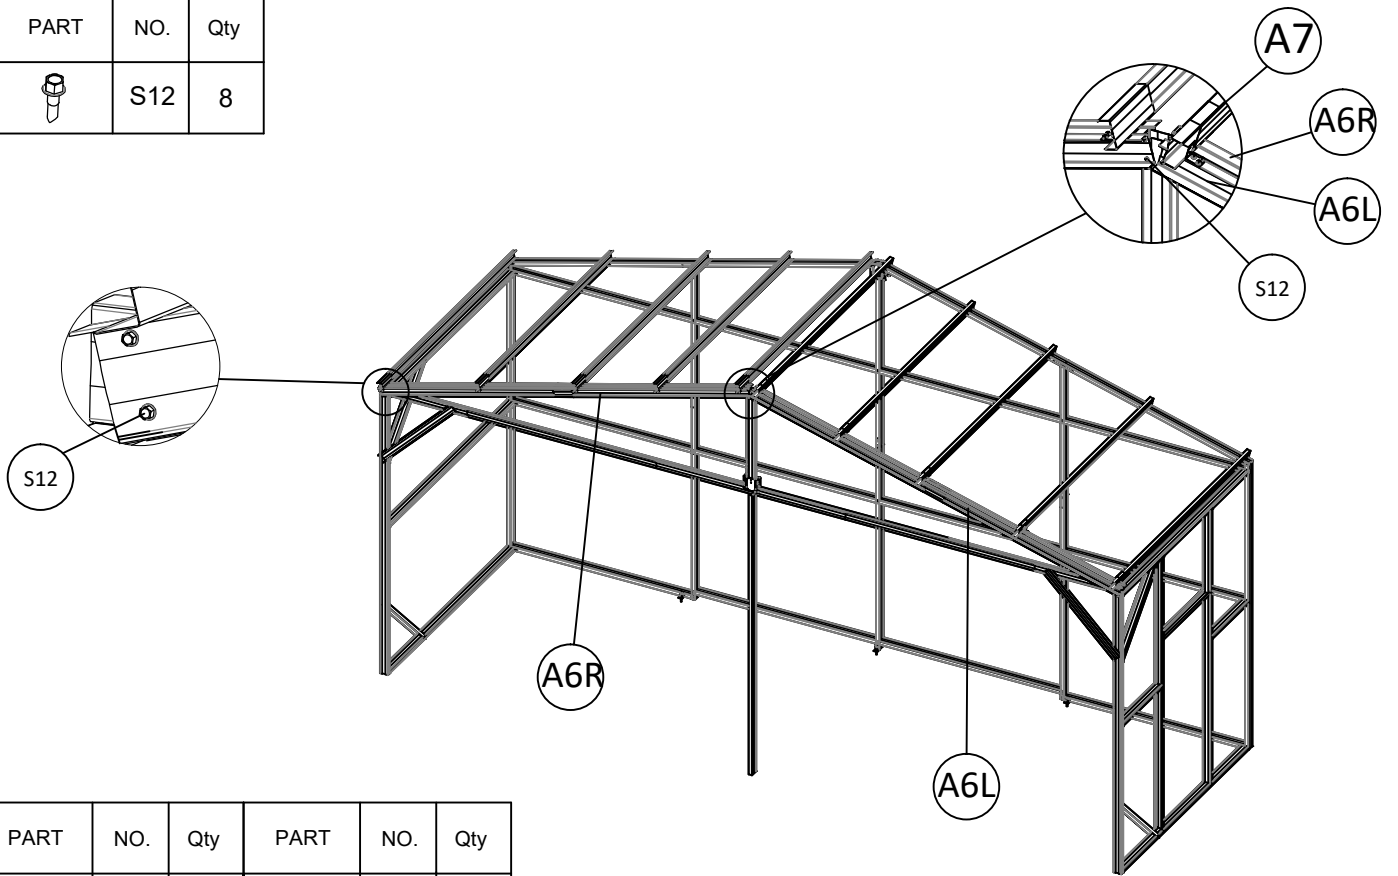




PART	NO.	Qty
	S12	8




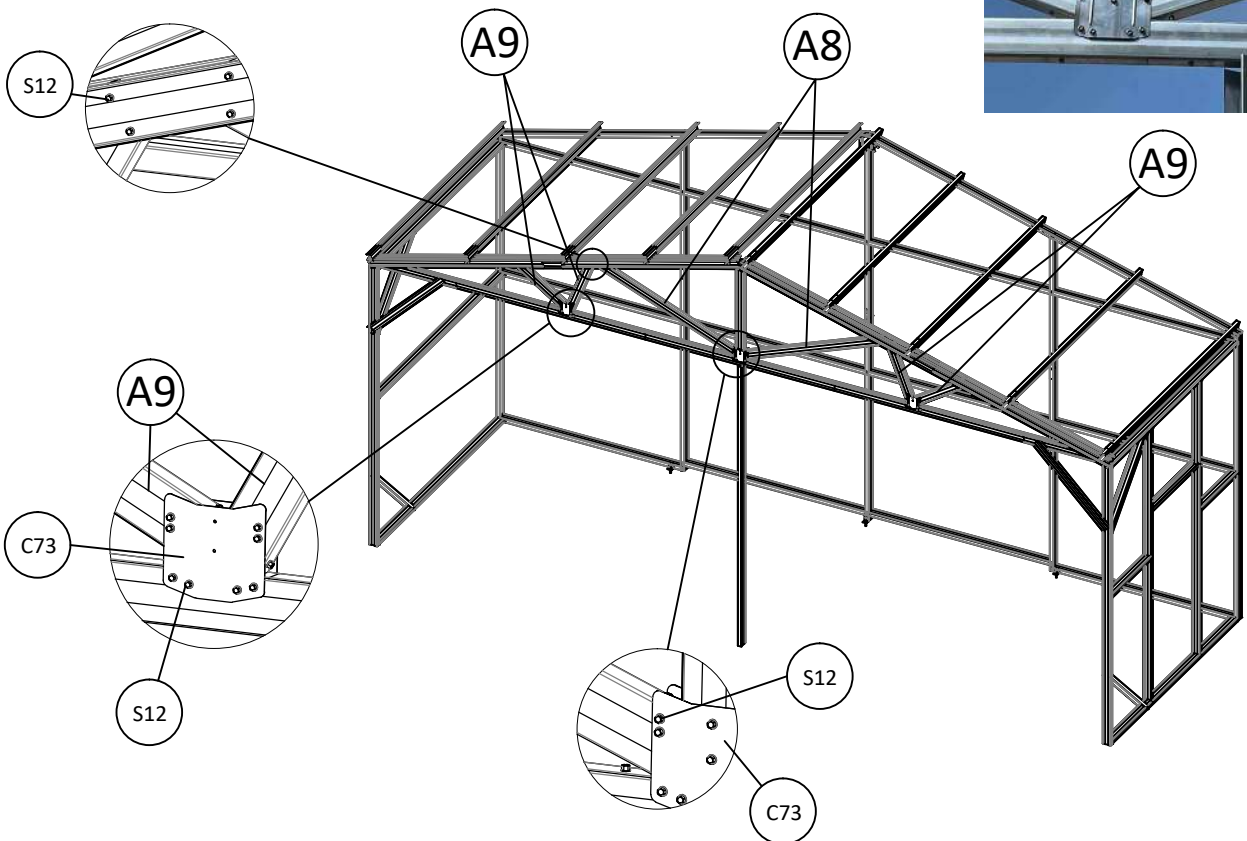


PART	NO.	Qty	PART	NO.	Qty
	C73	4		S12	64




INSTALLATION OF FRAMEWORK

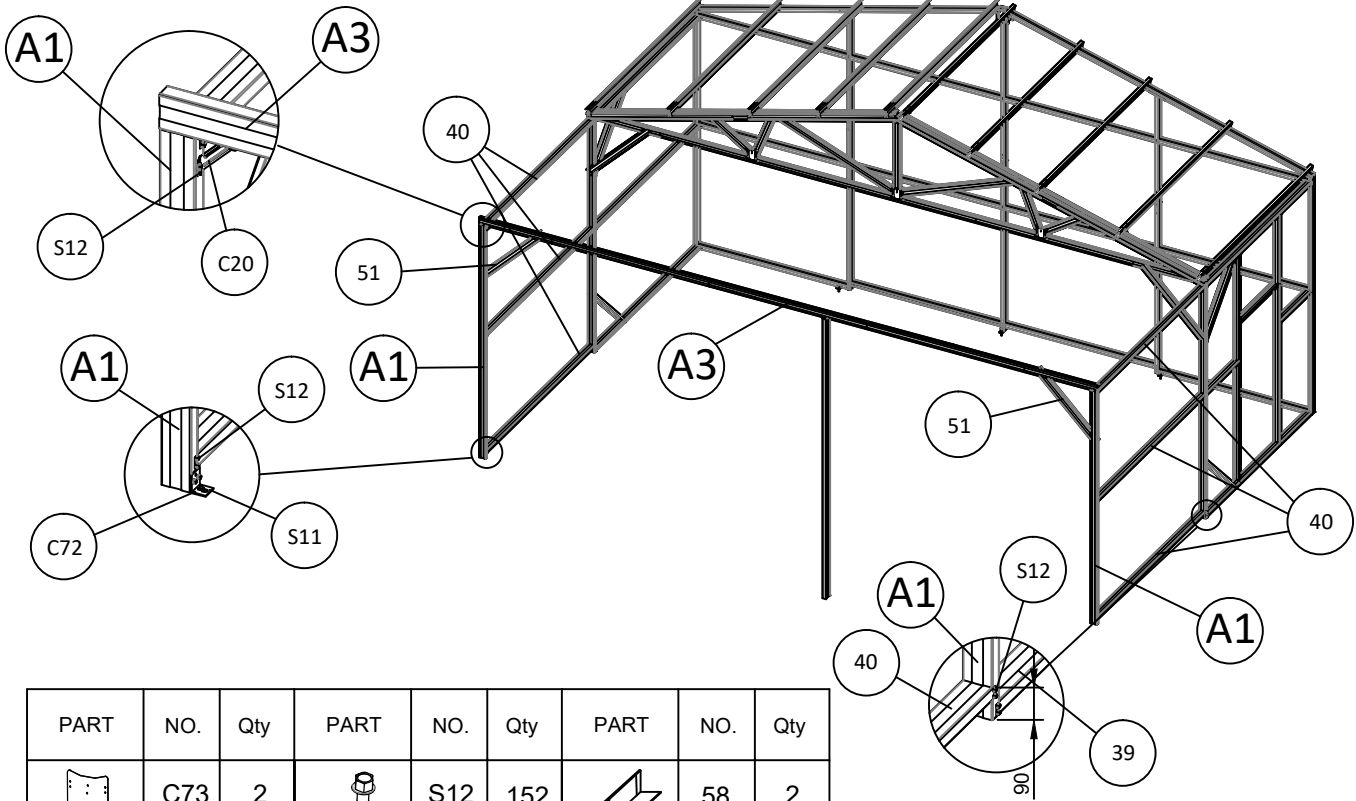PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty
	40	6		51	2		S12	76		S11	2		C72	2
	C20	2	STEP ONE											





PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty
	C73	2		S12	152		58	2

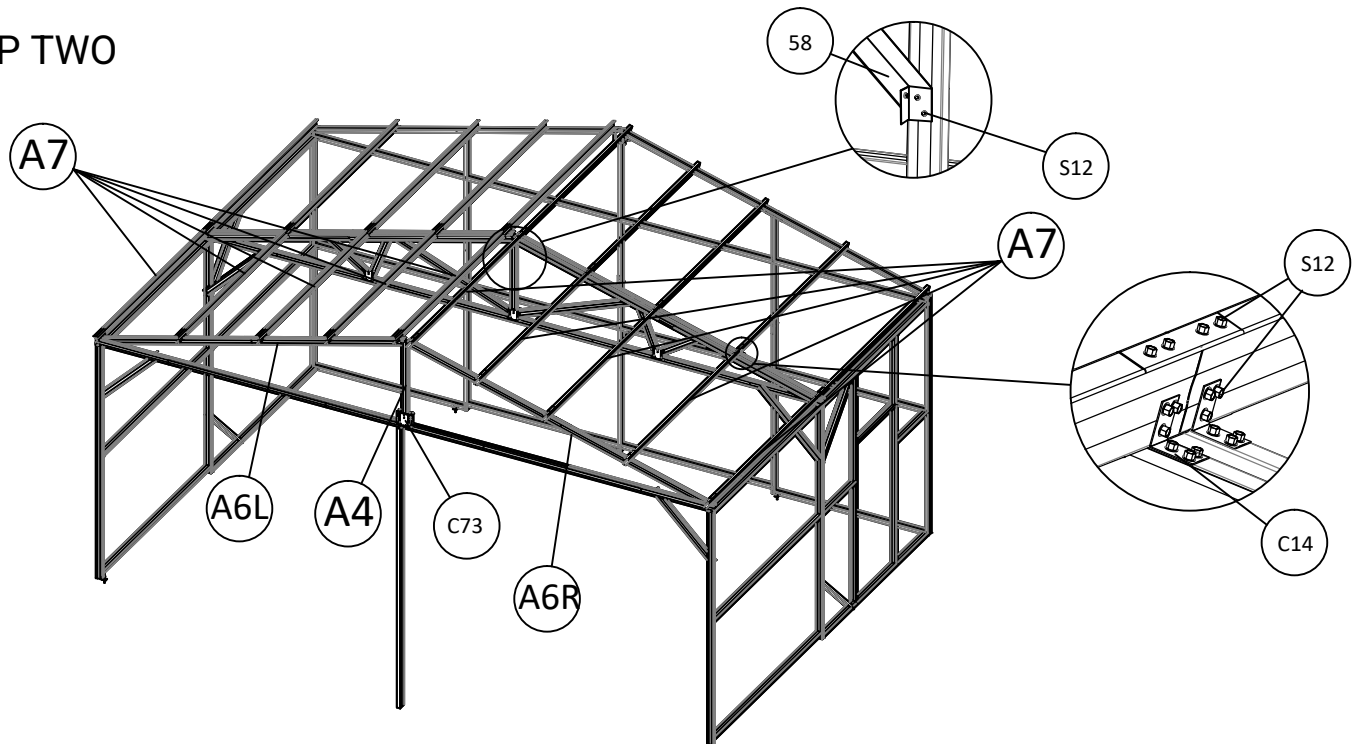STEP TWO




INSTALLATION OF FRAMEWORK












PART	NO.	Qty	PART	NO.	Qty
	C73	4		S12	72

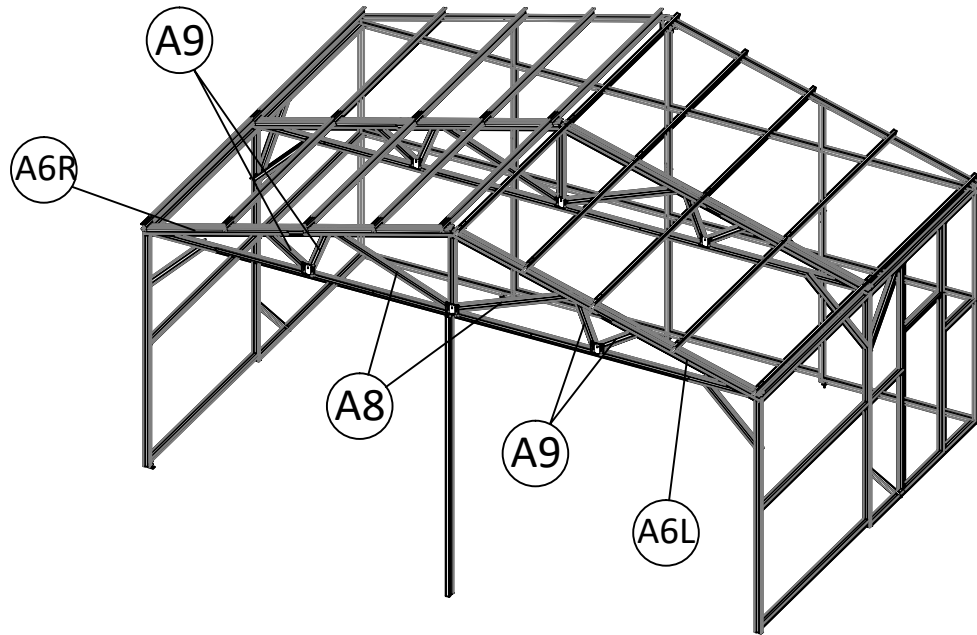
MS2525

STEP THREE





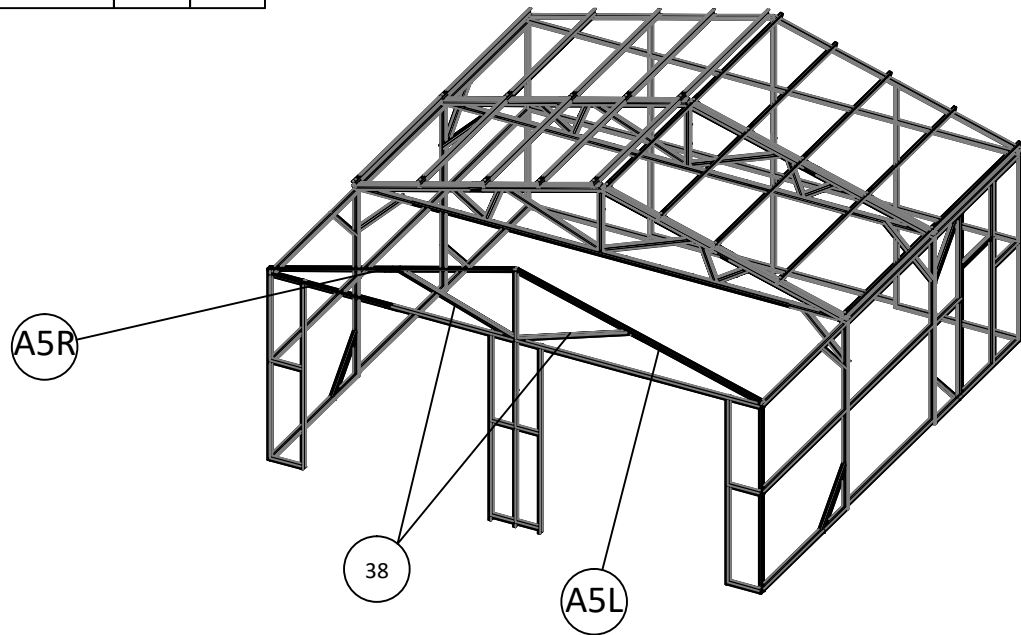
INSTALLATION OF FRAMEWORK

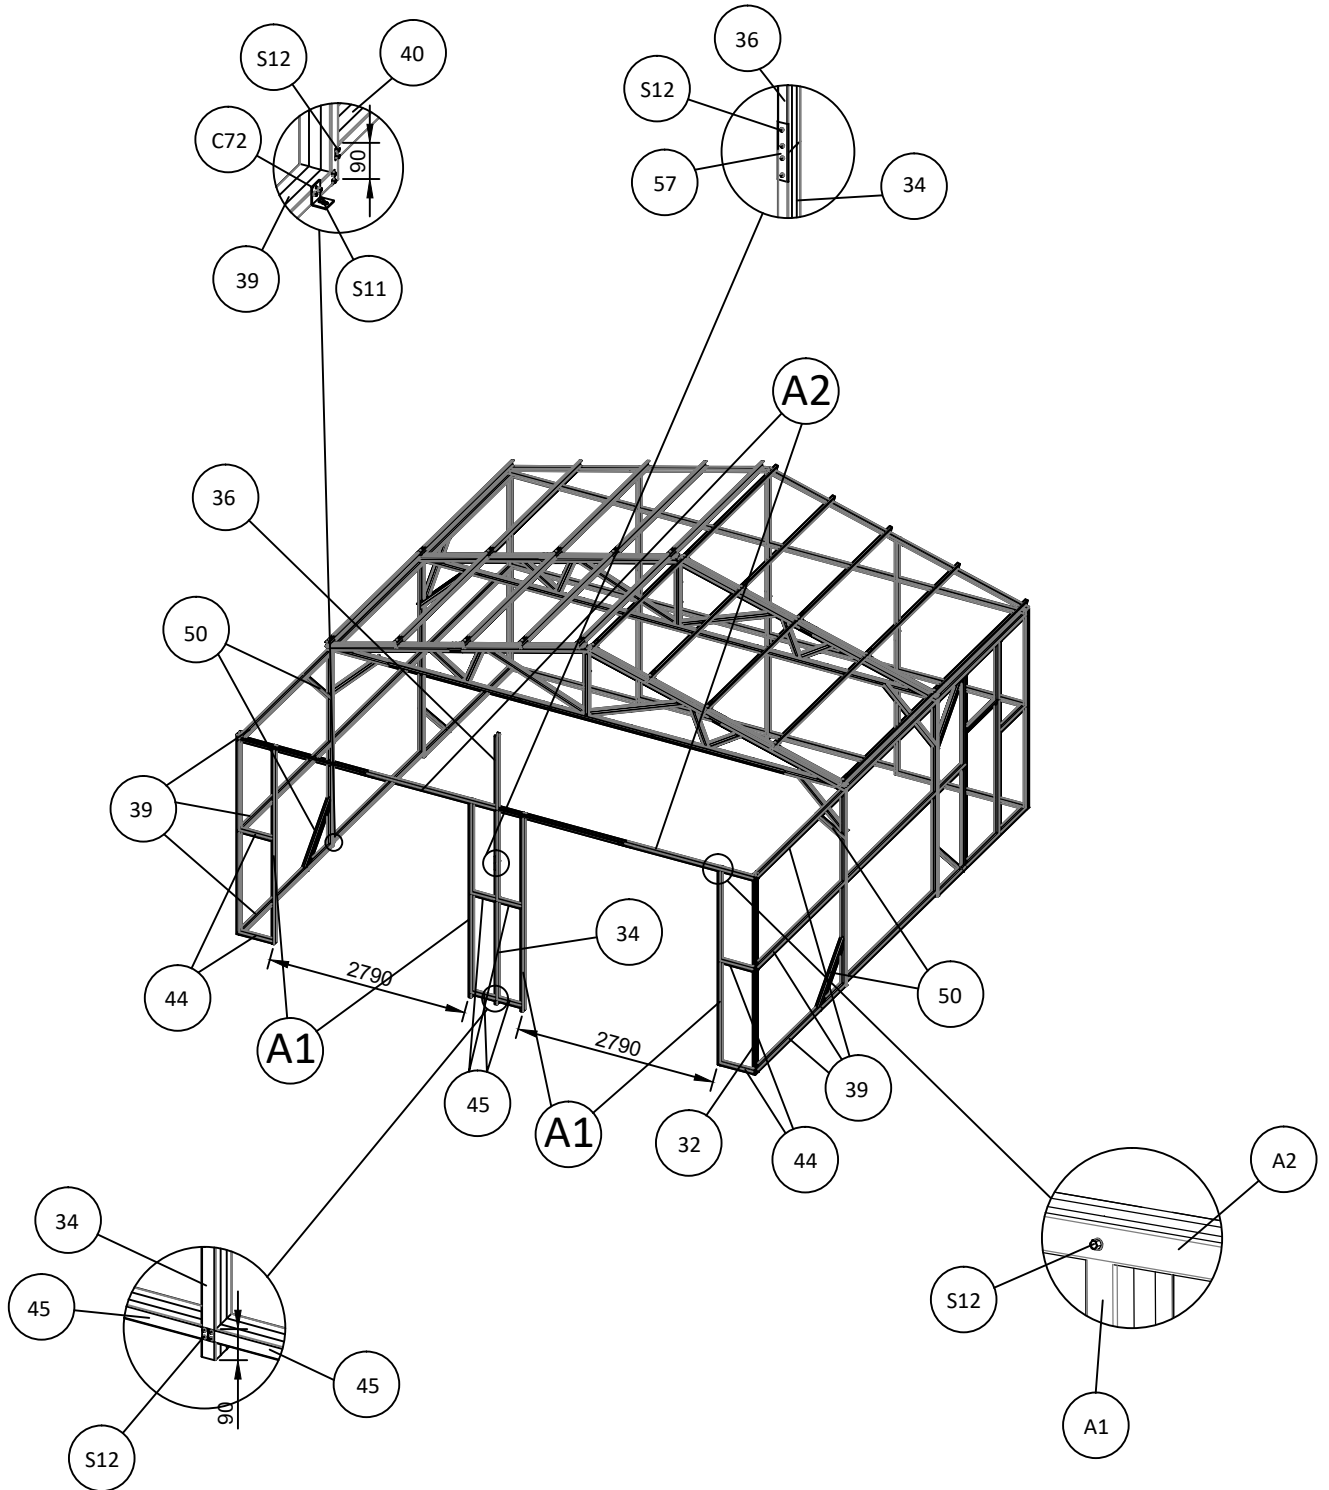


PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty
	39	6		36	1		44	4		45	4		50	4
	34	1		32	2		57	1		S11	9		C72	9
	S12	194												




INSTALLATION OF FRAMEWORK



PART	NO.	Qty	PART	NO.	Qty
	38	2		S12	16

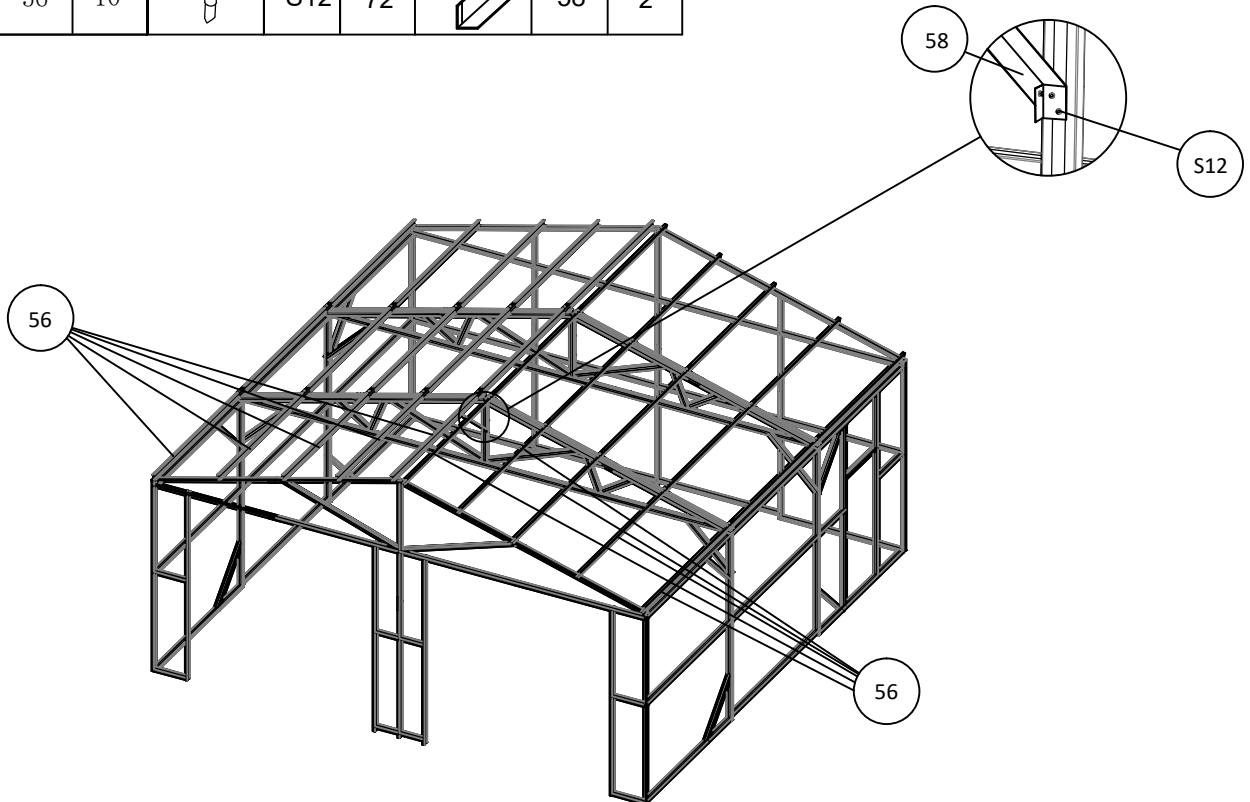


PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty
	56	10		S12	72		58	2




INSTALLATION OF FRAMEWORK

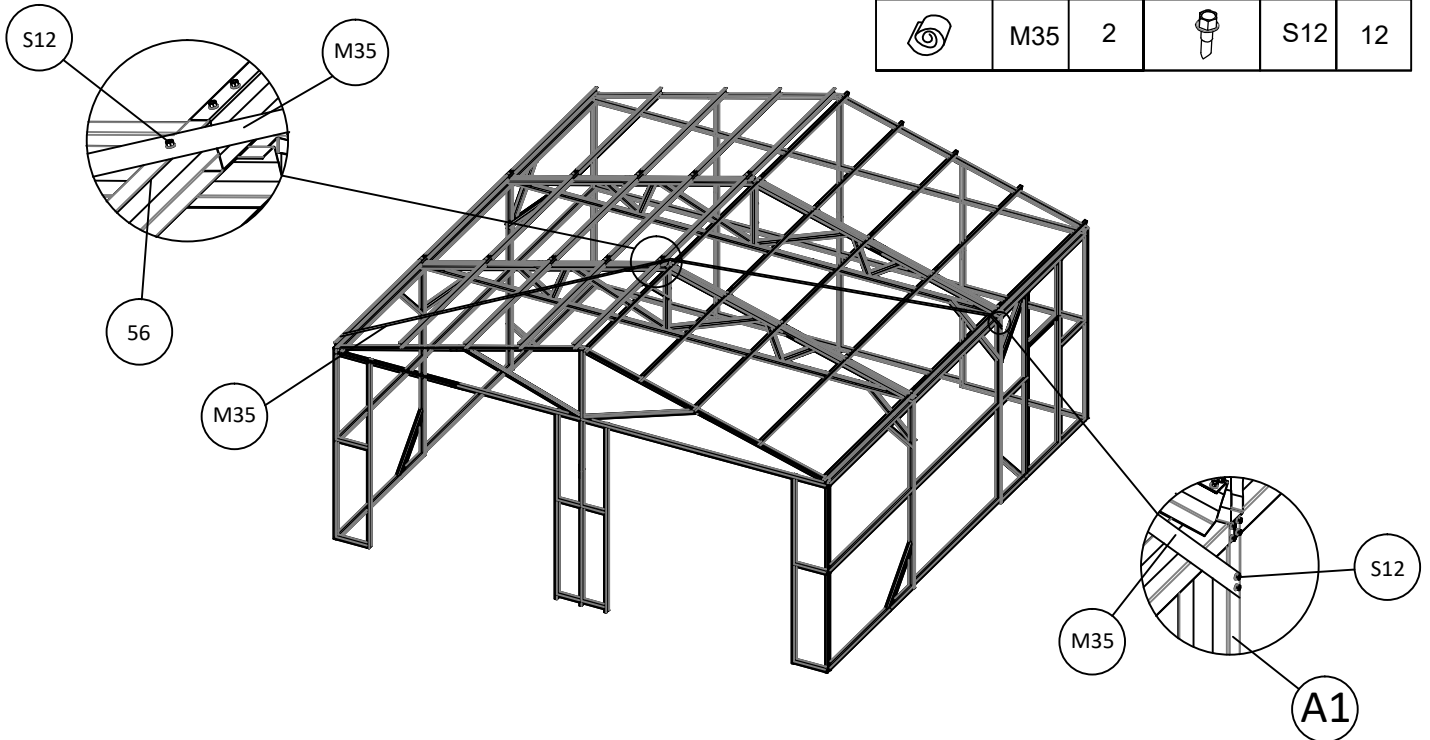

PART	NO.	Qty	PART	NO.	Qty
	M35	2		S12	12

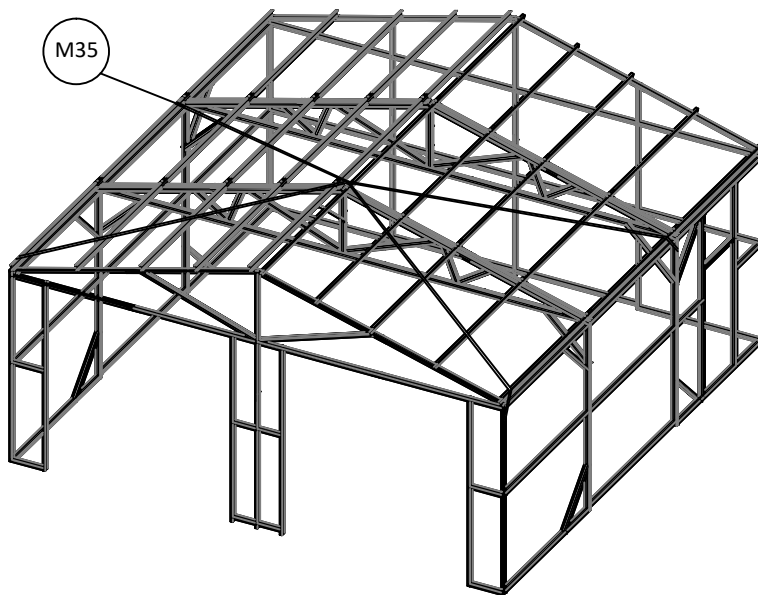


As shown in the figure, M35 diagonal is used to fix every two spans of the row to increase the overall strength. During installation, fix one end of M35 on the column, tighten it from the top of the roof to the other side, and fix it on the column on the other side. After fixing, please cut the excess part to an appropriate length. (please align the frame before installation)





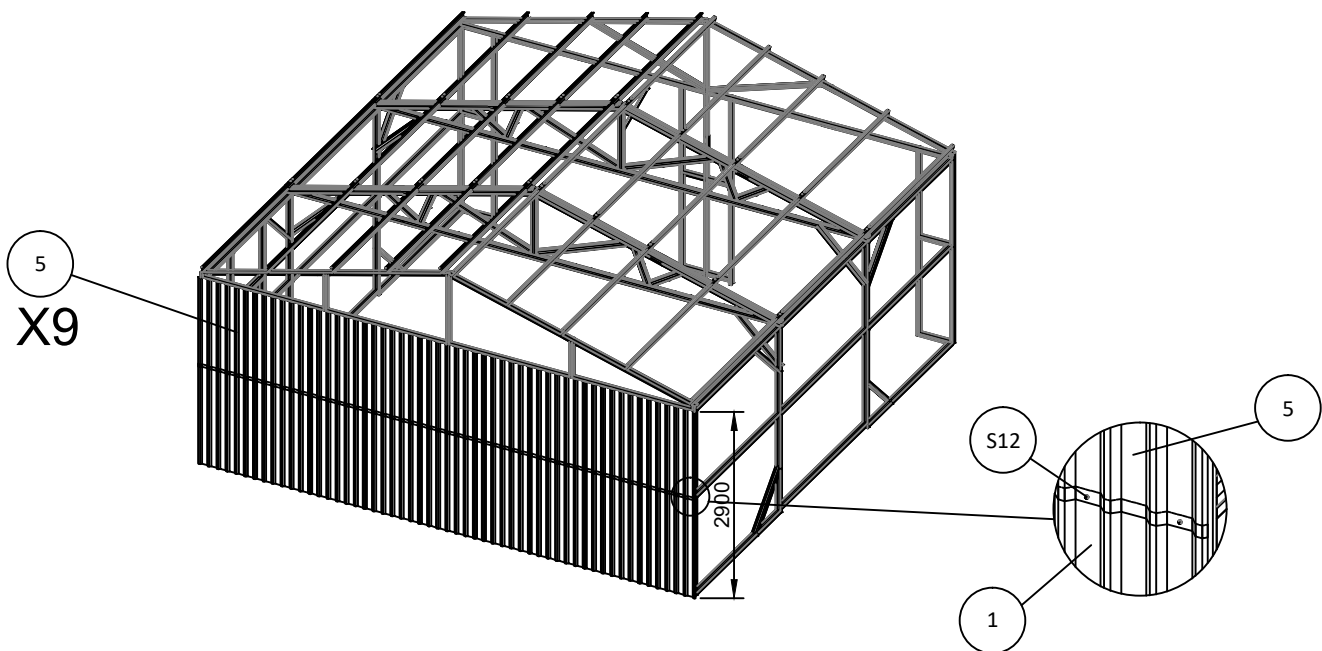
INSTALLATION OF WALL TILE

PART	NO.	Qty	PART	NO.	Qty
	1	9		S12	36



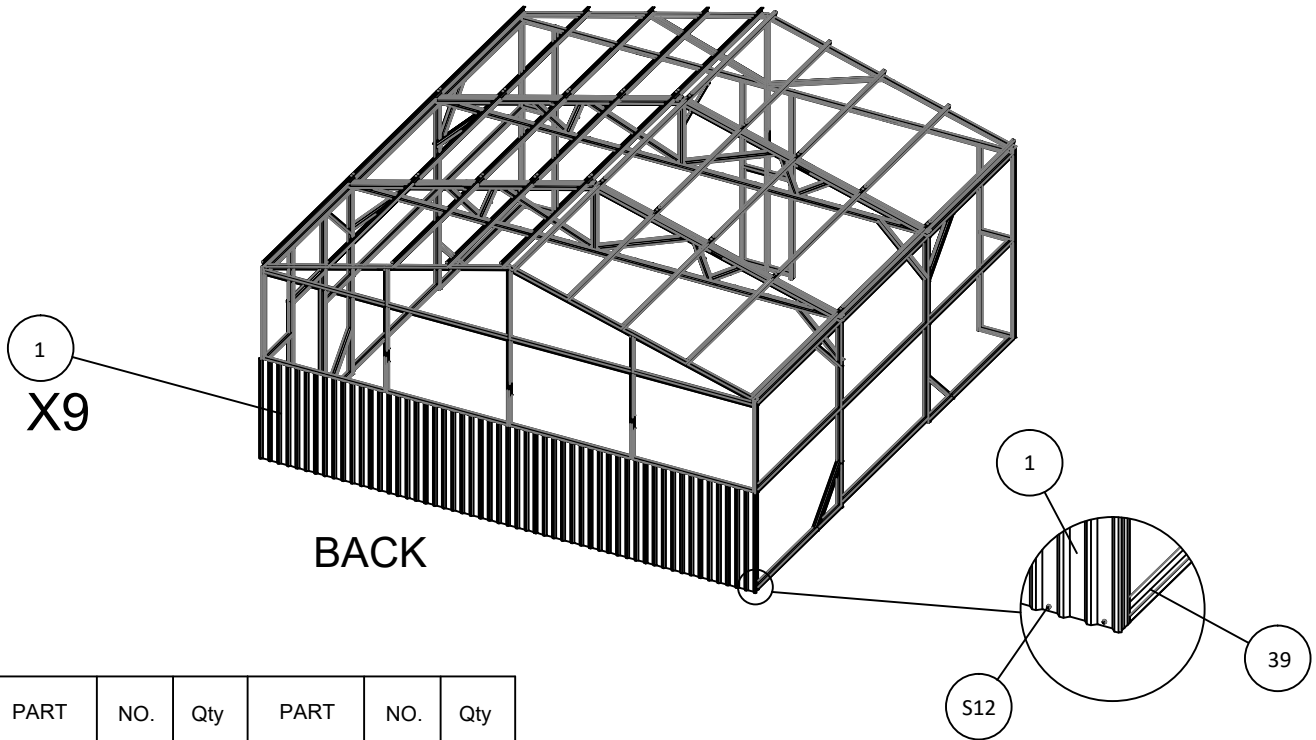







FRONT






PART	NO.	Qty	PART	NO.	Qty
	5	9		S12	36




INSTALLATION OF WALL TILE

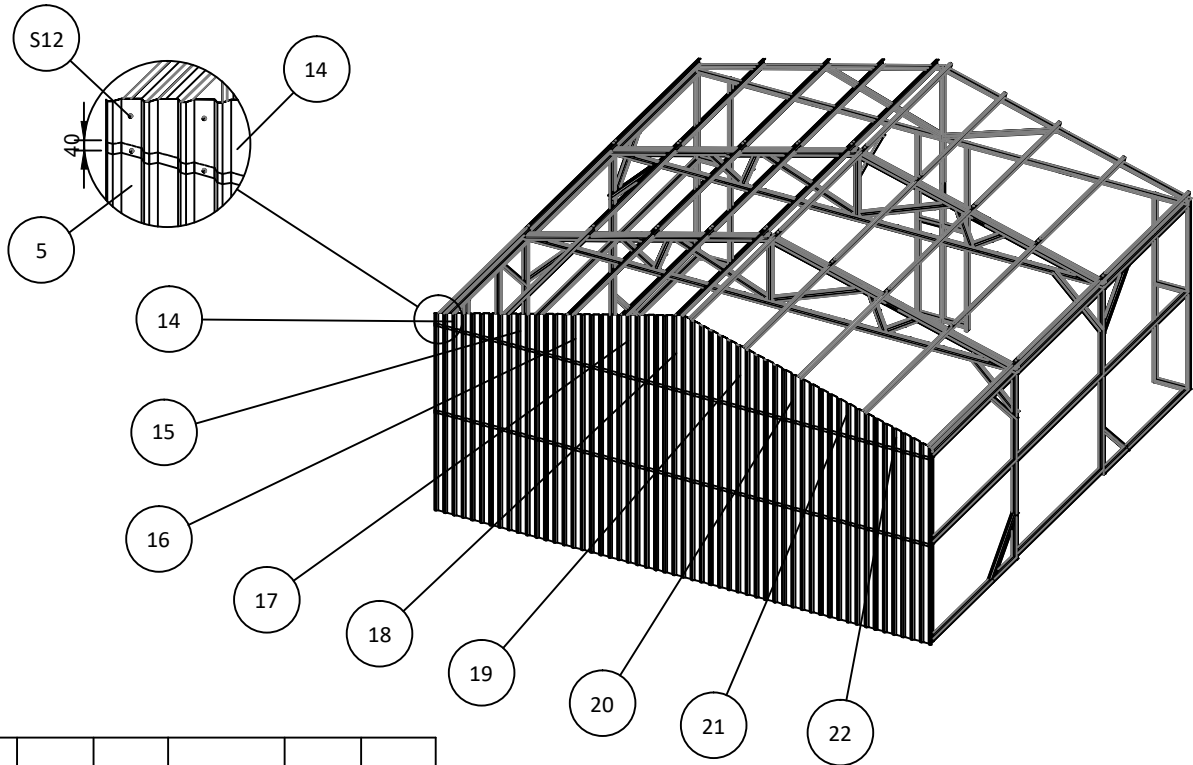

PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty
	S12	72		14	1		15	1		16	1		17	1
	18	1		22	1		21	1		20	1		19	1

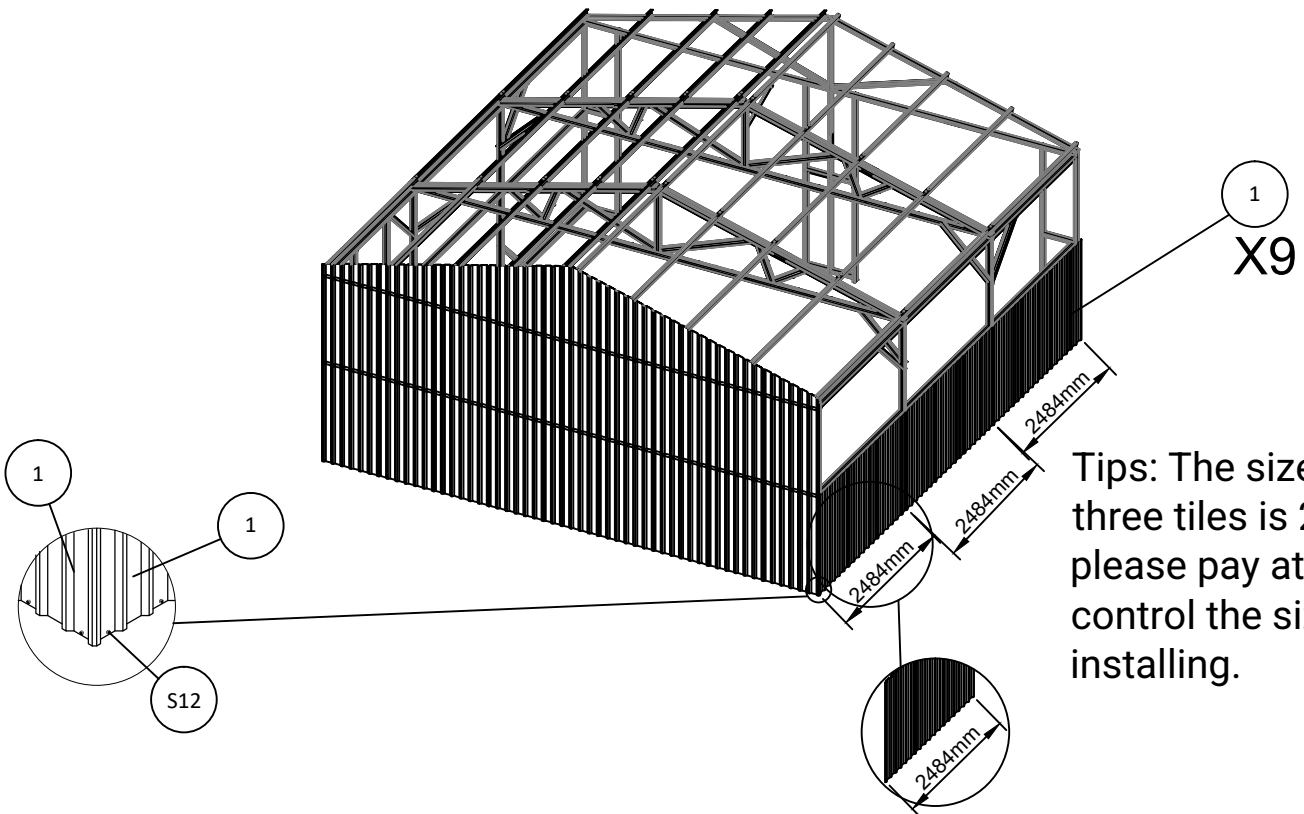




PART	NO.	Qty	PART	NO.	Qty
	1	9		S12	36




INSTALLATION OF WALL TILE

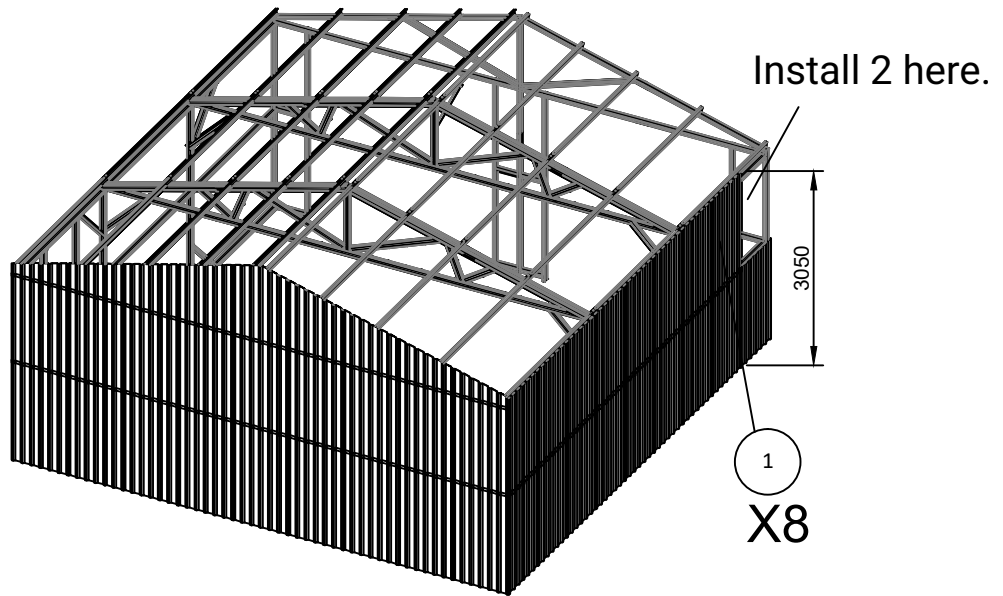


PART	NO.	Qty	PART	NO.	Qty
	1	8		S12	64




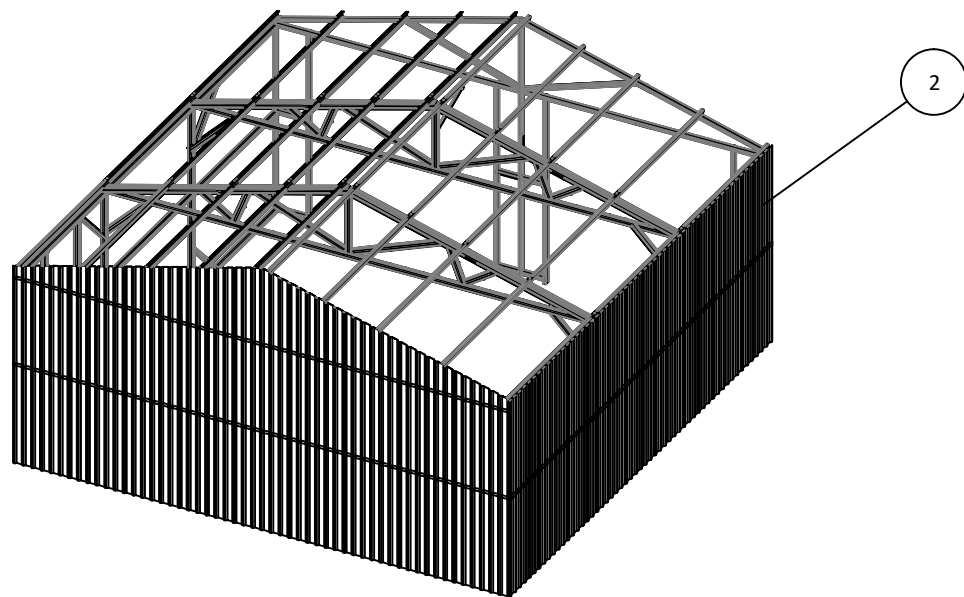


PART	NO.	Qty	PART	NO.	Qty
	2	1		S12	8




INSTALLATION OF WALL TILE

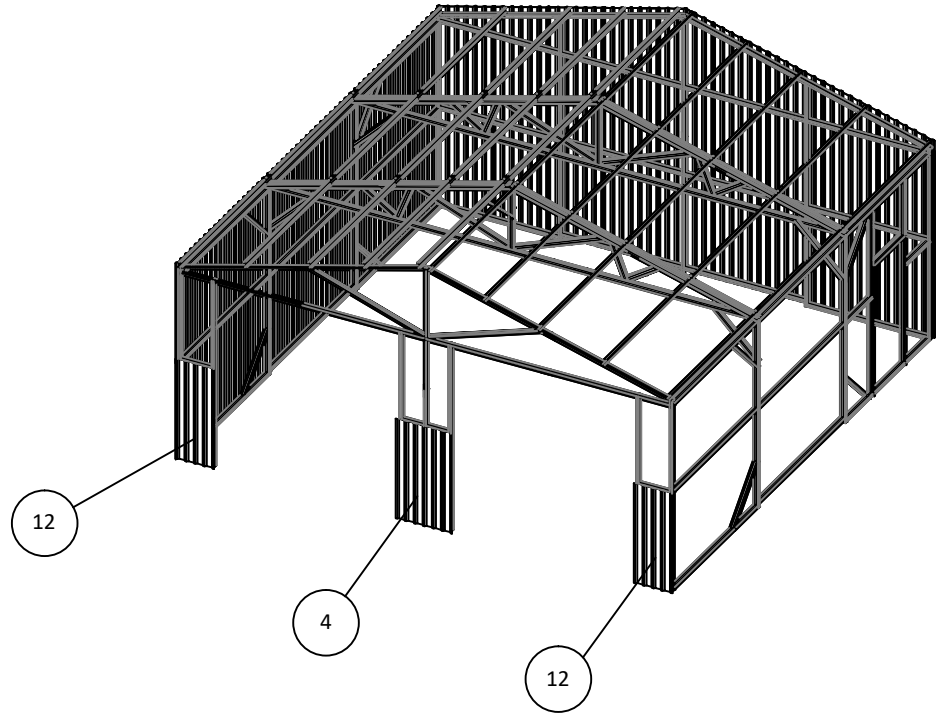





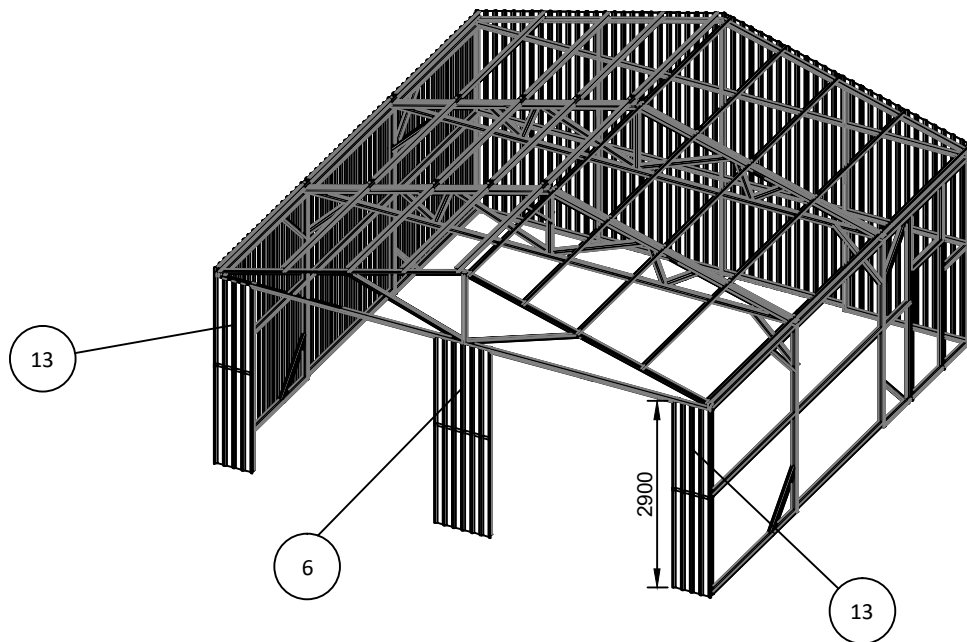



PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty
	4	1		12	2		S12	12






PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty
	6	1		13	2		S12	12




INSTALLATION OF WALL TILE

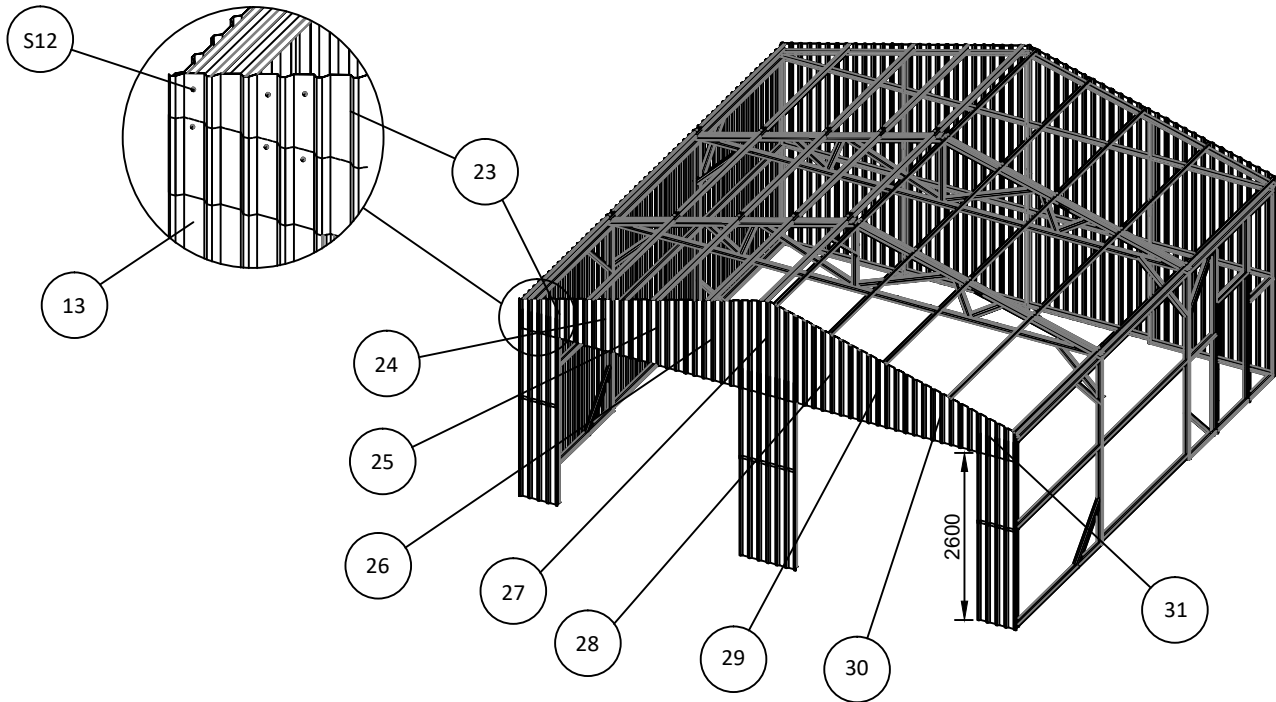



PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty
	S12	72		23	1		24	1		25	1		26	1
	27	1		31	1		30	1		29	1		28	1

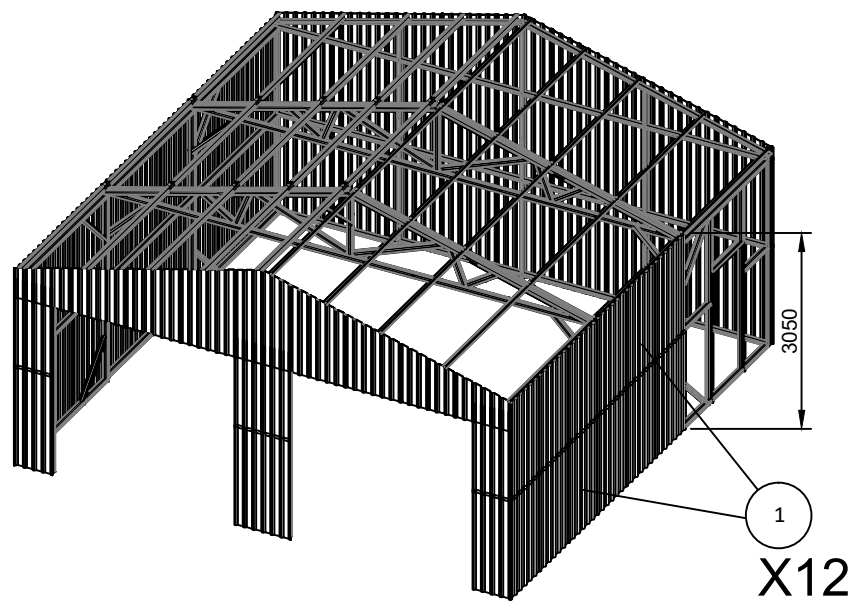






PART	NO.	Qty	PART	NO.	Qty
	1	12		S12	144




INSTALLATION OF WALL TILE

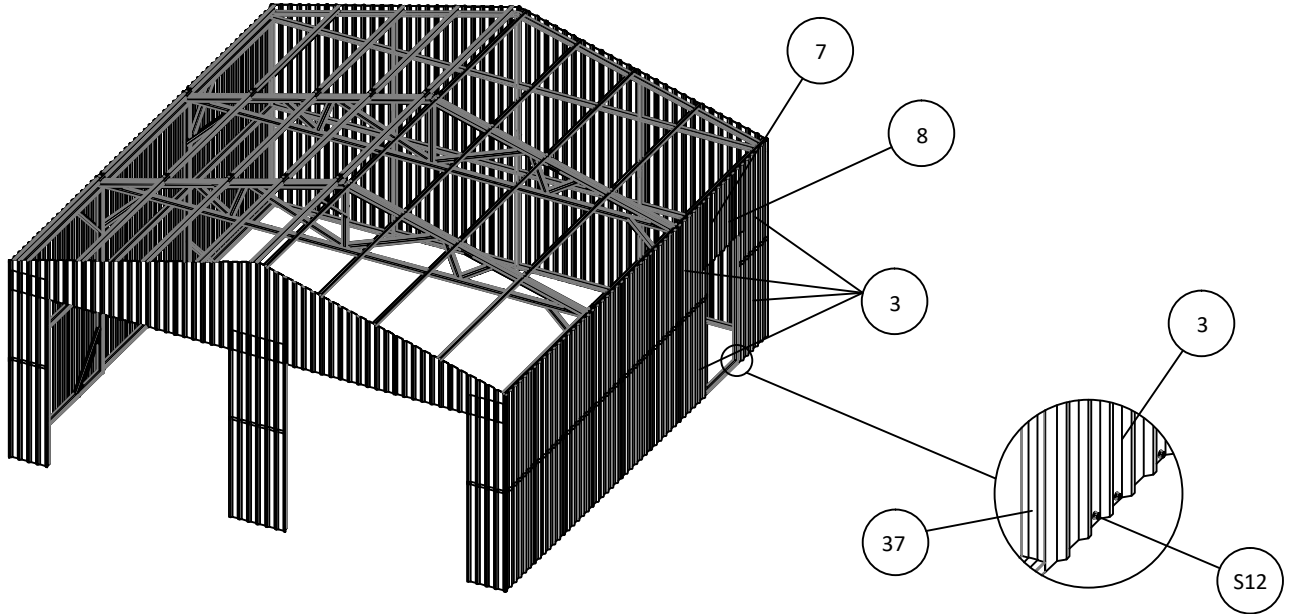

PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty
	3	4		7	1		8	1		S12	26



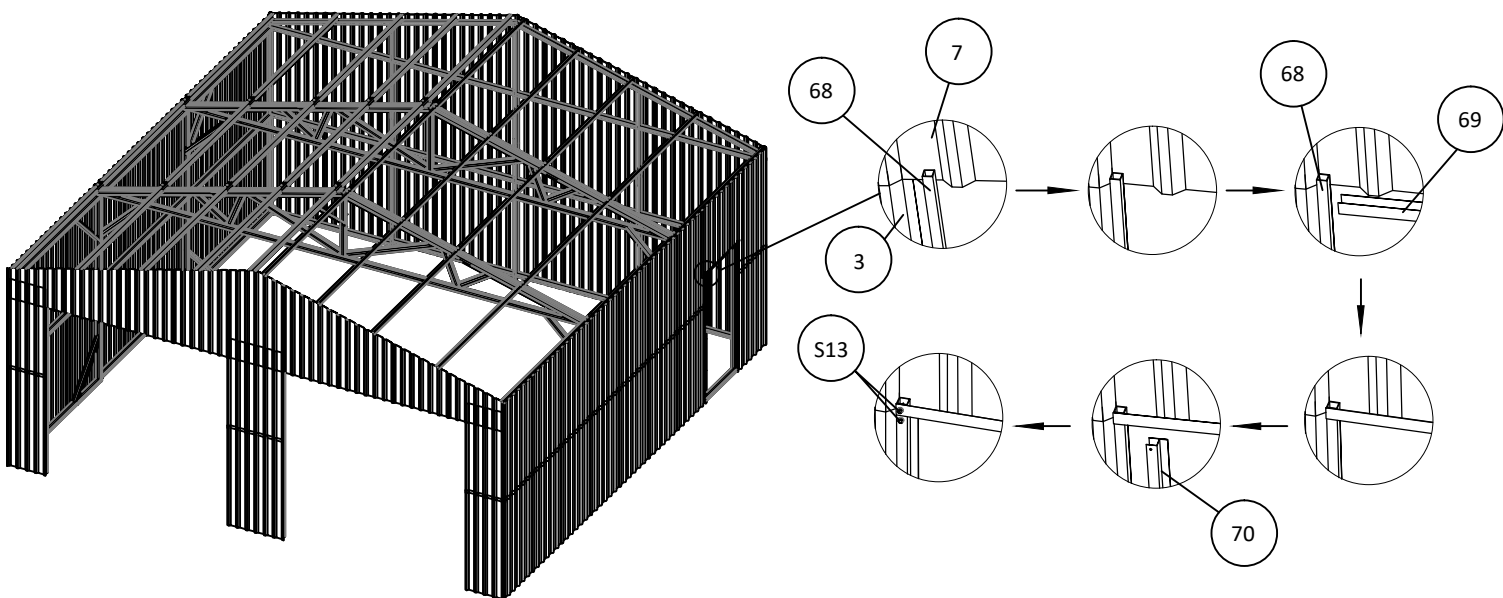
PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty
	69	1		70	2		68	2		S13	13






INSTALLATION OF WALL TILE


PART	NO.	Qty	PART	NO.	Qty
	10	1		S12	20

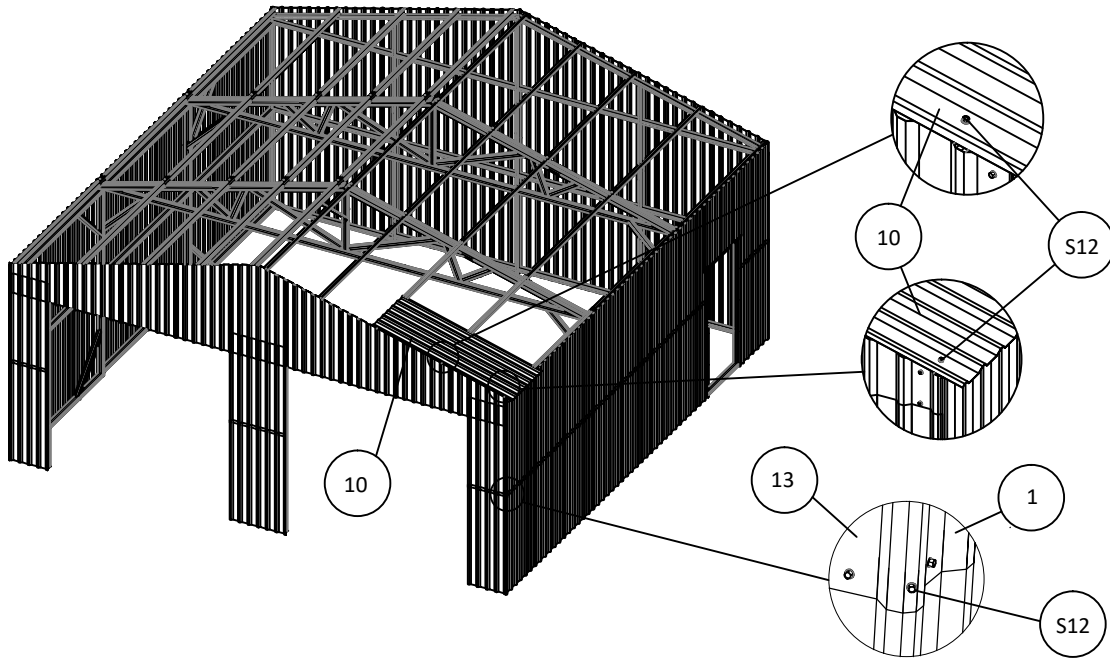TIPS: To install transparent panels, please refer to page 50.






PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty
	9	2		10	1		S12	32

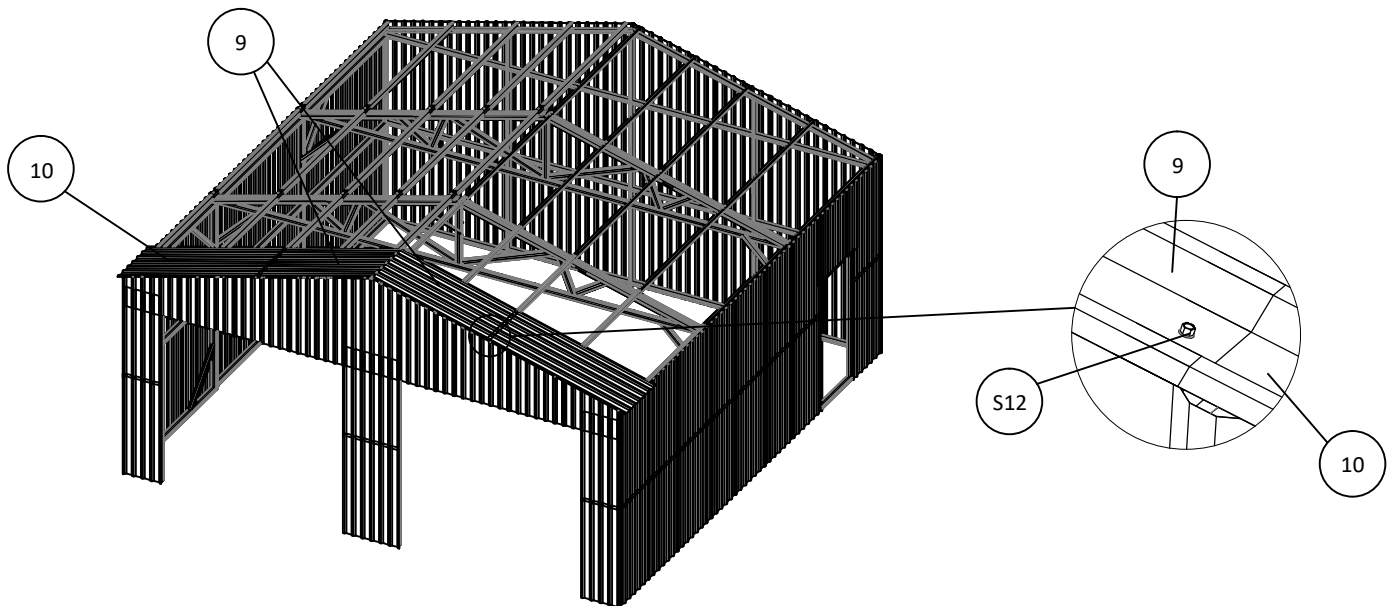
As shown in the figure, the four corners of the house are fixed with screws S12.








INSTALLATION OF WALL TILE

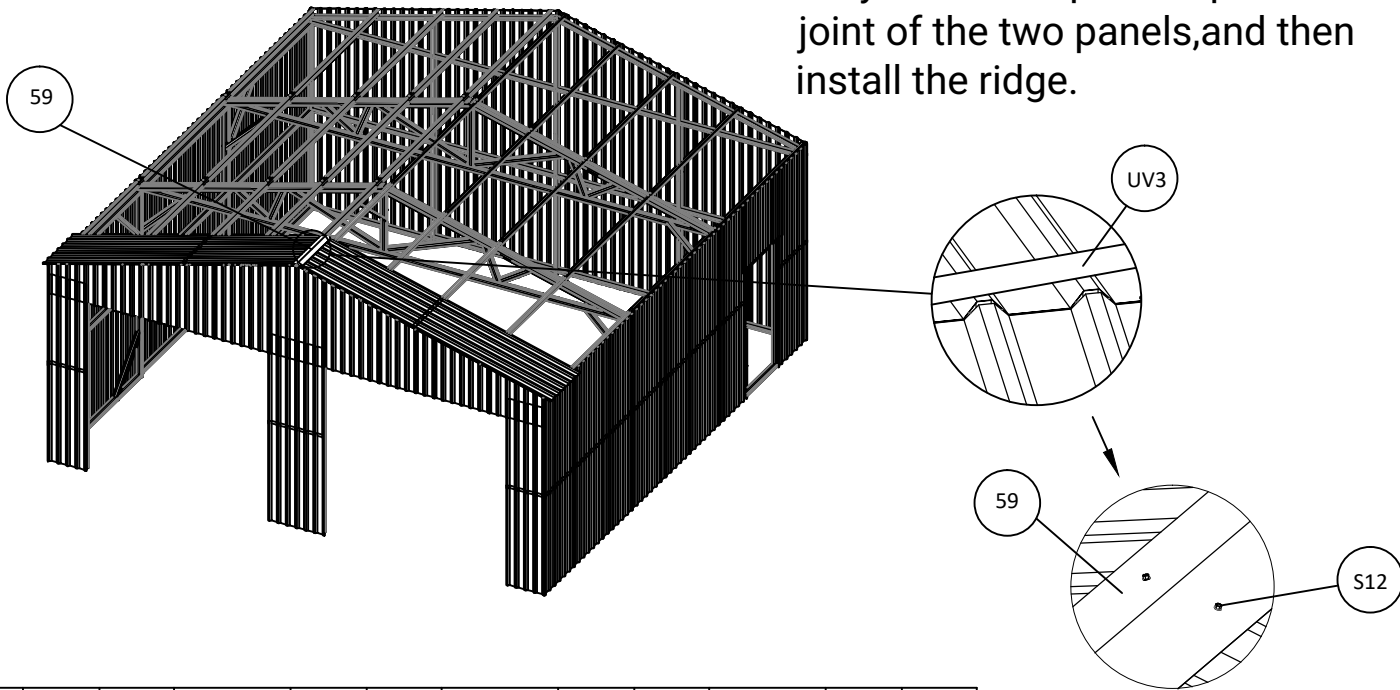PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty
	59	1		S12	2		UV3	1



As shown in the figure, first stick a layer of waterproof tape at the joint of the two panels, and then install the ridge.




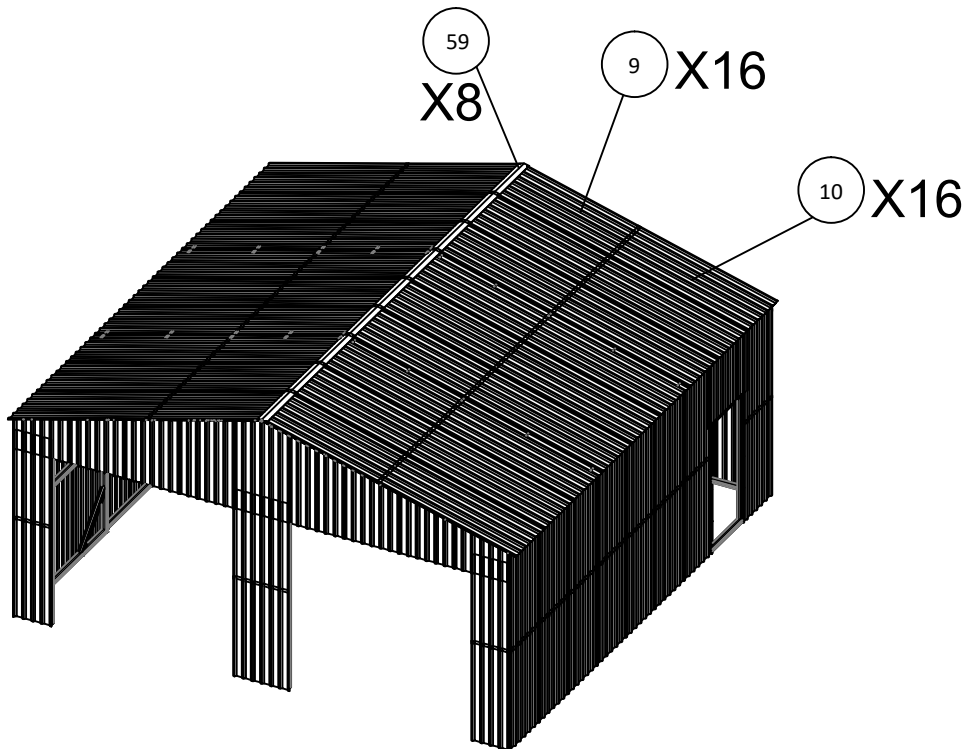

PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty
	9	16		10	16		S12	336		59	8




INSTALLATION OF WALL TILE

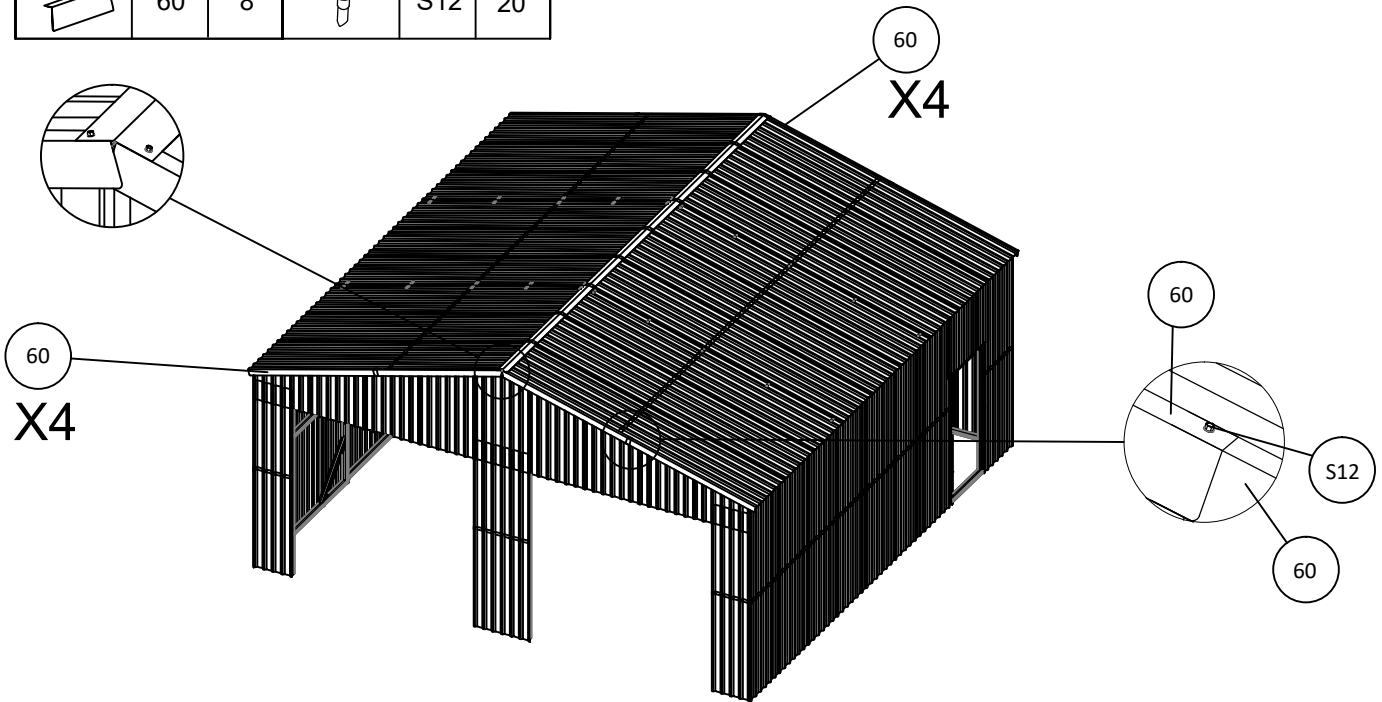

PART	NO.	Qty	PART	NO.	Qty
	60	8		S12	20




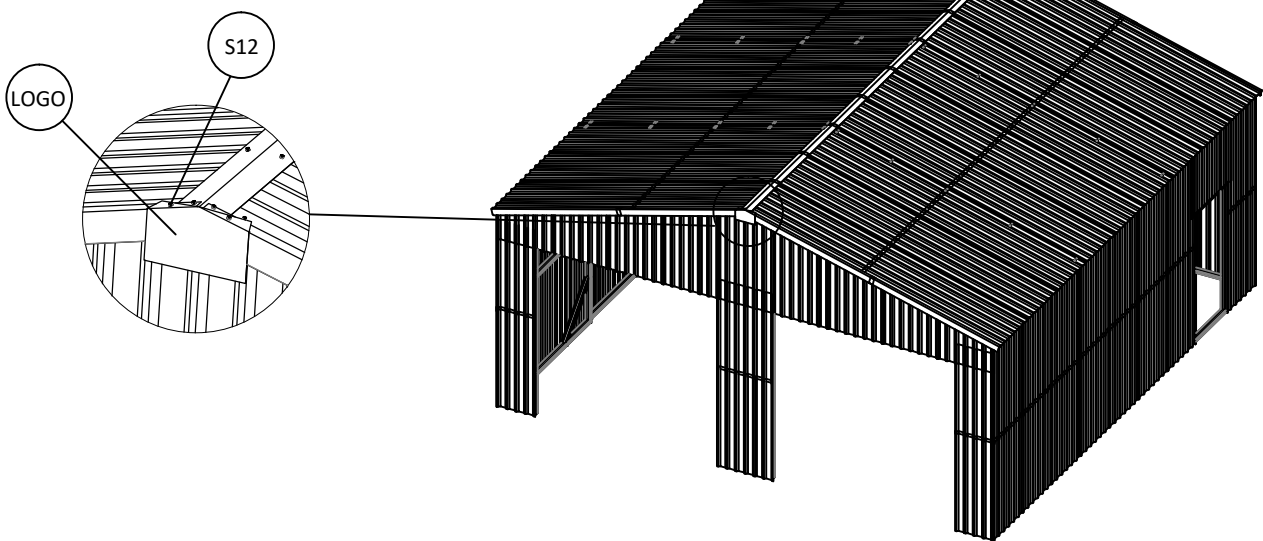


PART	NO.	Qty	PART	NO.	Qty
	LOGO	2		S12	4




INSTALLATION OF WALL TILE

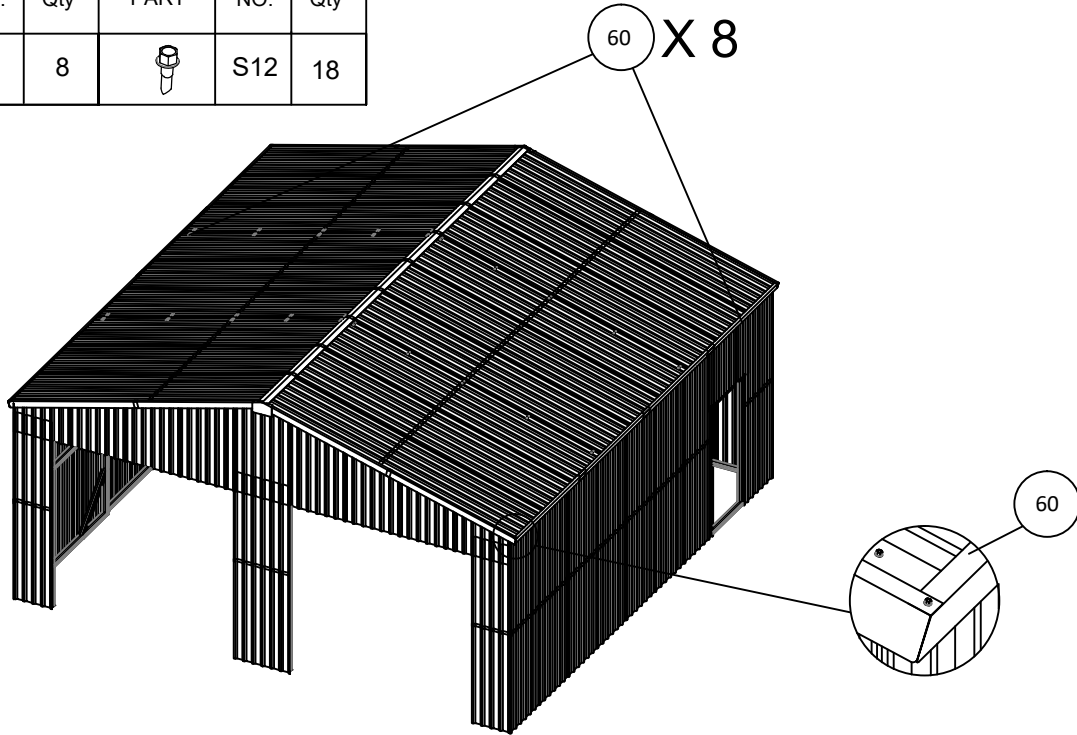PART	NO.	Qty	PART	NO.	Qty
	60	8		S12	18





PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty
	66	4		67	2		S12	24


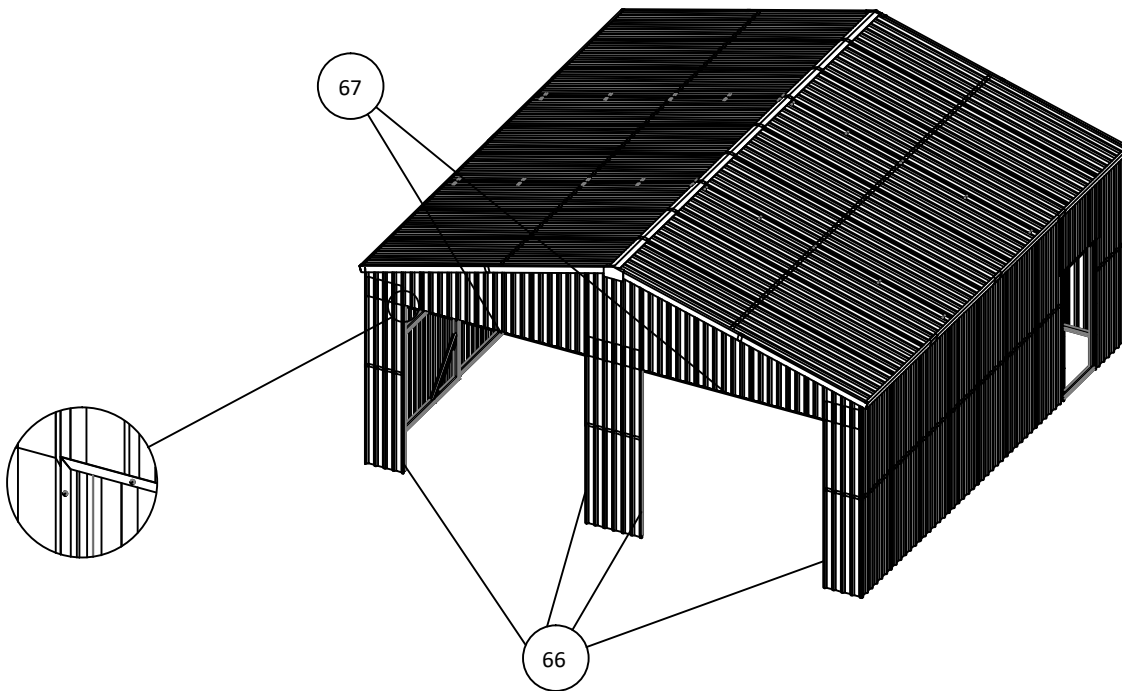


INSTALLATION OF SIDE DOOR


STEP 1.

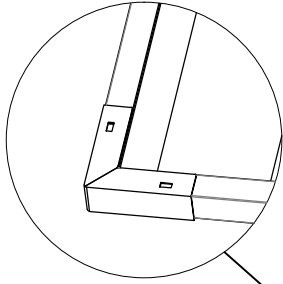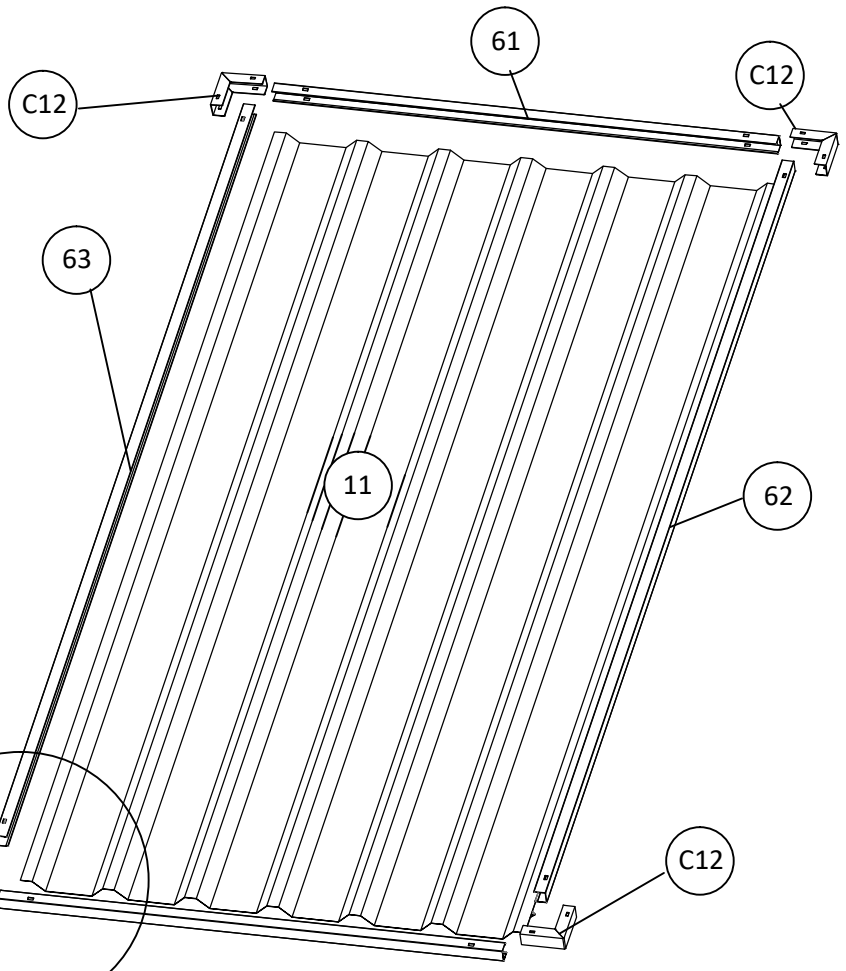

STEP 2.

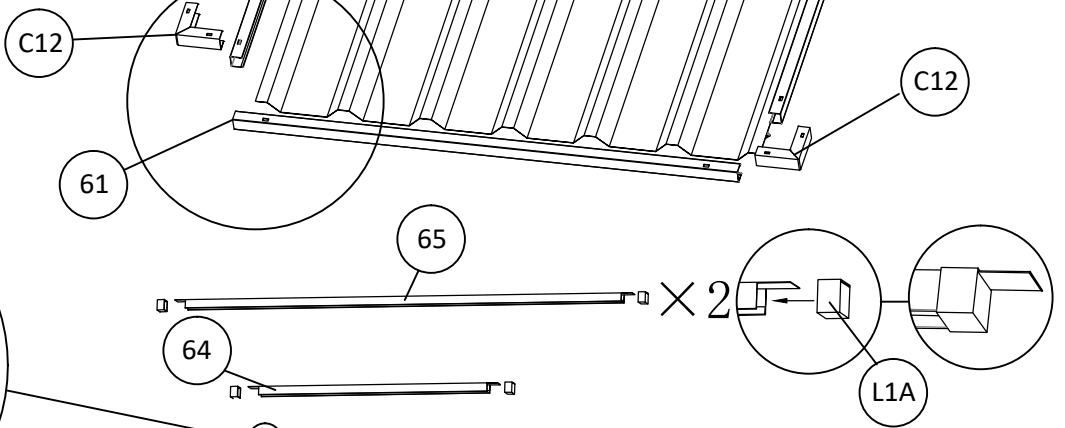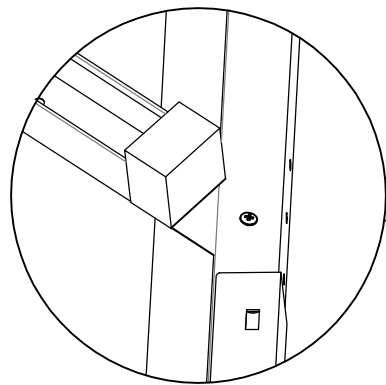



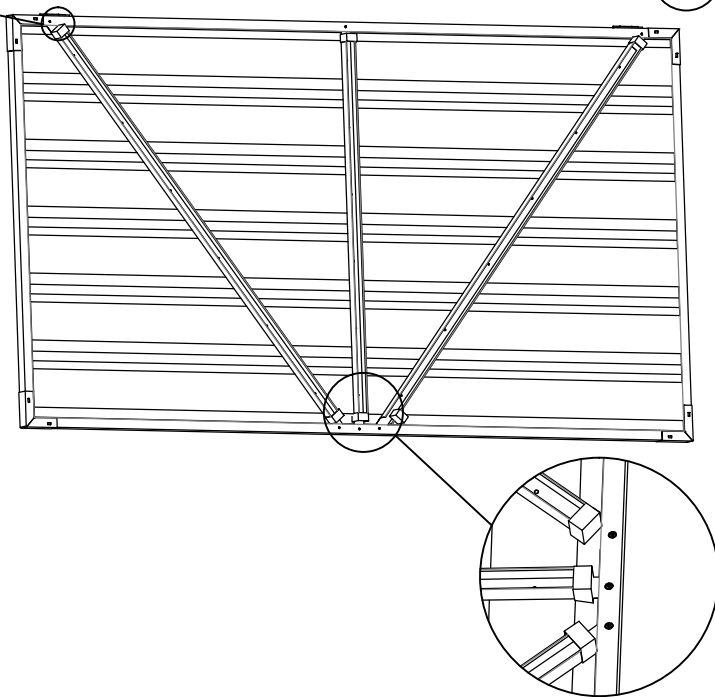


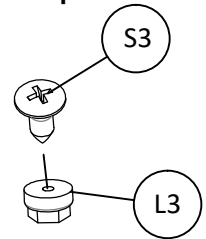
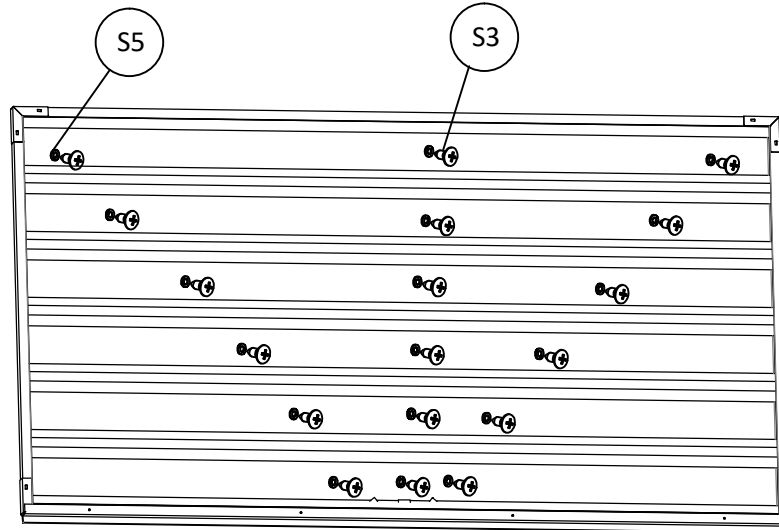
PART	NO.	Qty	PART	NO.	Qty
	11	1		61	2
	62	1		63	1
	65	2		S3	6
	C12	4		L1A	6
	64	1			




INSTALLATION OF SIDE DOOR

STEP 3.


PART	NO.	Qty	PART	NO.	Qty
	SH1	2		S3	18
	S7	6		L3	18
	S5	18	Cap all S3 tips with L3.		







STEP 4.


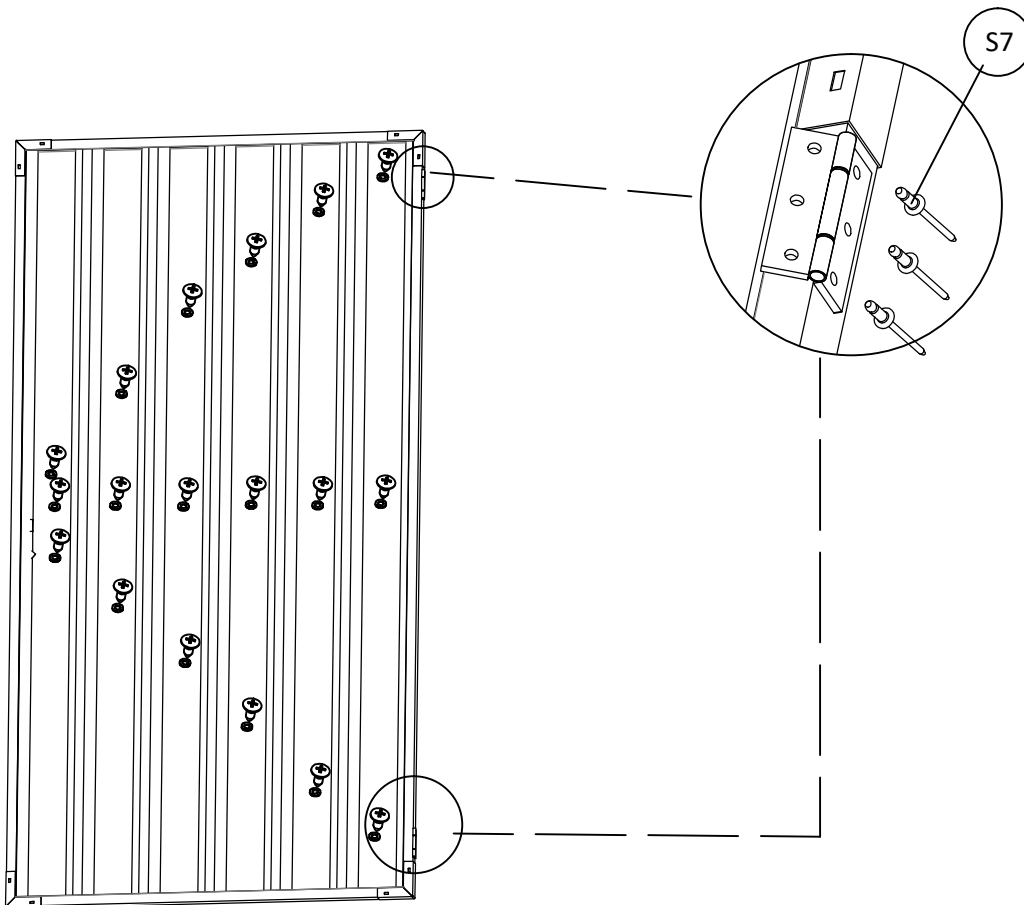


INSTALLATION OF SIDE DOOR



PART	NO.	Qty
	S7	6

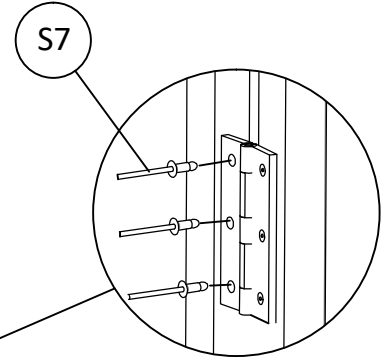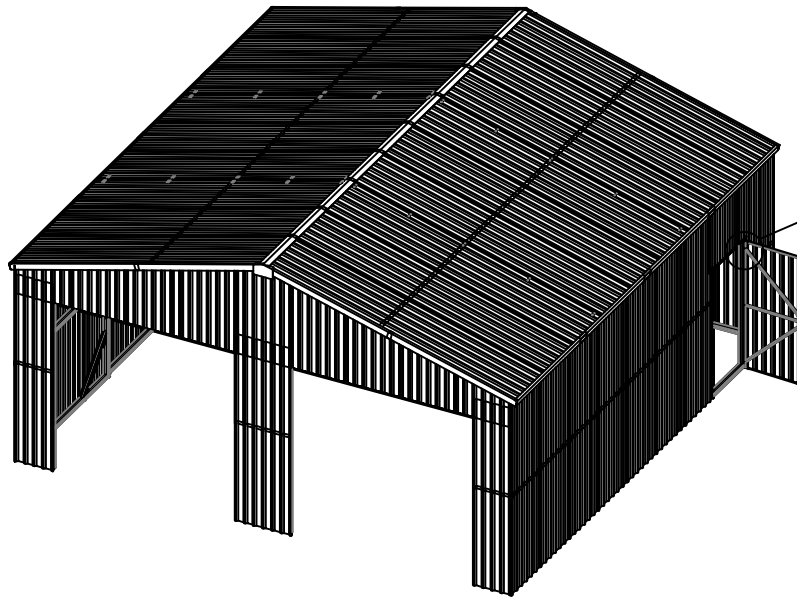

PART	NO.	Qty
	H13	1
	S7	6


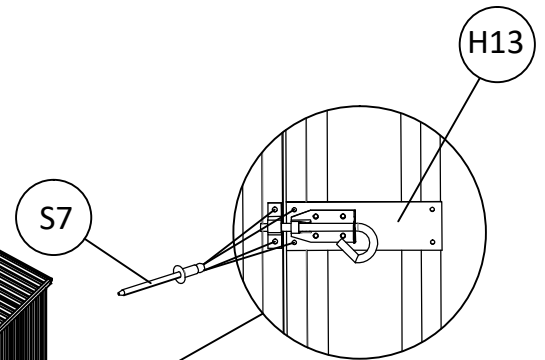
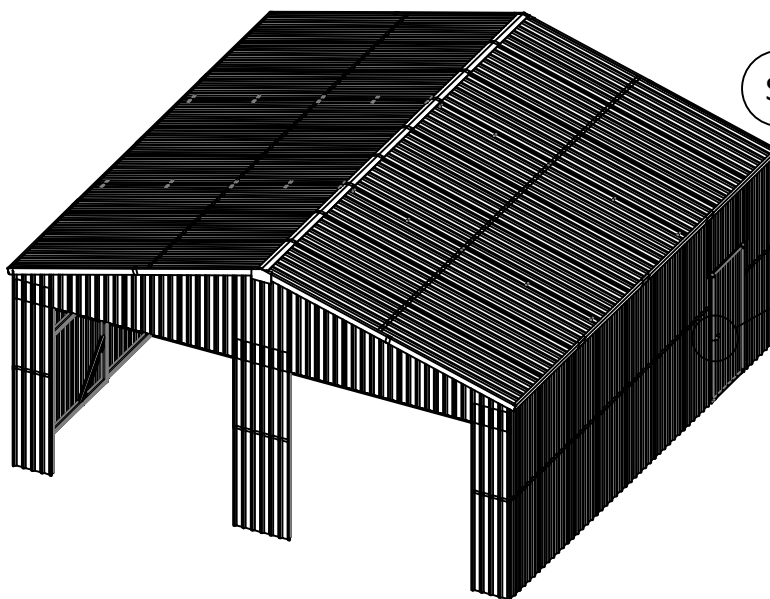


ASSEMBLY OF THE DOOR MAY REQUIRE THE FOLLOWING PARTS

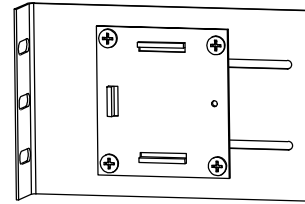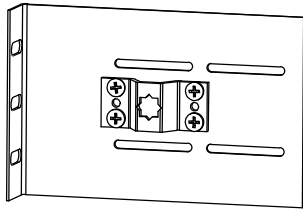

A

B

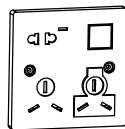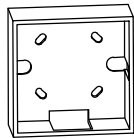

C

D


E

F

H

I

J



K

L

GR1







GR2




S12

S13


ASSEMBLY OF ROLLER DOOR

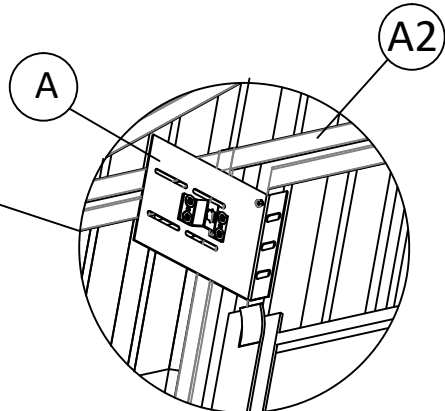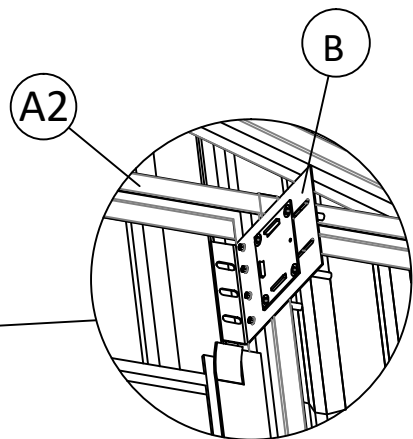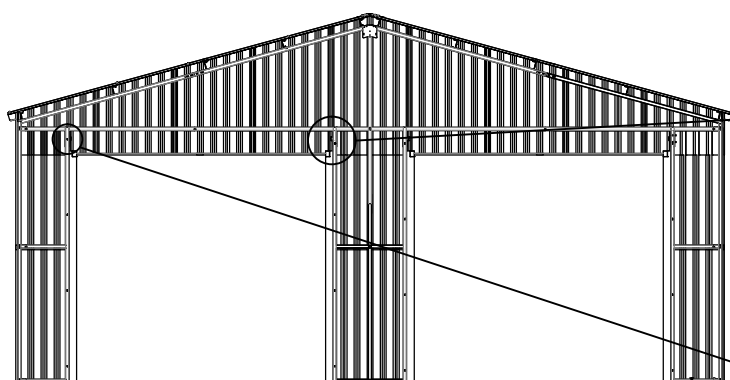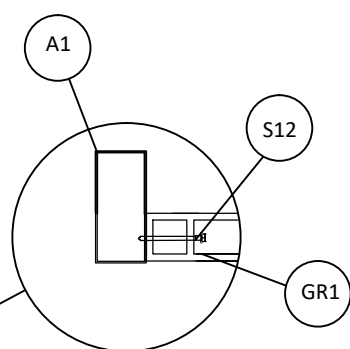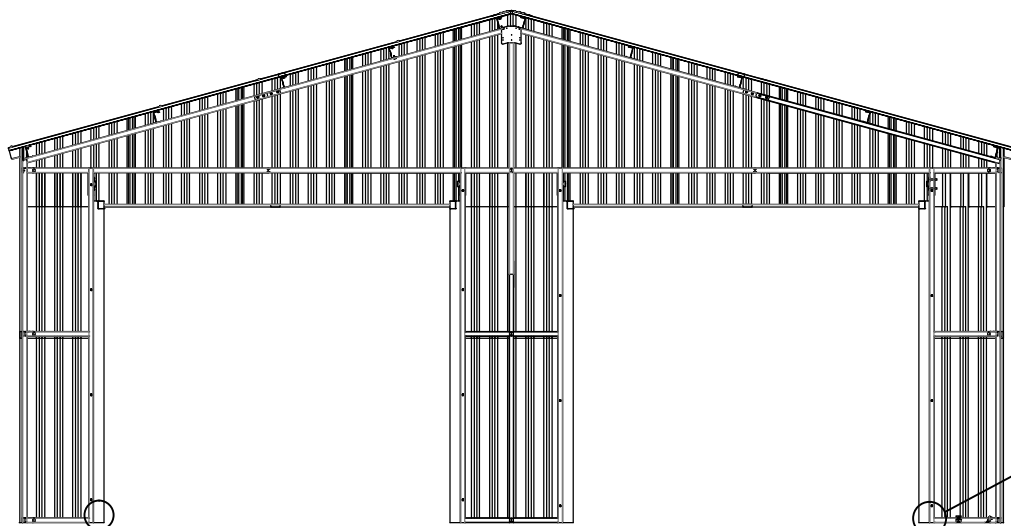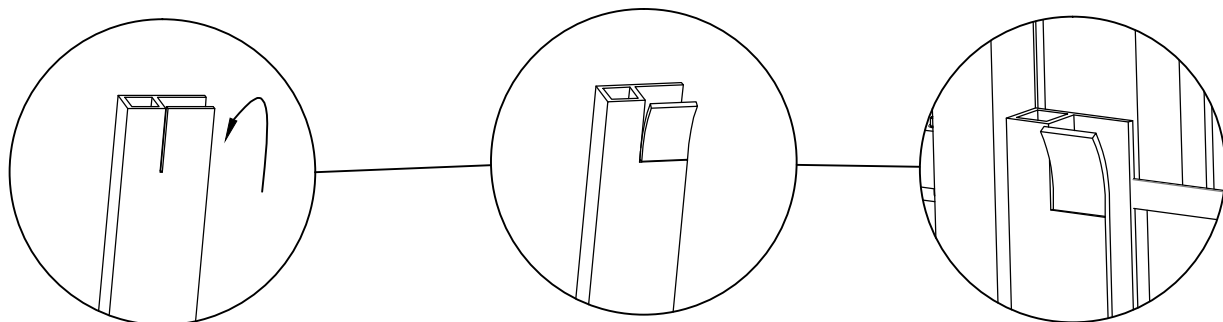




ASSEMBLY OF ROLLER DOOR

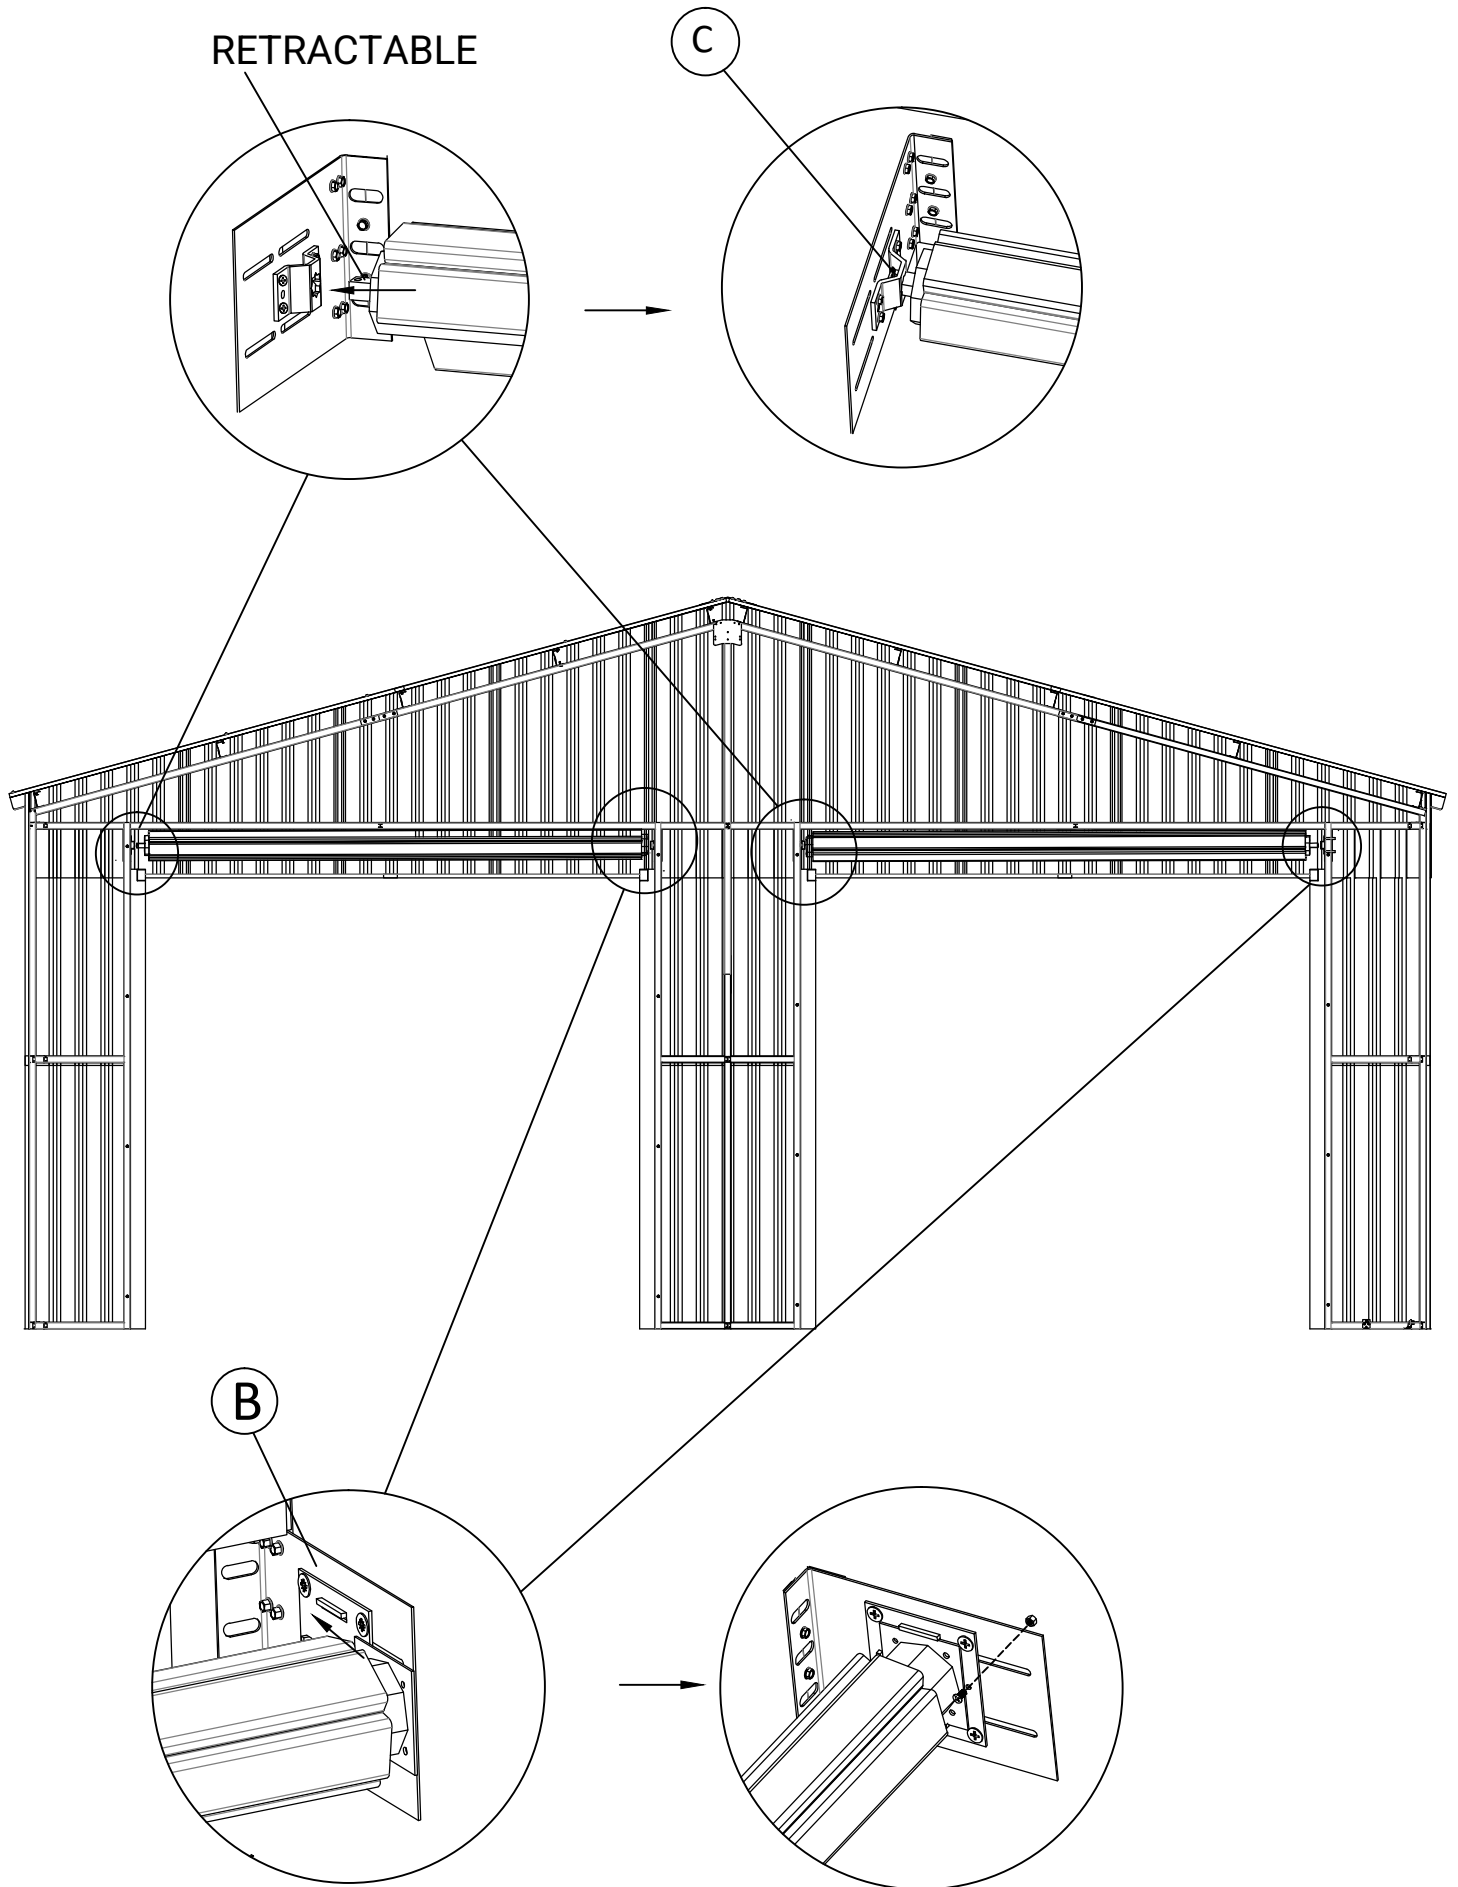

ASSEMBLY OF ROLLER DOOR

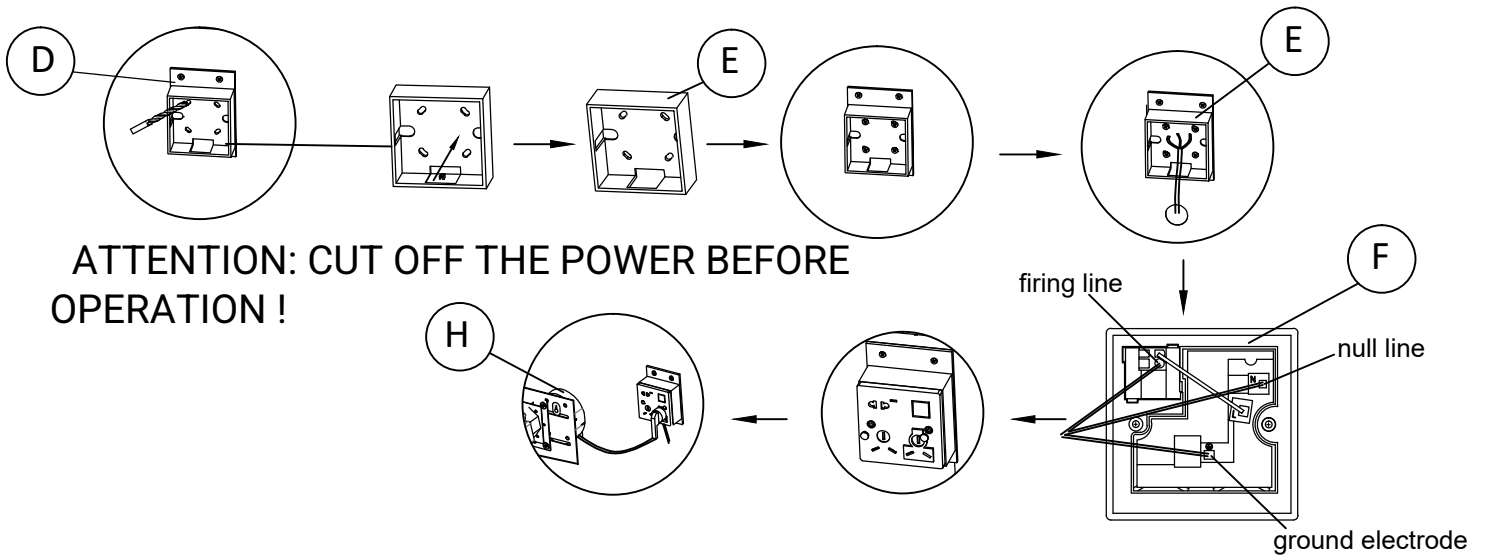

ATTENTION: CUT OFF THE POWER BEFORE OPERATION !

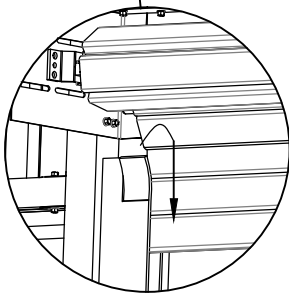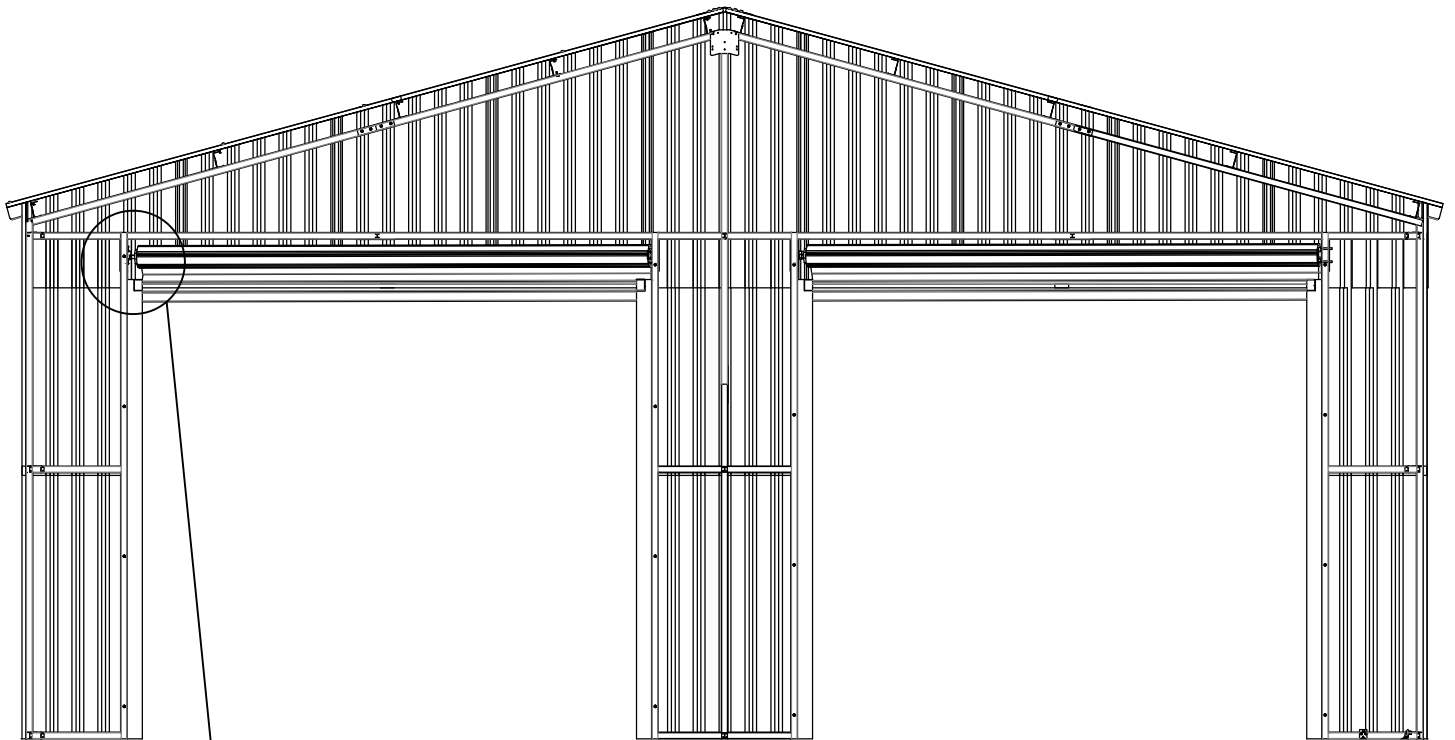

POWER-ON, THEN CONTROL THE REMOTE CONTROL, SLOWLY INSERT THE ROLLER DOOR INTO GR1 AND GR2.

ASSEMBLY OF ROLLER DOOR

1. ADJUST THE LOWER LIMIT





Assume that C is the direction in which the roller door goes down. Press the downward button on the remote control, the roller door goes down. If the electrical machine stops rotating when it reaches the position in picture D, adjust A to rotate in the direction of "+" until the roller door is parallel to the ground. If the electrical machine is still rotating downward when the roller door touches the ground, press the stop button, adjust A to rotate in the direction of "-".

2. ADJUST THE UPPER LIMIT

Press the upward button on the remote control, The roller door goes up. If the electrical machine stops rotating when it reaches the position in picture E, adjust B to rotate in the direction of "+", and pay attention not to slipping off the guide rail until it gets an appropriate position. If the roller door is still operating upward when it gets the appropriate position, press the stop button, adjust A to rotate in the direction of "-".


3. ADJUST THE UPPER AND LOWER LIMIT REPEATEDLY UNTIL IT OPERATES SMOOTHLY.

4. ROTATE THE ROLLER DOOR WITH THE ROCKER (IN PICTURE J) WHEN POWER CUT.

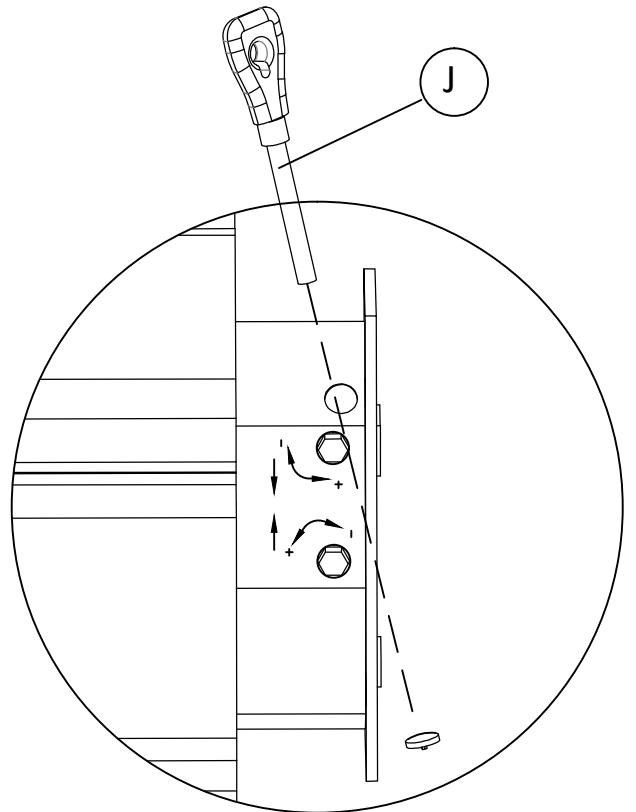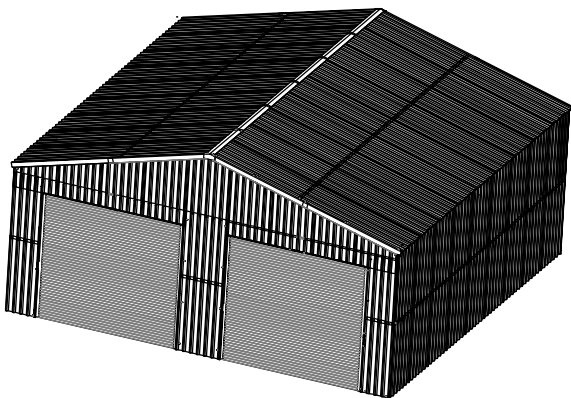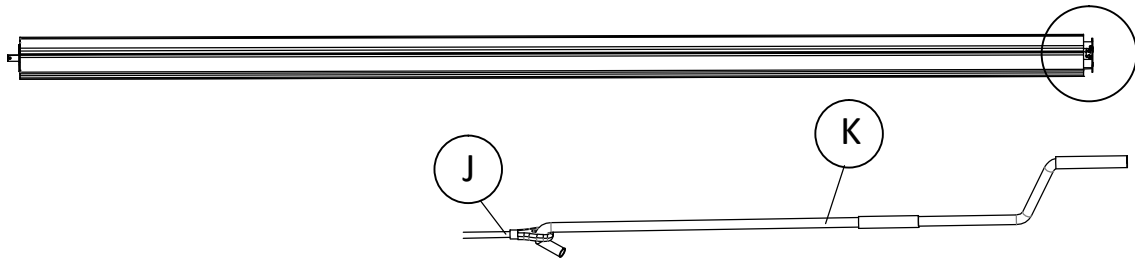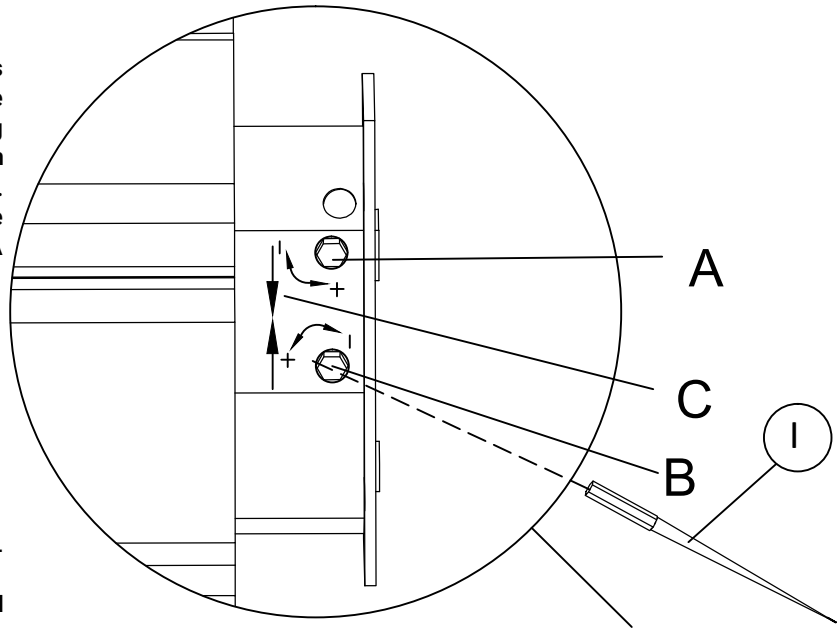


INSTALLATION OF FRAMEWORK

PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty
	39	3		38	4		35	2		36	1		37	2
	50	3		42	1		41	1		43	1		57	3
	S11	2		C72	2		S12	152						

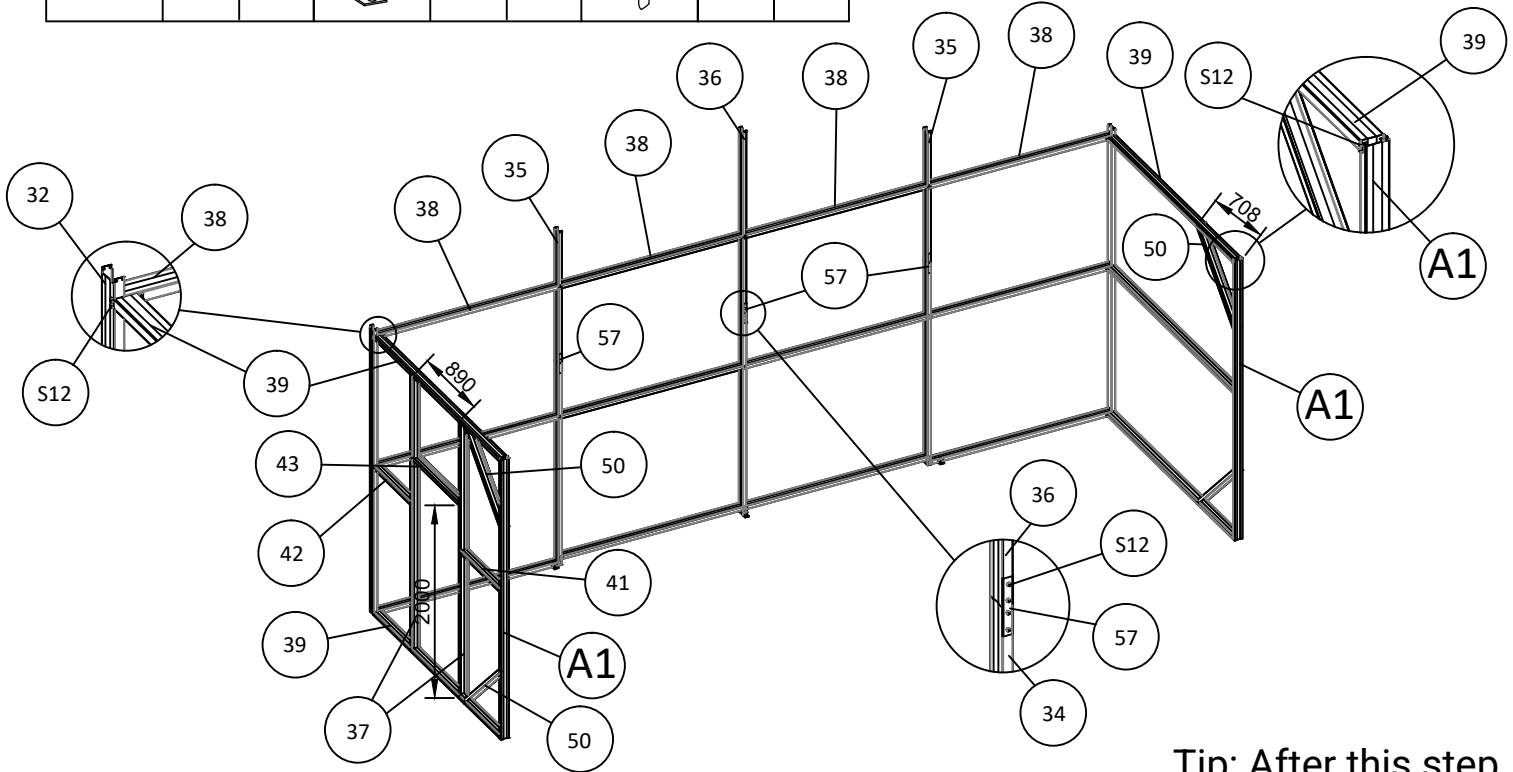





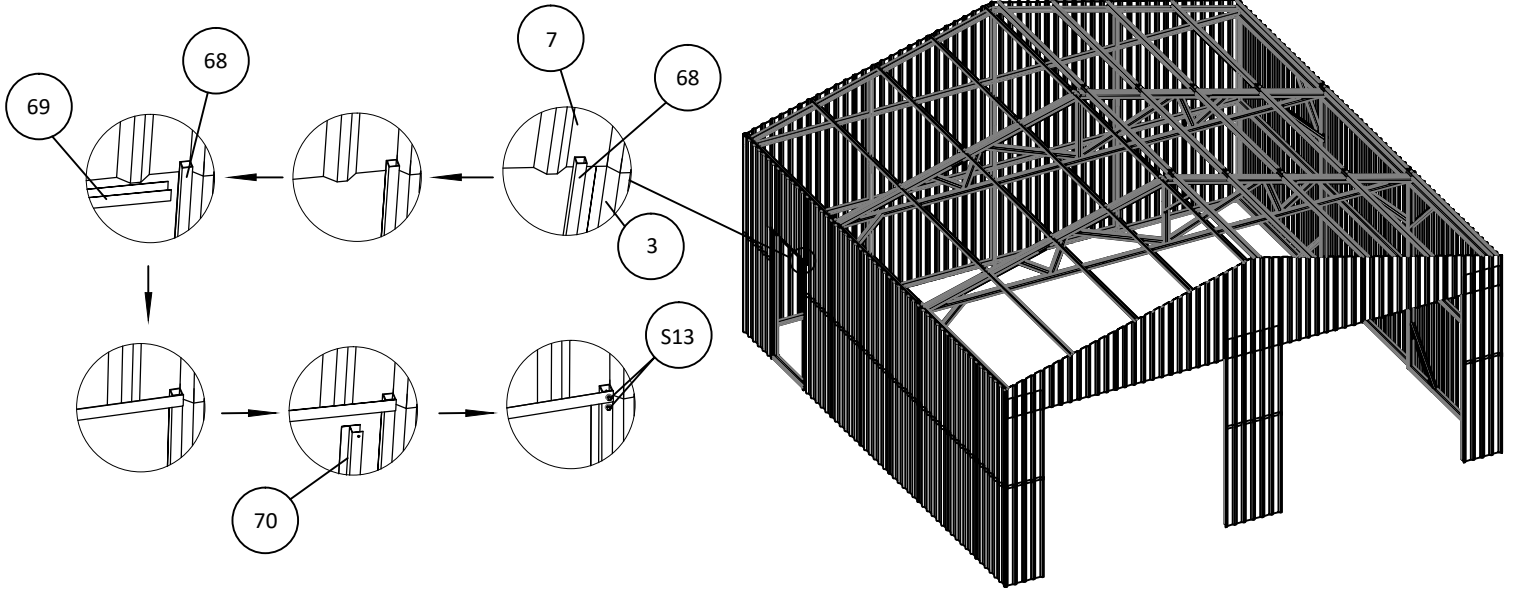
Tip: After this step, please go back to page 21 to continue the installation.

PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty
	3	4		7	1		8	1		S12	26

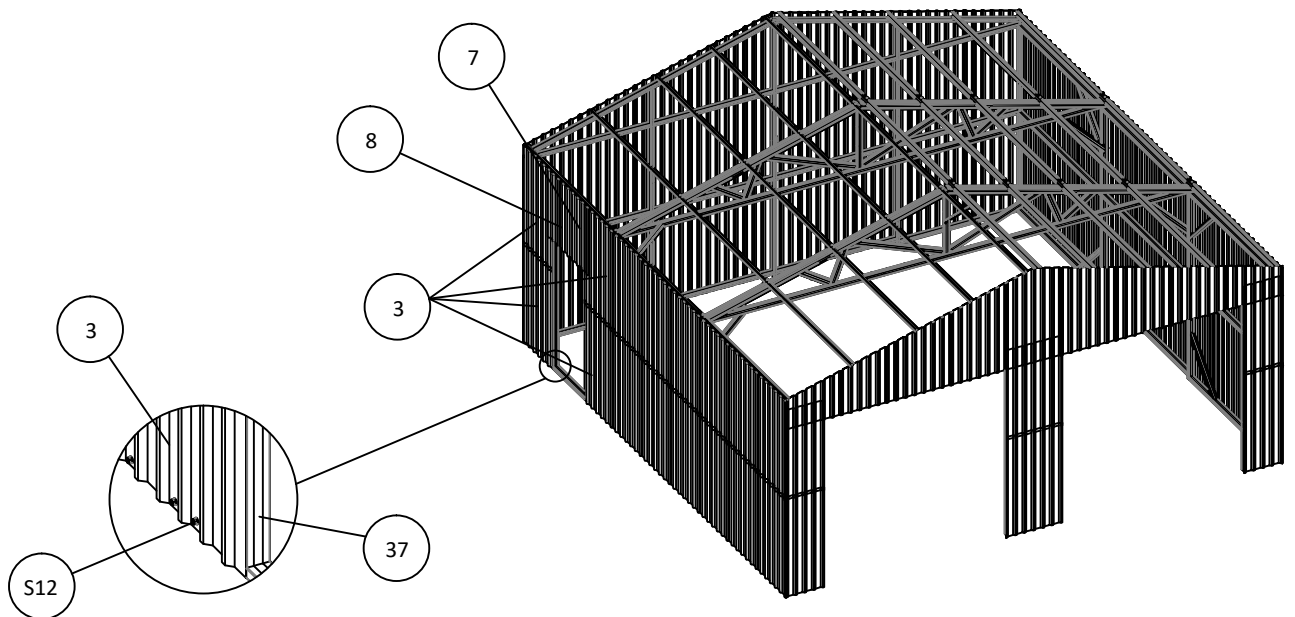


INSTALLATION OF FRAMEWORK

PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty	PART	NO.	Qty
	69	1		70	2		68	2		S13	13



Correct Demonstration

transparent panel with 1830mm length

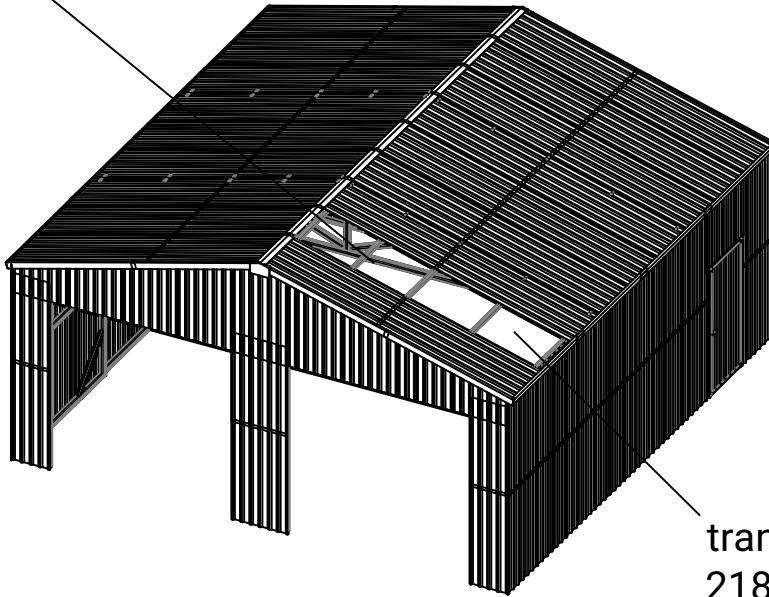


transparent panel with 2180mm length

The blank space is where the transparent panels are installed. Please install them according to the correct position. The two transparent panels are stacked together. Incorrect installation will cause water leakage. Please pay special attention.

Error Demonstration

transparent panel with 1830mm length

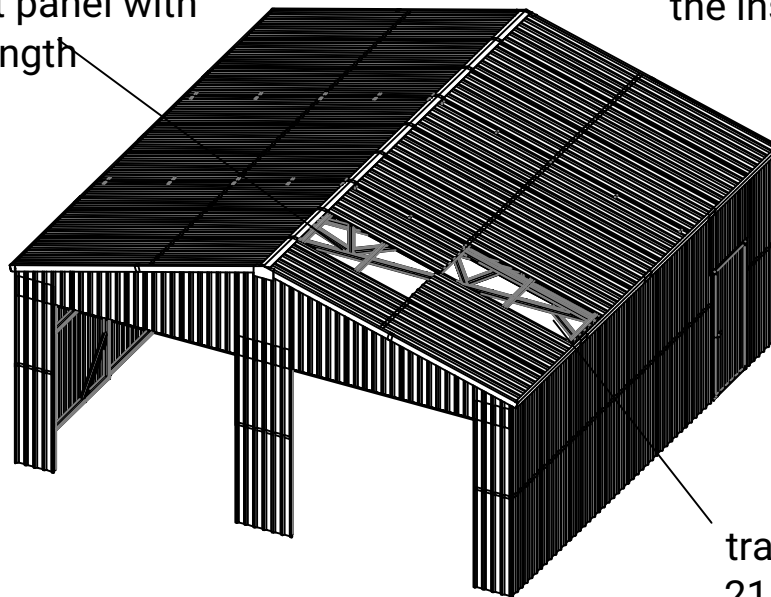

Tip After this step, please go back to page 36 to continue the installation.

transparent panel with 2180mm length

WARRANTY INFORMATION:

Please refer to our website for detailed warranty conditions and coverage. For the most up-to-date and comprehensive warranty information, visit www.tmgindustrial.com