



TVFRMB

OPERATING INSTRUCTIONS


TRAILER VALET
REV.07.05.2024

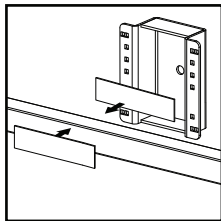


STEP 1:
Included with the Mount Bracket is a foam strip. Cut the strip into desired lengths. Using the one-sided adhesive, place the strips between the bracket and your trailer frame.

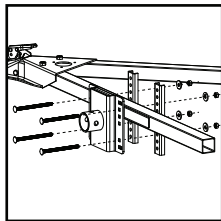

STEP 2:
Install the Full Range Mount Bracket to your trailer frame using the included hardware. Bracket can be installed in either orientation to fit your trailer frame.

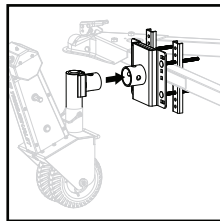

STEP 3:
Insert your Trailer Mover or Trailer Jack into the Full Range Mount Bracket.

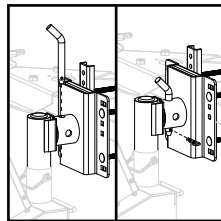


STEP 4:
Make sure to secure the Mount Bracket to the Trailer Mover or Trailer Jack utilizing the stow pin.

IMPORTANT SAFETY INFORMATION


For information and assistance, please visit our support page at TrailerValet.com or give us a call at (844) 846-9344.

Scan the QR code to the right for detailed safety and usage information.




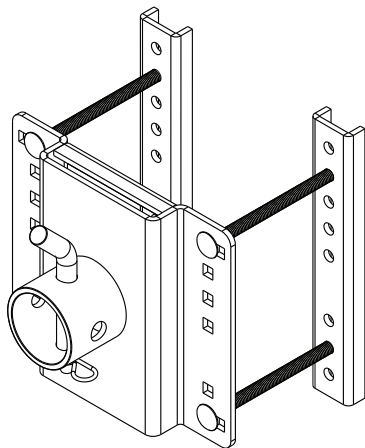


**FULL RANGE
MOUNT BRACKET**

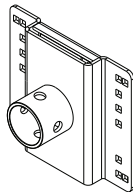


MOUNT BRACKET

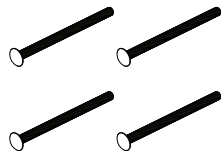


BOLTS (4X)




BRACKET CLAMPS

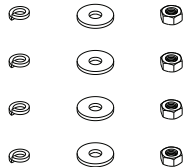

MOUNTING HARDWARE (4X)

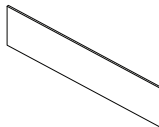

FOAM STRIP



STOW PIN