

# FOOTSIE PLUMB-FREE PEDICURE SPA CHAIR

## Tools You Will Need:

1 (one) Allen Key (included)

**Please Note - You Must Assemble  
The Spa In The Exact Order As  
Described Below**




1. Install the armrests to the bottom of the chair using two 1-1/8" long bolts (plus washers) and one 5/8" bolt (plus washer). The bolts are already in position on the chair bottom... simply remove them, position the armrest, and screw the bolts back in.

2. Install the seat slide/swivel to the bottom of chair using four 3/8" long bolts (note that the swivel should be angled as pictured to access the holes in the seat frame and the slide control should be facing toward the front of the chair on the left side).

3. Install the chair on the base. (Please note that you must remove the pedicure tub drawer from the base unit to attach the chair top to the base)

4. Secure the chair from the underside of the base by placing a lock washer and an assembly nut on each of the four bolts. (Note that the brass thread inside the assembly nut must face toward the floor to insure proper installation).

5. Attach the footrest to the footrest assembly.

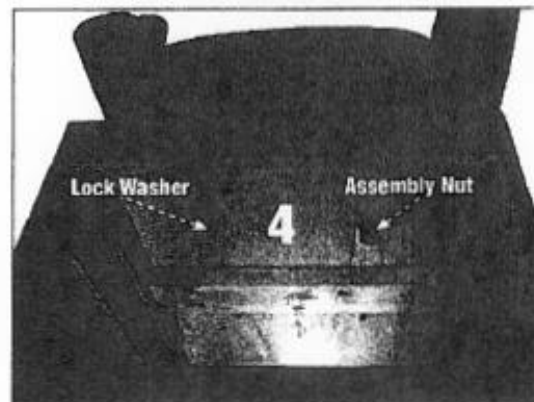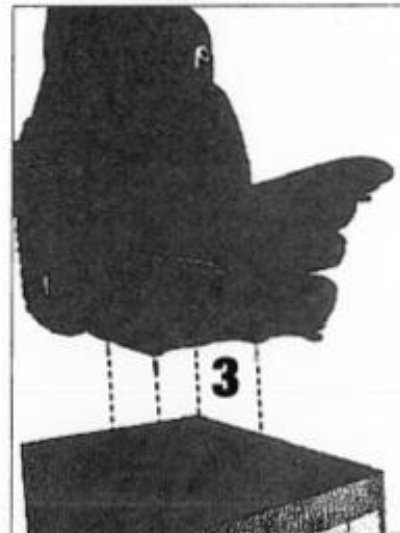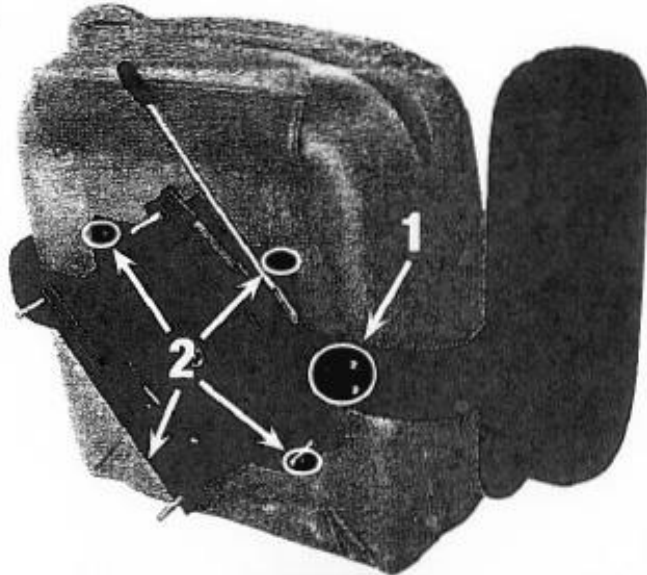

PS93