


CS, KS ceiling installation:

Remove end caps and cut track/s to desired length with a hack saw. If your tracks are spliced, it is best to cut the ends with the end caps. The spliced area has been machine cut for a smooth joint. Mark the ceiling 3" away from the wall or at the desired projection. Mark the ceiling clip screw holes, placing one within 6" of the end of each track section and one near the middle. Pre-drill and install anchors if mounting in hollow ceiling. Do not tighten screws completely yet.

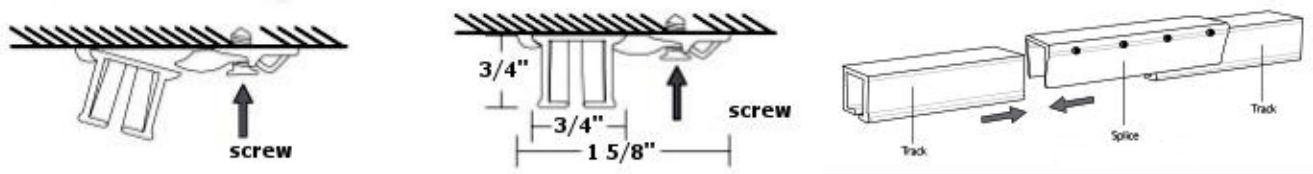


Place the front lip of the track into the bracket as shown, applying upward pressure until the track clicks into the bracket. Make sure the screw is loose enough to allow the retainer to flex. Tighten the screws to secure the track. Alternately, the ceiling clips can be clicked onto the track, then lifted up to the ceiling and screwed in place. When splicing, slide the splice piece onto one end of the track, butt the second section to the first and slide the splice piece over, centering on the joint. Secure with screw.

Corner bend piece: It is often helpful to install the corner bend first. Mark the ceiling 3" away from the wall on each side of the corner. Click a ceiling clip on each end of the bend a few inches from the end. Slide a splice piece on each end also. Lift the bend into place and mark the screw holes. Install anchors, if necessary and secure the bend to the ceiling. Measure and cut the straight tracks and install following the instructions above.

CS, KS ceiling installation:

Remove end caps and cut track/s to desired length with a hack saw. If your tracks are spliced, it is best to cut the ends with the end caps. The spliced area has been machine cut for a smooth joint. Mark the ceiling 3" away from the wall or at the desired projection. Mark the ceiling clip screw holes, placing one within 6" of the end of each track section and one near the middle. Pre-drill and install anchors if mounting in hollow ceiling. Do not tighten screws completely yet.

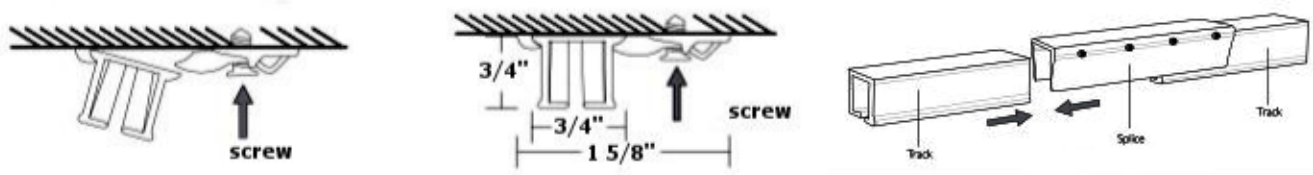

Place the front lip of the track into the bracket as shown, applying upward pressure until the track clicks into the bracket. Make sure the screw is loose enough to allow the retainer to flex. Tighten the screws to secure the track. Alternately, the ceiling clips can be clicked onto the track, then lifted up to the ceiling and screwed in place. When splicing, slide the splice piece onto one end of the track, butt the second section to the first and slide the splice piece over, centering on the joint. Secure with screw.

Corner bend piece: It is often helpful to install the corner bend first. Mark the ceiling 3" away from the wall on each side of the corner. Click a ceiling clip on each end of the bend a few inches from the end. Slide a splice piece on each end also. Lift the bend into place and mark the screw holes. Install anchors, if necessary and secure the bend to the ceiling. Measure and cut the straight tracks and install following the instructions above.