


Principal, Heavy Duty H, Professional

Leverlock bracket instructions

The top of the bracket will be even with the top of the track. Install a screw into the wall, using an anchor if necessary. Leave the screw protruding about 1/8". Drop the bracket slot down onto the screw. Add a second screw lower in the slot, if desired, to stabilize the bracket.

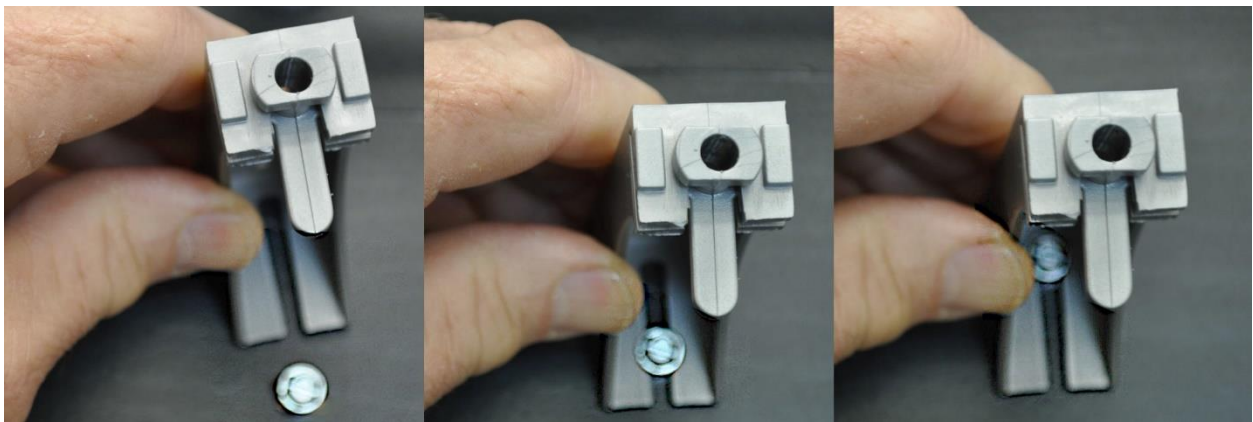

Make sure the lever is in the down position. Push the track straight onto the bracket. Rotate the lever up in either direction ¼ turn, locking the track to the bracket. As simple as that.

