




Dundalk Leisurecraft Premium Shower Hardware

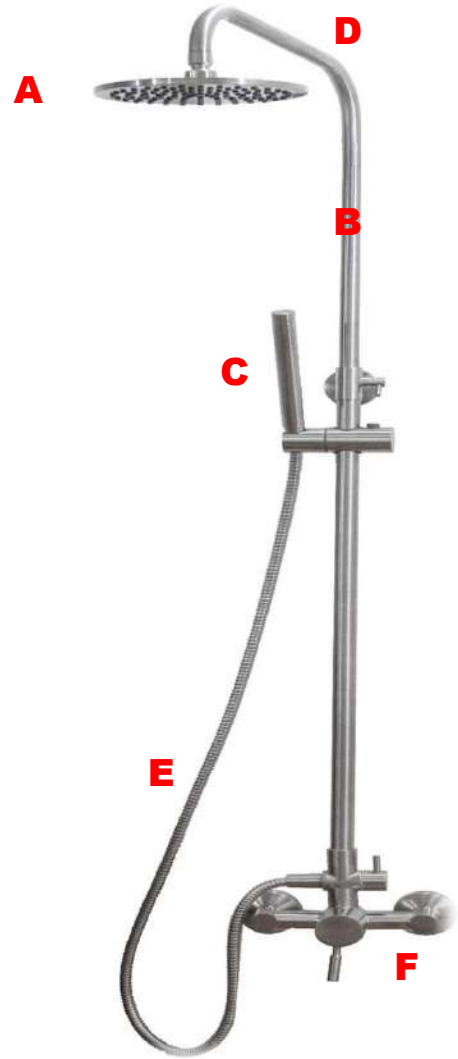

Contents

- A- Shower Head
- B- Shower Pole with Wand Holder
- C- Wand
- D- Shower Top
- E- Hose
- F- Handle Assembly
- G – Shower Support
- H Shower Handle Flanges
- I- Adapters(2)
- J- Hardware

Before You Begin!

Rubber washers go in each connection, ensure they do not fall out in assembly.
Use plumbers thread tape for connections where needed.

**Ensure to drain the shower completely in cold temperatures to prevent water from freezing inside hardware causing irreparable damage.*

Requirements

- Thread tape
- Small level
- Measuring tape
- Drill and drill bit
- Adjustable wrench or crescent wrench



Dundalk Leisurecraft Premium Shower Hardware



Handle Assembly (F)



(Fig. 1)

1. Start the assembly of your premium shower hardware kit by attaching the shower pole (B) to the top threads of the handle assembly (F).

(Fig. 1)

Tighten with wrench if needed.



Shower Hose (E)



(Fig. 2)

Locate the Shower Hose (E)

Note that the hose has 2 different ends on it.

The end with the nut attaches to the handle while the rounded end attaches to the shower wand.

(Fig. 2)




(Fig. 3)

Unscrew the plastic cap on the end with the hex nut.

(Fig. 3)

Secure to the threaded stem on the side of the shower handle.

(Fig. 4)

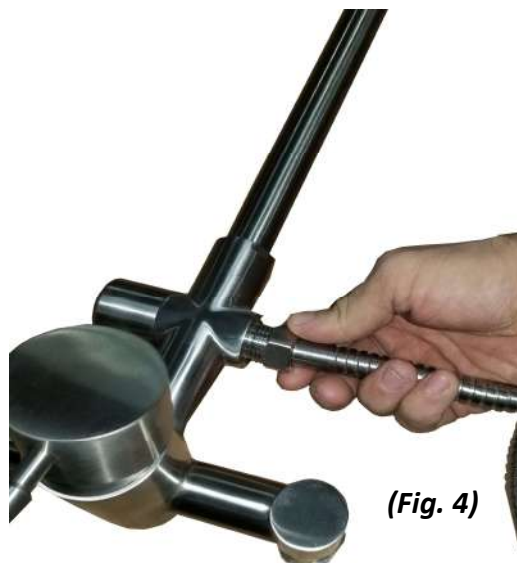

(Fig. 4)

Tighten with wrench if needed.



Dundalk Leisurecraft Premium Shower Hardware



Unscrew the plastic cap on the rounded end and thread on the shower wand.
(Fig. 5)

(Fig. 5)



Attach the shower top to the shower pole.

This will require a bit of pressure to get the threads started.

Screw on shower head to the Shower top.



Insert the rubber washers into the shower handle and thread the adapters in.

Use wrenches to tighten.


Both adapters should be in the same position in each opening.



Dundalk Leisurecraft Premium Shower Hardware



Locate the desired height for your shower handle. Locate the center point then measure 3" (76mm) from it each way.
(Fig. 6)

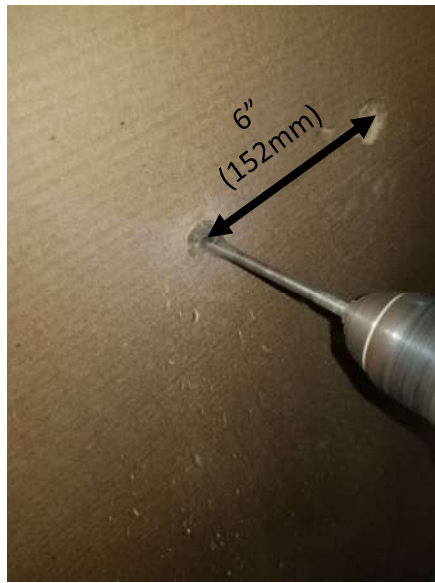

With your hole locations marked, drill through the board using a bit large enough that the adapter will fit through.

Repeat for the second hole in the same manner.

Holes should be 6" (152mm) centered.



Loosen the set screws on the shower support with the provided hex key.


Slide the shower support over the stem on the shower pole.

Do not tighten yet.



Dundalk Leisurecraft Premium Shower Hardware

Premium Shower Hardware Assembly

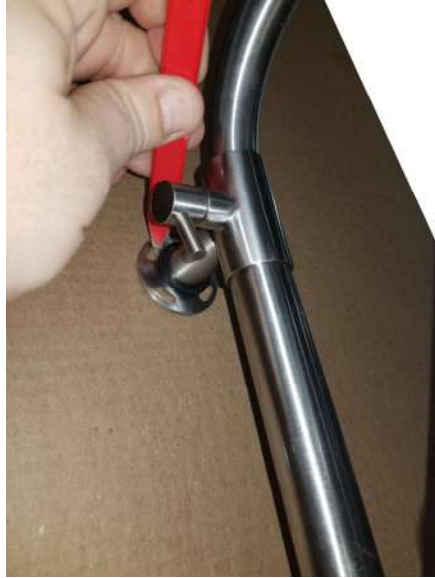

Place the adapters on the back of the shower handle into the drilled holes and level up the shower assembly.

Using a pencil, make a mark in each of the slots in the shower support.



Using the provided screws, fasten the shower support to the wall of the shower. Slide the shower support cover over the shower support.



Insert the stem of the shower pole back into the shower support, ensure the pole is straight and then tighten the set screws.

Hook up your water lines to the adapters in the back and enjoy your shower.