




SPIDERWEBSHADE 

Bronco2D Install Instructions:
***patent pending design**


Welcome to the SPIDERWEBSHADE® Bronco® family. Here are a few tips to make your install easier. No tools are needed for this install SPIDERWEBSHADE® will provide everything you will need to make this install a breeze.

1 Locate the threaded mounting points on the left and right corners of the roll cage and hand tighten the Bronco nubs. (Only hand tight)

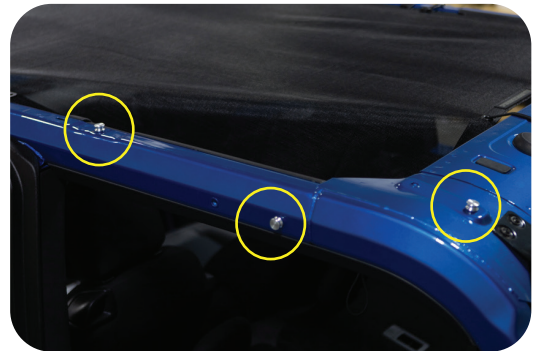


2 Using the hook in the front left and right corner of the shade attach to the forward most mounting hole on the out side of the roll cage.

Using the second hook attach to the third mounting hole from the windshield on top.

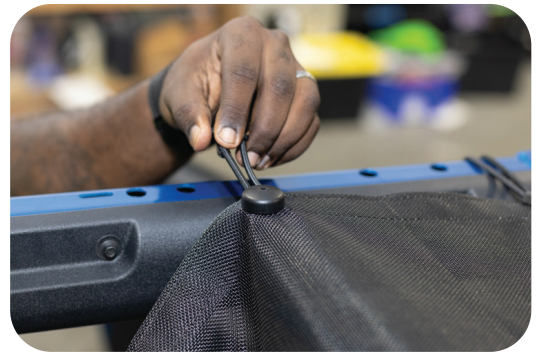


3

Thread spider ball cord through the bottom of grommet and attach through the top of the left and right footmans loop. Then attach the front hooks to the freedom panel mounting points.

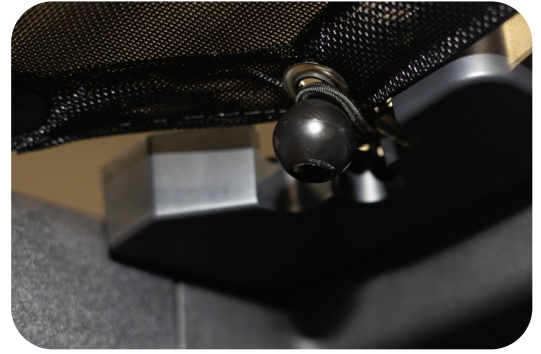


4

Attach the rear left and right side stay-puts to the Bronco nubs.

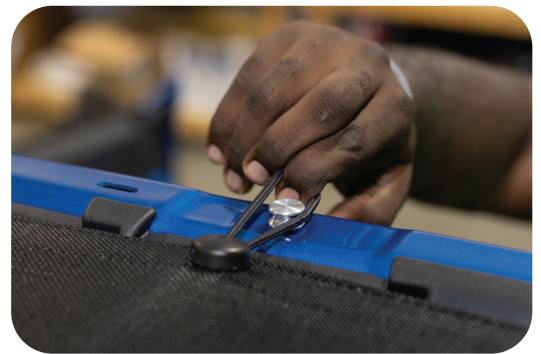

5

Use the long spider balls to connect the rear of the shade to the rear roll bar

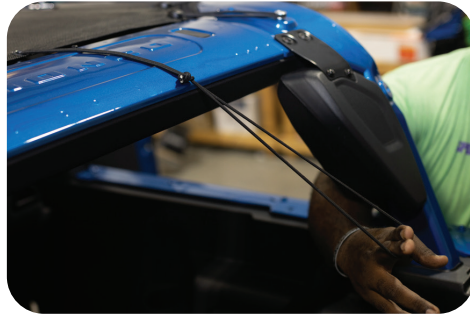

SPIDERWEBSHADE.COM  **BUY AMERICAN**