




The Original
SPIDERWEBSHADE

JL4Dkni Install Instructions:

*patent pending design

Welcome to the SPIDERWEBSHADE® JL family. Here are a few tips to make your install easier. You will need a few tools for this install however, Jeep® and SPIDERWEBSHADE® provide everything you will need to make this install a breeze.

1 Use the socket in the Jeep® toolkit provided to remove your windshield wipers. (refer to your owner's manual)

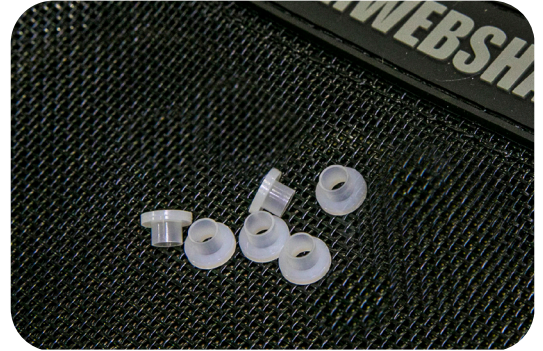

2 Use the ratchet in the Jeep® toolkit provided to remove the (4) T40 windshield bolts and carefully lower the windshield onto the hood pads.




3

Attach the (4) header clips to the header rail and then reconnect your windshield and wipers.


**4**

Locate the correct (6) factory T25 screws to remove and add the custom SpiderNubs then replace the (6) factory T25 screws. 3 per side. Add in flat side up and tighten flush, don't over tighten.

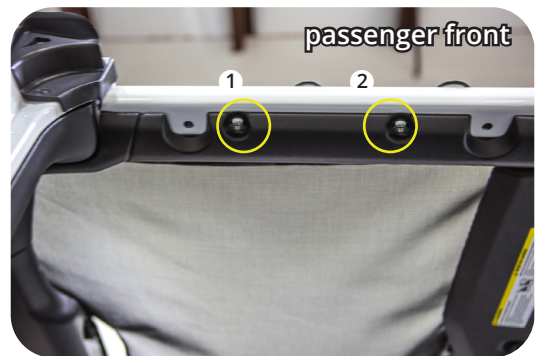**5**

Attach the (6) shock cord loops to the new SpiderNub mounting locations. Use the provided leverage strap to assist and your install is complete.



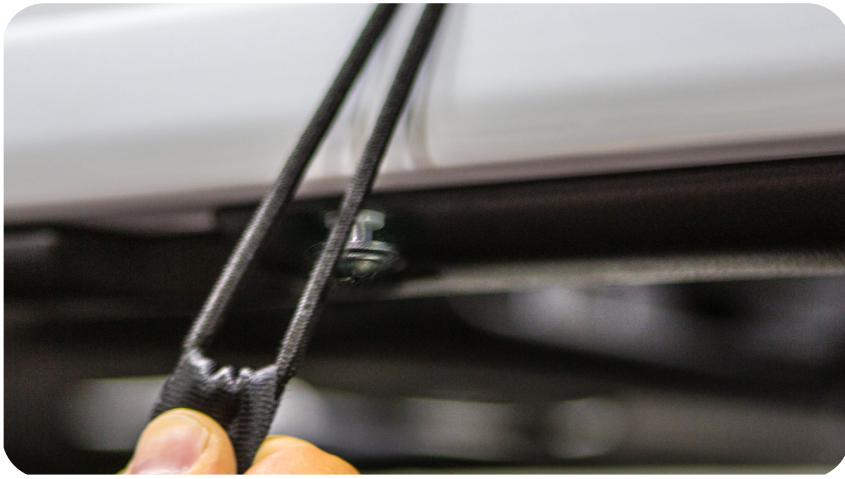

SPIDERWEBSHADE.COM  **BUY AMERICAN**