




## JLkini Install Instructions:

\*patent pending design

Welcome to the SPIDERWEBSHADE® JL family. Here are a few tips to make your install easier. You will need a few tools for this install however, Jeep® and SPIDERWEBSHADE® provide everything you will need to make this install a breeze.

- 1 Use the socket in the Jeep® toolkit provided to remove your windshield wipers. (refer to your owner's manual)

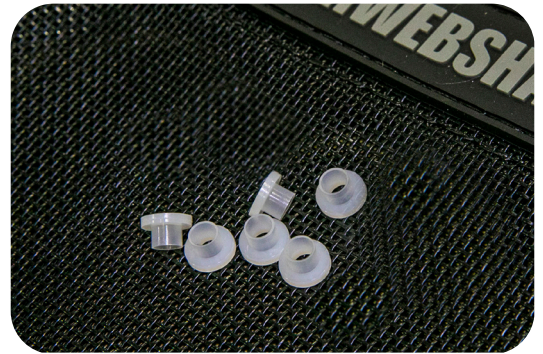

- 2 Use the ratchet in the Jeep® toolkit provided to remove the (4) T40 windshield bolts and carefully lower the windshield onto the hood pads.




3

Attach the (4) header clips to the header rail and then reconnect your windshield and wipers.



4


Locate the correct (6) factory T25 screws to remove and add the custom SpiderNubs then replace the (6) factory T25 screws. 3 per side. Add in flat side up and tighten flush, don't over tighten.

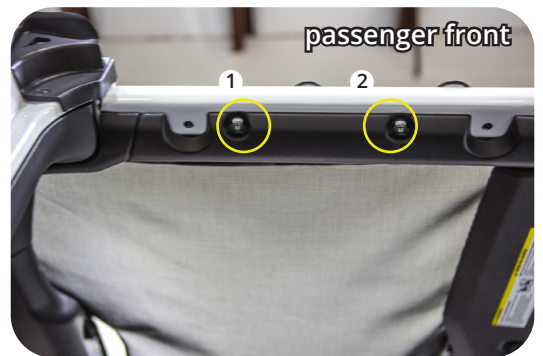

5

Attach the (6) shock cord loops to the new SpiderNub mounting locations. Use the provided leverage strap to assist and your install is complete.



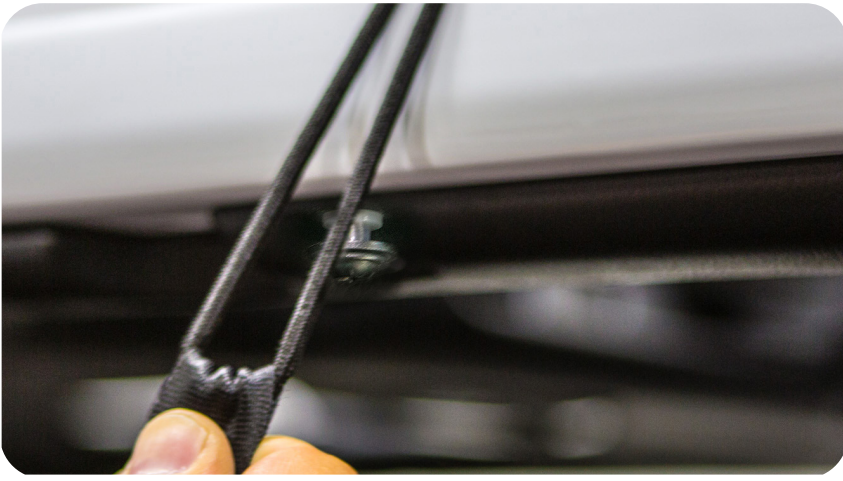


**SPIDERWEBSHADE.COM**  **BUY AMERICAN**



## JL4D Rear Install Instructions:


\*patent pending design

Welcome to the SPIDERWEBSHADE® JL family. Here are a few tips to make your install easier. You will need a few tools for this install however, Jeep® and SPIDERWEBSHADE® provide everything you will need to make this install a breeze.

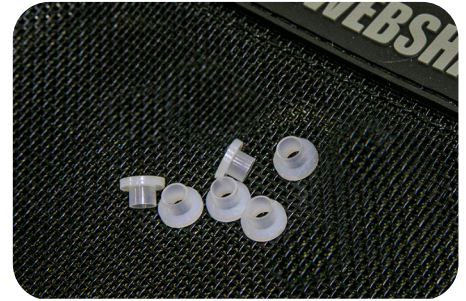

1

Locate the correct (6) factory T25 screws to remove and add the custom SpiderNubs then replace the (6) factory T25 screws. 3 per side.

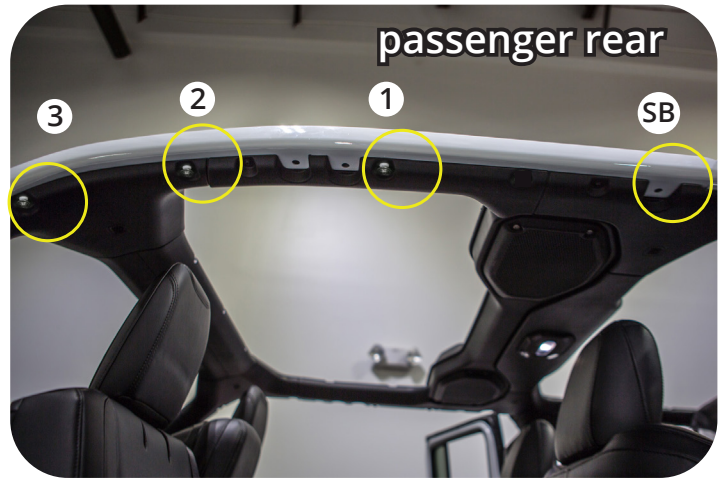

(SB = Spiderball)


2

If you have the hard top guide the spiderball through the door surround bolt hole and back to itself. If you have the soft top guide the spiderball cord around the door surround bolt and back to itself.




3

Install the provided clear 3M paint protection film on the rear of the roll cage. The smaller pieces on the outside section.

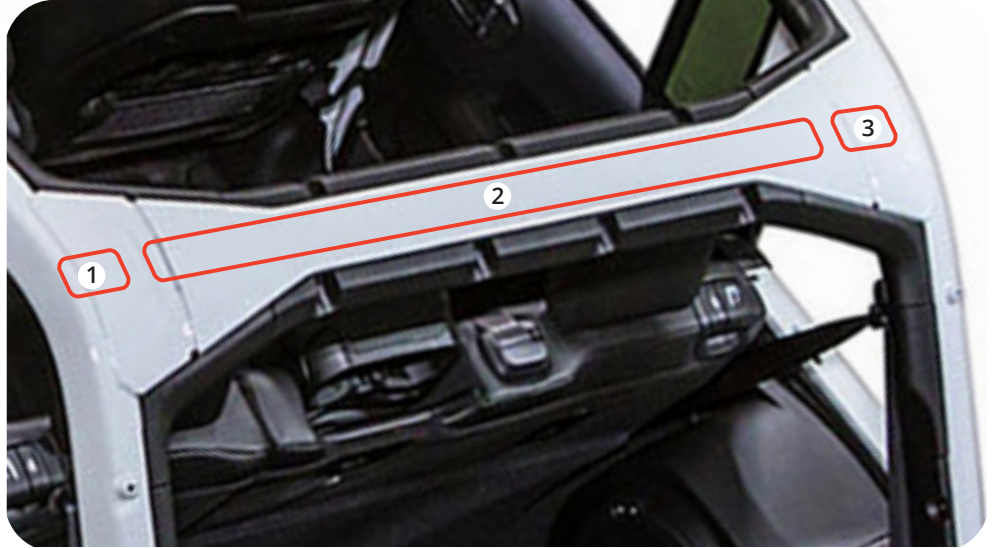

4

Attach the (6) shock cord loops to the new SpiderNub mounting locations. Use the provided leverage strap to assist and your install is complete.

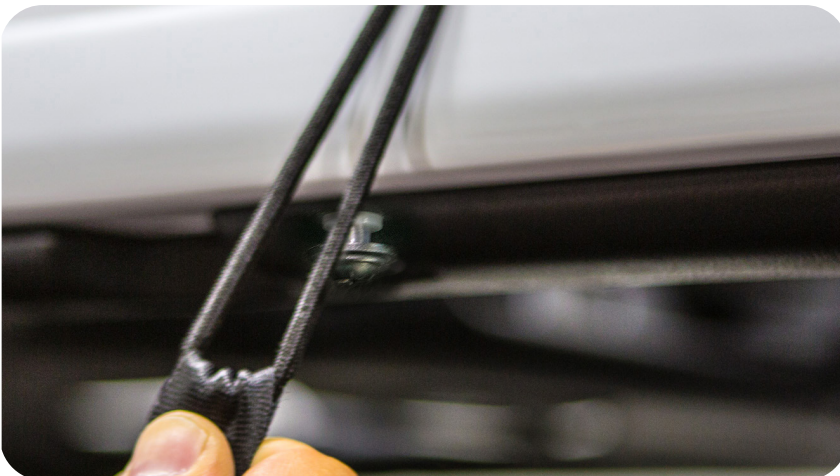



**SPIDERWEBSHADE.COM**  **BUY AMERICAN**