




JL Powertop Install Instructions:



*patent pending design

Welcome to the SPIDERWEBSHADE® JL family. Here are a few tips to make your install easier. You will need a few tools for this install however, Jeep® and SPIDERWEBSHADE® provide everything you will need to make this install a breeze.

- 1 Feed the 2 header rail straps in-between the windshield and the header rail. Be sure the buckle is facing down. Use the buckle to fasten taut.

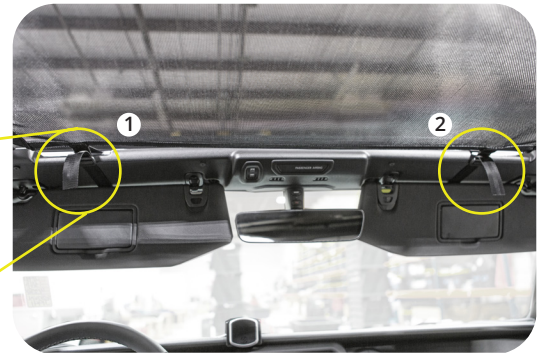


- 2 Locate the correct (8) factory T25 screws to remove and add the custom SpiderNubs then replace the (8) factory T25 screws. 4 per side. Add in flat side up and tighten flush, don't over tighten.

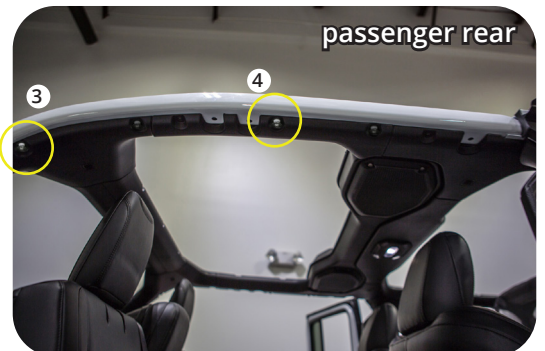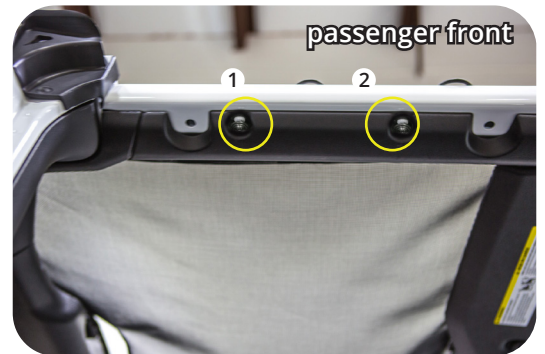

3

Use the leverage strap to pull the shock cord in-between the Power top and the roll cage. This will be a snug fit.

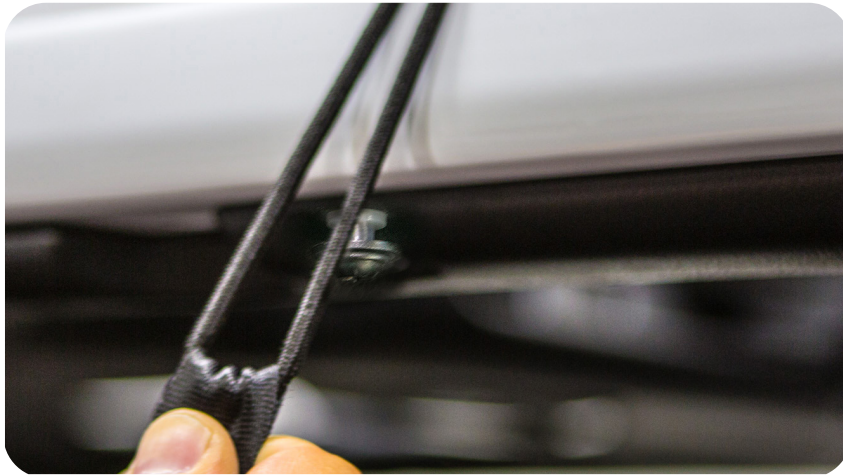

4

Attach the (8) shock cord loops to the new SpiderNub mounting locations and your install is complete.





SPIDERWEBSHADE.COM  **BUY AMERICAN**