



## JL4D Install Instructions:

\*patent pending design

Welcome to the SPIDERWEBSHADE® JL family. Here are a few tips to make your install easier. You will need a few tools for this install however, Jeep® and SPIDERWEBSHADE® provide everything you will need to make this install a breeze.

- 1 Use the socket in the Jeep® toolkit provided to remove your windshield wipers. (refer to your owner's manual)



- 2 Use the ratchet in the Jeep® toolkit provided to remove the (4) T40 windshield bolts and carefully lower the windshield onto the hood pads.







3

Attach the (4) header clips to the header rail and then reconnect your windshield and wipers.




4

Locate the correct (12) factory T25 screws to remove and add the custom SpiderNubs then replace the (12) factory T25 screws. 6 per side. Add in flat side up and tighten flush, don't over tighten.

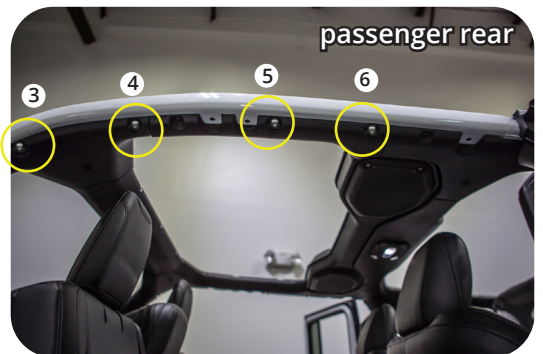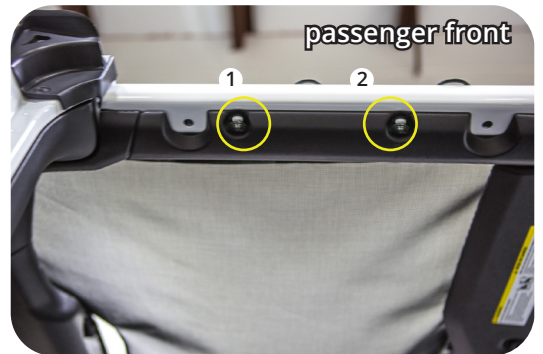

5


Install the provided clear 3M paint protection film on the rear of the roll cage. The smaller pieces on the outside section.

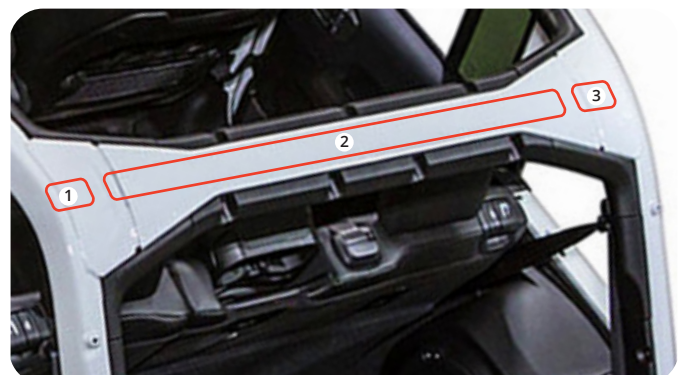



6

Attach the (10) shock cord loops to the new SpiderNub mounting locations. Use the provided leverage strap to assist and your install is complete.

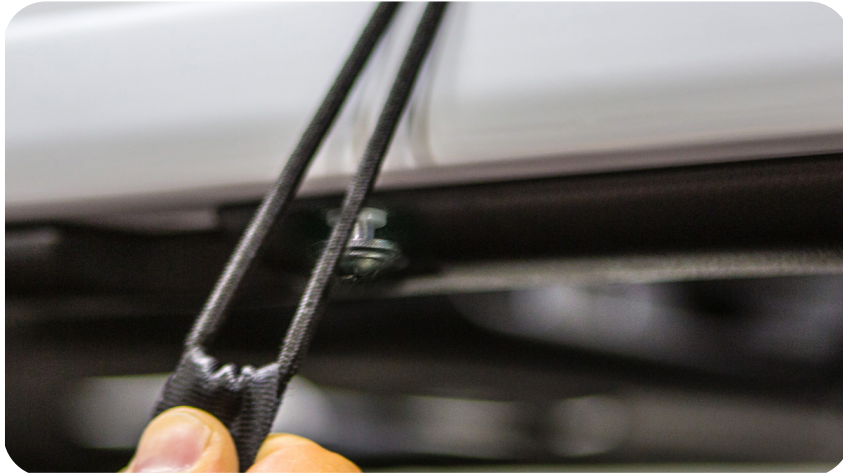

**SPIDERWEBSHADE.COM**  **BUY AMERICAN**