



JL4D Install Instructions:

*patent pending design

Welcome to the SPIDERWEBSHADE® JL family. Here are a few tips to make your install easier. You will need a few tools for this install however, Jeep® and SPIDERWEBSHADE® provide everything you will need to make this install a breeze.


1

Use the socket in the Jeep® toolkit provided to remove your windshield wipers. *(refer to your owner's manual)*



2

Use the ratchet in the Jeep® toolkit provided to remove the (4) T40 windshield bolts and carefully lower the windshield onto the hood pads.

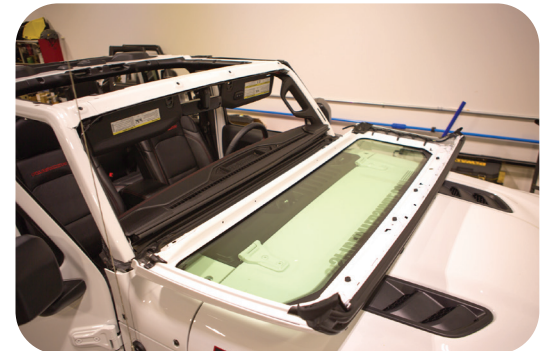



3

Attach the (4) header clips to the header rail and then reconnect your windshield and wipers.




4

Locate the correct (12) factory T25 screws to remove and add the custom Spider-Nubs then replace the (12) factory T25 screws. 6 per side

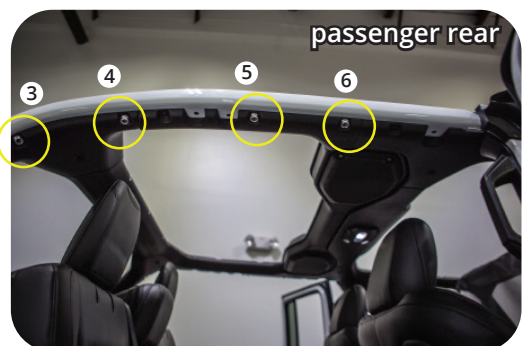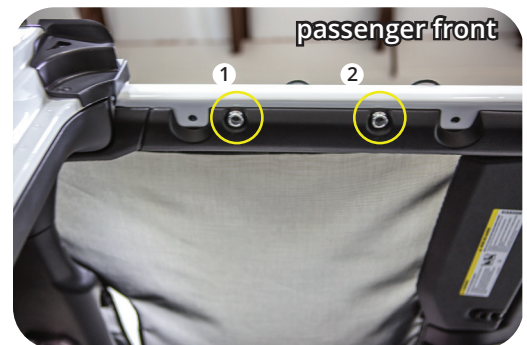

5

Install the provided clear 3M paint protection film on the rear of the roll cage. The smaller pieces on the outside section.

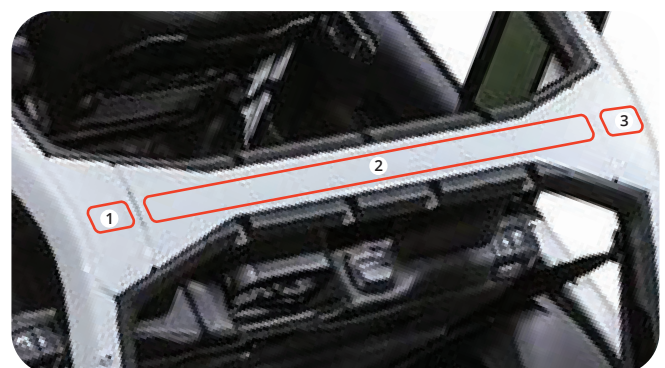


6

Attach the (12) shock cord loops to the new SpiderNub mounting locations. Use the provided leverage strap to assist and your install is complete.



SPIDERWEBSHADE.COM



**BUY
AMERICAN**