



JLKini Install Instructions:

*patent pending design

Welcome to the SPIDERWEBSHADE® JL family. Here are a few tips to make your install easier. You will need a few tools for this install however, Jeep® and SPIDERWEBSHADE® provide everything you will need to make this install a breeze.



1 Use the socket in the Jeep® toolkit provided to remove your windshield wipers. *(refer to your owner's manual)*



2 Use the ratchet in the Jeep® toolkit provided to remove the (4) T40 windshield bolts and carefully lower the windshield onto the hood pads.





3

Attach the (4) header clips to the header rail and then reconnect your windshield and wipers.



4

Locate the correct (6) factory T25 screws to remove and add the custom Spider-Nubs then replace the (6) factory T25 screws. 3 per side.

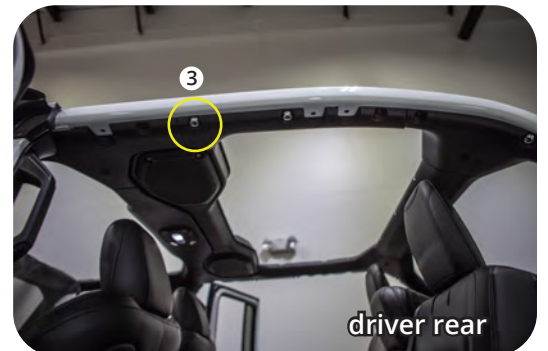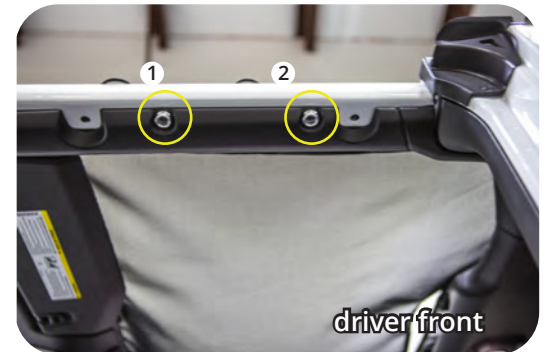

5

Attach the (6) shock cord loops to the new SpiderNub mounting locations and your install is complete. This can be done a hardtop on, just need to remove the freedom panels.





SPIDERWEBSHADE.COM  **BUY AMERICAN**