




JL4door Rear Install Instructions:

*patent pending design

Welcome to the SPIDERWEBSHADE® JL family. Here are a few tips to make your install easier. You will need a few tools for this install however, Jeep® and SPIDERWEBSHADE® provide everything you will need to make this install a breeze.



1 Locate the correct (6) factory T25 screws to remove and add the custom SpiderNubs then replace the (6) factory T25 screws. 3 per side.

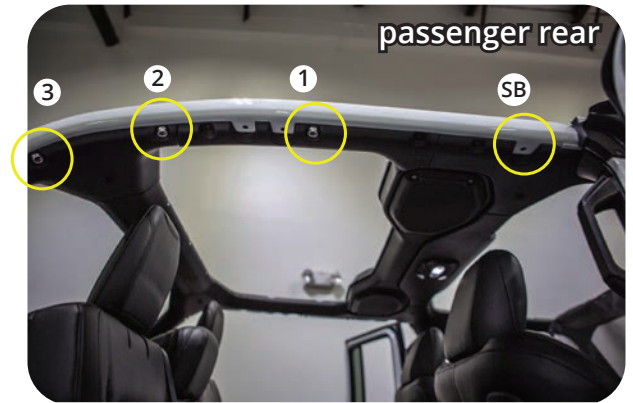


(SB = Spiderball)

2 If you have the hard top guide the spiderball through the door surround bolt hole and back to itself. If you have the soft top guide the spiderball cord around the door surround bolt and back to itself.



3

Install the provided clear 3M paint protection film on the rear of the roll cage. The smaller pieces on the outside section.

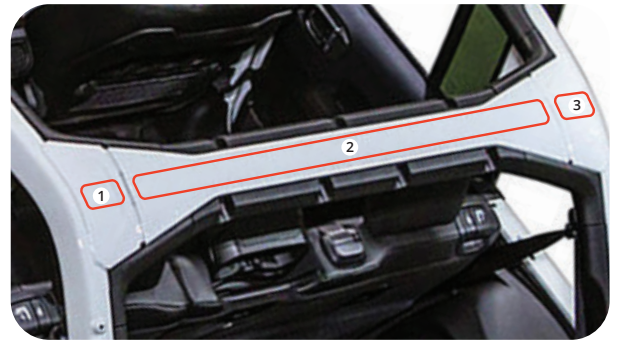

4

Attach the (6) shock cord loops to the new SpiderNub mounting locations and your install is complete.



SPIDERWEBSHADE.COM

 **BUY AMERICAN**