




KwikFlex™ Tarp Bow Installation Guide

1. Mount KwikFlex® Bow Brackets to the sides of the trailer:
 - a. ALUMINUM brackets are to be welded onto trailer.
 - b. STEEL brackets are to be bolted onto trailer using 2-4 self-tapping screws.
2. Measure the inside trailer width for each tarp bow position. **It is important to measure each position separately as widths can vary slightly.**
3. Cut KwikFlex® tarp bows 2 inches longer (on the short side) than the measured inside width of the trailer. Cut at a 25-degree angle to match the axis and angle of the bow brackets. This will create a 10-12 inches of arch once installed. **See example cut below for a 90 inch inside trailer width.**

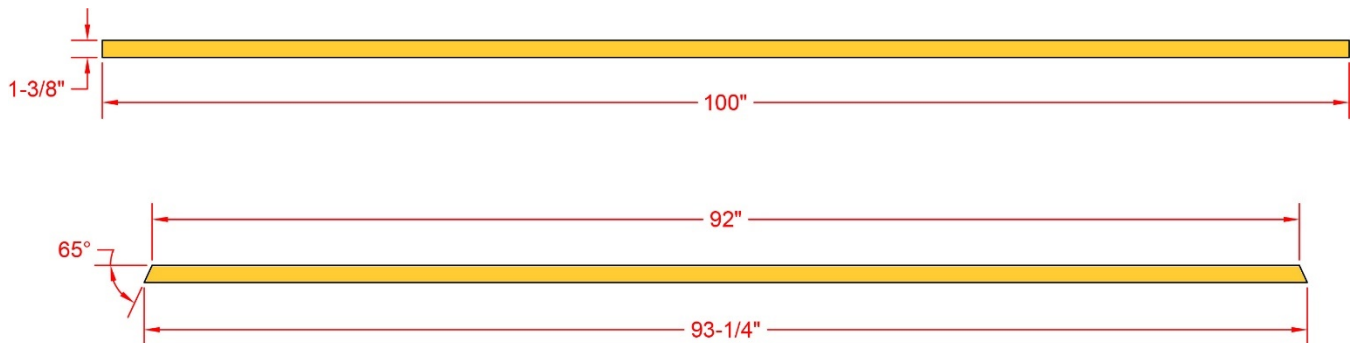

4. Insert one end of the KwikFlex® tarp bow into a mounted bow bracket.
5. Pull the other end of the KwikFlex® tarp bow into the mounted bow bracket on the other side. **USE CAUTION: There will be tension in the tarp bow during this step.**

