


# C6I INSTALLATION DIAGRAM

© 2007 STONE FOREST, INC.

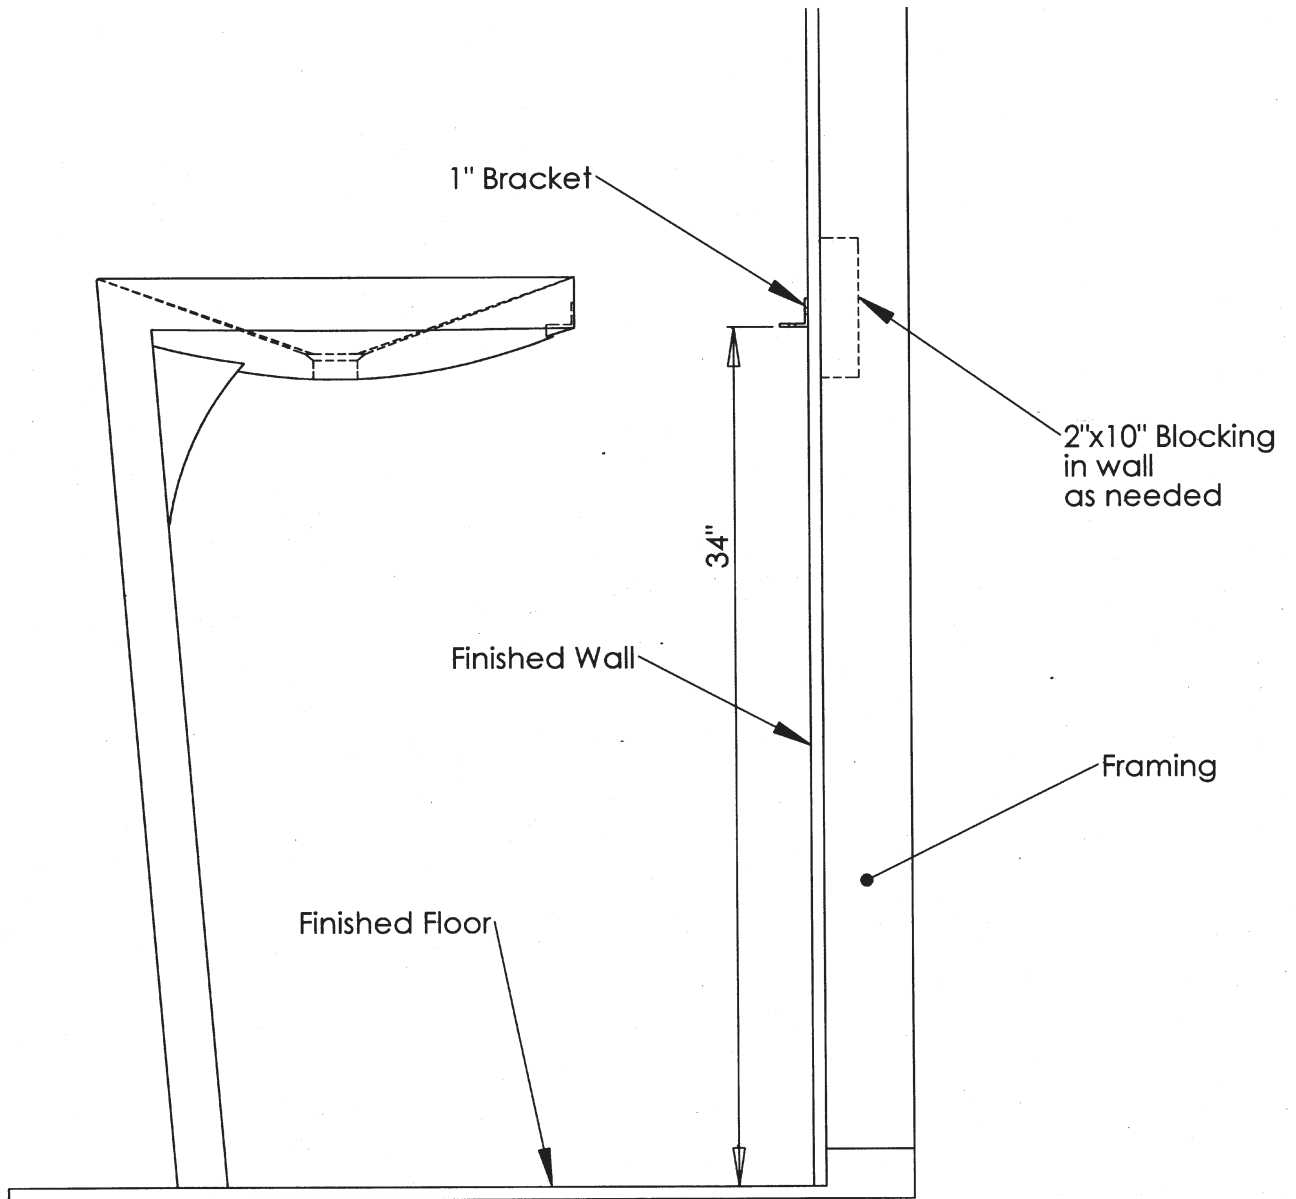

Use construction adhesive between floor and pedestal

STONE  
FOREST