

FRONT VIEW

SIDE VIEW

			REV	CHANGE(S)		BY	DATE		
REMARKS PALMER LS2CSFB DECORATIVE COLLAR LEG SYSTEM FOR STONE FOREST BORDEAUX C75	DRAWER	JB	1-18-13		DESCRIPTION(S) PALMER INI			USTRIES	
	MATERIAL BRASS		LEG SYS 2 LEG DEC COLLAR		379 Charles Street Providence, RI 02904 Phone: 800-398-9676				
	FINISH			PART NUMBER(S)					
	PL-0067			-	LS2CSFB	Fax: 401-421-4238 email: jamie@sinklegs.com			

These designs and drawings are confidential, and the exclusive property of Palmer Industries. They may not be disclosed or duplicated without the expressed, written consent of Palmer Industries. Copyright circa 2012 Palmer Industries. All rights reserved.

PALMER INDUSTRIES


Decorative

Collar

2-Leg Configuration Shown for Assembly Instructions Other Leg Configurations Follow Same Basic Methods

LEG SYSTEM ASSEMBLY

1.5" OR 1.0" DIAMETER TUBING

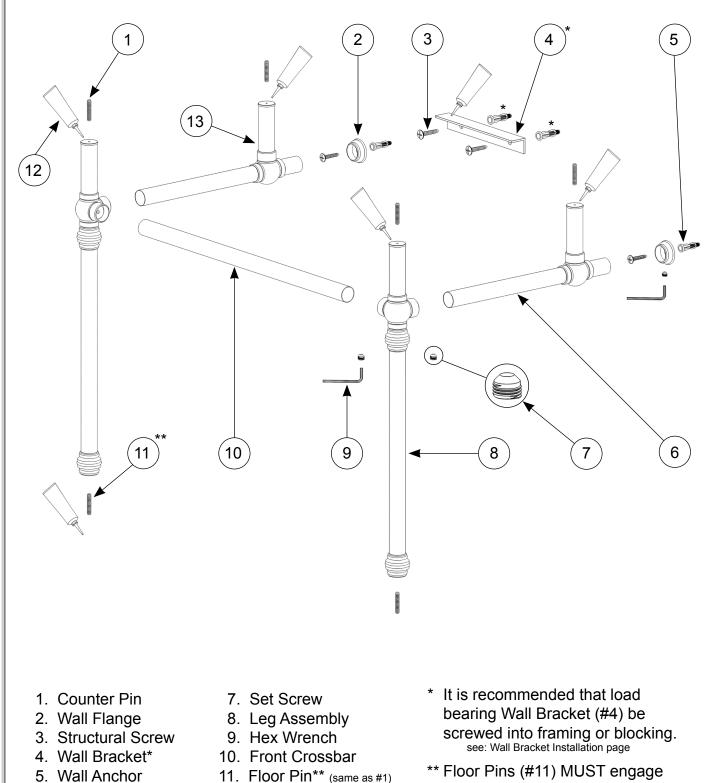

- 6. Wall Return
- 12. Silicone Adhesive
- 13. Rear Riser (optional)
- 1/4" diameter holes drilled into flooring

PALMERINDUSTRIES


Decorative


Collar

LEG SYSTEM INSTALLATION INSTRUCTIONS

1.5" OR 1.0" DIAMETER TUBING

- Determine that you have received the correct product before unpacking and unwrapping the leg system components.
- The leg system components must be protected from abrasion and scratching during installation. Use padding on the floor to protect your console during layout and assembly.
- The Decorative Collar style may be field cut to reduce width, depth, and height. Note: Acrylics can ONLY be field cut for height and depth.
- Verticals must be plumb and horizontals must be level. Wall Returns and Shelf Supports must be parallel, and square to the Horizontal Crossbar. Leg heights may need to be shimmed to achieve a level counter top.
- Leg assemblies must be positioned so that the set screw holes face toward the back wall and Wall Flanges must be rotated so that the set screw holes are not visible from a standing position in front of the vanity.
- Wall bracket must be secured solidly to the wall to bear the weight of the counter top.
- Legs MUST be pinned to the floor to prevent lateral movement.
- The counter top must be attached to the tops of the legs and the wall bracket with silicone adhesive. Confirm that the installation is correct and complete and that the shelf, if included, fits properly before <u>permanently</u> gluing the counter top into place.

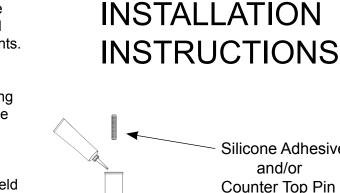

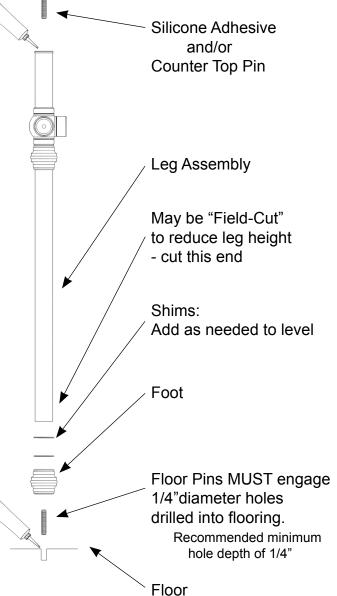

SEE ADDITIONAL PAGES FOR INSTRUCTIONS SPECIFIC TO INCLUDED OPTIONS.

LEG SYSTEM INSTALLATION


WALL BRACKET INSTALLATION INSTRUCTIONS

PROPER INSTALLATION OF THE PROVIDED ALUMINUM ANGLE WALL BRACKET(S) IS CRITICALLY IMPORTANT TO THE STRUCTURAL INTEGRITY OF OUR LEG SYSTEMS.

- Fastening the wall bracket to solid wood blocking in the wall is highly recommended. A MINIMUM OF (3) FASTENERS SHOULD BE USED. If solid blocking is not available, fasten bracket to stud framing in the wall. Use the included fasteners or fasteners of the appropriate length to engage sufficiently with the framing.
- The bracket has pre-drilled holes for easy fastening. However if the pre-drilled holes do not align with the stud framing in the wall, additional holes must be drilled into the bracket at the stud location(s).
- The wall bracket must be carefully positioned such that the top surface of the bracket is perfectly level with the top of ALL legs and risers.
- A generous bead of silicone (adhesive) must be applied to the top of the wall bracket and the tops of the legs (and rear risers if applicable) in order to secure the sink top.

TILE WALL / DRYWALL APPLICATIONS - Standard Wall Bracket

- If the stud locations can be determined, drill holes in the tile at these locations and use #12 screws of the appropriate length to engage with the framing at least 1-1/2".
- For non-stud locations , drill 9/32" holes into the tile and use the provided red anchors and #12 screws.

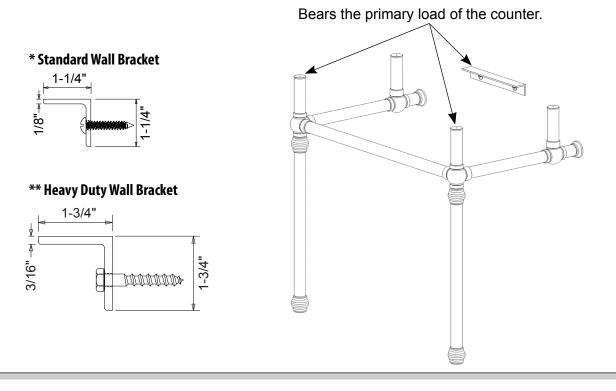

ev: 100920

PALMER INDUSTR



Polished Chrome (PC) \$555



Polished Nickel Un-Lacquered (PN) \$555



Satin Nickel Un-Lacquered (SN) \$\$\$3



Aged Nickel Un-Lacquered (AN) \$\$\$\$



Semi Matte Black Powder Coat (MB) \$\$\$\$



Polished Brass Lacquered (PBL) \$555



Oil Rubbed Bronze Un-Lacquered (ORB) \$\$\$\$



Polished Brass Un-Lacquered (PBUL) \$555



Satin Brass Lacquered (SBL) \$\$55



Satin Brass Waxed (SBW) \$\$\$\$



Aged Brass Un-Lacquered (ABUL) \$\$55



Polished Brass PVD (PBPVD) \$\$\$\$



Satin Brass PVD (SBPVD) \$\$\$\$



Polished Gold PVD (PGPVD) \$\$\$\$



Satin Gold PVD (SGPVD) \$\$\$\$

FINISH COLOR VARIABLES

The finish colors you see on this website are approximate and may appear to be different from the actual product you receive.

Different devices and monitors may display colors differently and the lighting will also affect the color you perceive.

Some of these are hand-applied "artisanal' finishes and may vary. Other finishes are living* finishes and will change & patina with age.

The Premium PVD Finishes; Durable, Colorful and Care-Free Finishing Technology - Available at a Premium Cost with an extended production lead time. learn more about PVD finishes









Perma-Clear Acrylic

Seafoam Acrylic

Reeded Tubing

Walnut Heartwood