

STONE
FOREST

Harbor Washbasin Stand Installation


Please read these instructions carefully before you begin. Also, review the recommended tools section and lay out all components to assure you have the correct tools, items and quantities needed for proper installation.



Caution! Stone sinks and countertops are very heavy. Please use care and caution when handling.

Important: Do not use an oil-based sealer, silicone, or plumbers putty with the stone sinks. These products will stain if applied near the surface. Use a latex-based caulk recommended for use with tile and stone.

All installation procedures must comply with all applicable local plumbing and building codes.

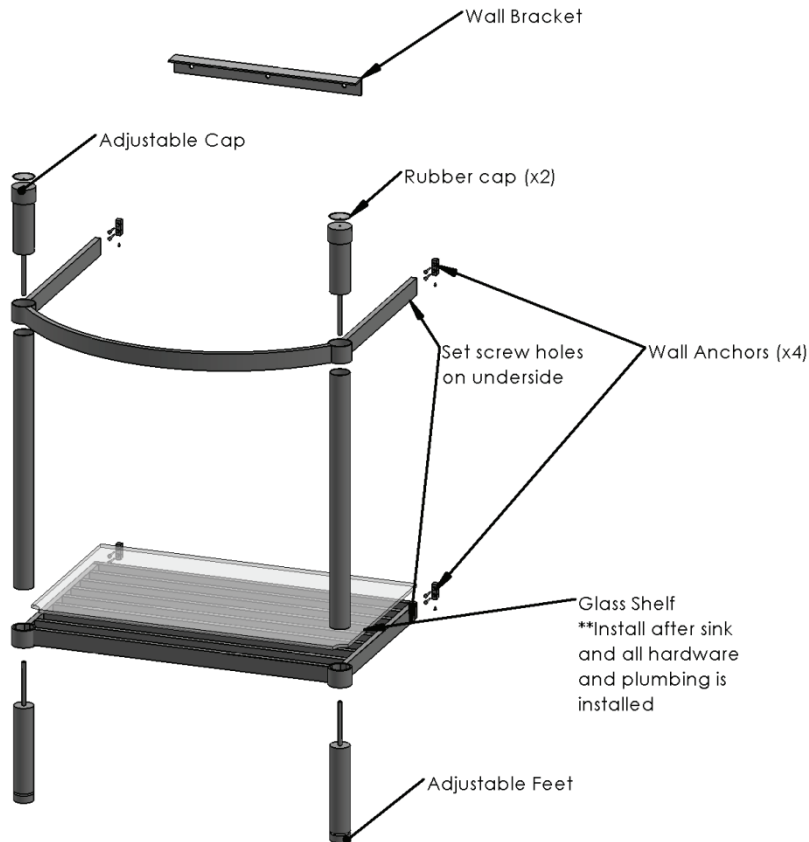

Required tools:

Tape measure	Level	Adhesive Caulk/Sealant such as DAP Qwikseal® or Henkels Polyseam Seal®
Drill/driver	Screwdrivers	Pencil

Supplied parts:

Harbor Washbasin Stand (8pcs)	Glass Shelf	Wall Bracket (x1)
Wall Anchors (x4) w/ set screws	Rubber Caps (x2)	

Instructions:

1. Suitable reinforcement located 35" high and centered on installation is required for anchoring the vanity to the wall with the provided wall bracket.
2. Finish wall to be flat and plumb
3. Layout all parts and set glass safely aside for final step.
4. Assemble the lower part of the stand by screwing the legs into the center tubing through the shelf support. Please be sure to have the set screw holes on the underside of the shelf support.
5. Set the towel rail onto the center tubing and attach by screwing the top legs with adjustable cap through the towel bar into the center tubing. Be sure the set screw holes are facing the bottom.
6. Without attaching to the wall, place the stand in desired location.
7. Adjust feet on the bottom of each leg to achieve level across the top of each.
8. Also check shelf and side rails for level.
9. Mark location of each anchor while stand is in final position.
10. Remove stand from wall and attach wall anchors.
11. Position stand back over wall anchors and secure with provided set screws.
12. Attaching the wall bracket to support the back edge of the Harbor Washbasin should be done into blocking or with suitable wall anchors to support the weight.
13. With sufficient help to safely lift and hold the Harbor Washbasin in place, set it on top of the legs and check for level.
14. When level, mark a line on the back wall underneath the faucet cutout. This will be the top line for the wall bracket.
15. Set the Harbor Washbasin safely aside and attach the wall bracket under the line just drawn.
16. Replace the Harbor Washbasin back onto the stand and wall bracket.
17. Check for level in all directions and adjust as needed with leveling feet or adjusting the wall bracket.
18. If installation is satisfactory, adhere the stone to the wall bracket and wall using adhesive caulk.
19. Note: Before placing the glass on the lower shelf, install all faucets and plumbing according to manufacturers recommendations and all local plumbing and building codes.
20. Finish installation by placing the glass on the lower shelf.

Care & Maintenance:

- Wipe the stand down with a soft cloth. A metal polish such as Flitz can be used to remove any tarnish or spotting.
- Wipe the basin dry with a soft cloth after each use.
- Clean regularly with a granite & marble cleaner, such as *Marbamist* by Stone Care International. If a household cleaner is used, it must specifically state 'safe for marble', and have a neutral pH of 7.0. Use of any other product may alter the effectiveness of the sealer.

Sealing:

- Granite, Marble & Onyx: While these products are factory sealed with a penetrating sealer, it is recommended that you perform a water bead test to determine if your product needs to be re-sealed. If the water absorbs and does not bead, your stone must be resealed. You can maintain this by applying a stone sealer such as *Stone Spray N Seal* by Stone Care International twice per year.