


FRONT



SIDE

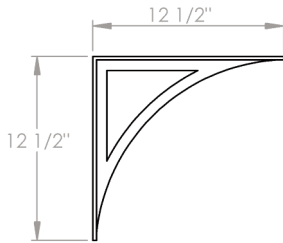

PI-C92 BASIC WALL BRACKETS

©2015 STONE FOREST, INC.

- Solid Brass
- Available in brushed brass finish
- Fits C92-WL30 Petite Renaissance
- 12" Phillips screwdriver required for installation
- Installation consists of two anchor screws in the console top through the brackets and the use of adhesive caulk on top edge of each bracket and along the back edge of the sink. We recommend DAP Kwik Seal or Henkels Polyseam Seal
- Approx 10 lbs.