



BMS F30 F32 N55 Intake Install Guide


Last Updated:3/25/2014

Use subject to terms and conditions posted at <http://www.burgertuning.com/terms.html>


THIS PART IS LEGAL FOR USE ONLY IN COMPETITION RACING VEHICLES AS DEFINED UNDER CALIFORNIA LAW, AND IS NOT LEGAL FOR USE IN ANY OTHER MOTOR VEHICLE. California law defines a "racing vehicle" as "a competition vehicle not used on public highways." (Calif. Health & Safety Code 39048) This part may only be used on competition racing vehicles operated exclusively on a closed course in conjunction with a sanctioned racing event. Competition-only motor vehicles may not be driven to a racing event on a public highway and must be transported on a trailer or other carrier. USE OF THIS PART IN ANY OTHER VEHICLE MAY SUBJECT YOU TO FINES AND PENALTIES FOR VIOLATION OF FEDERAL AND/OR STATE LAW, WILL VOID YOUR WARRANTY FROM BURGER MOTORSPORTS, LLC, AND CAN VOID YOUR VEHICLE'S WARRANTY. It is your responsibility to comply with all applicable federal and state laws relating to use of this part, and Burger Motorsports, LLC hereby disclaims any liability resulting from the failure to use this part in compliance with all applicable federal and state laws.



BMS F30 F32 N55 Intake Install Instructions:

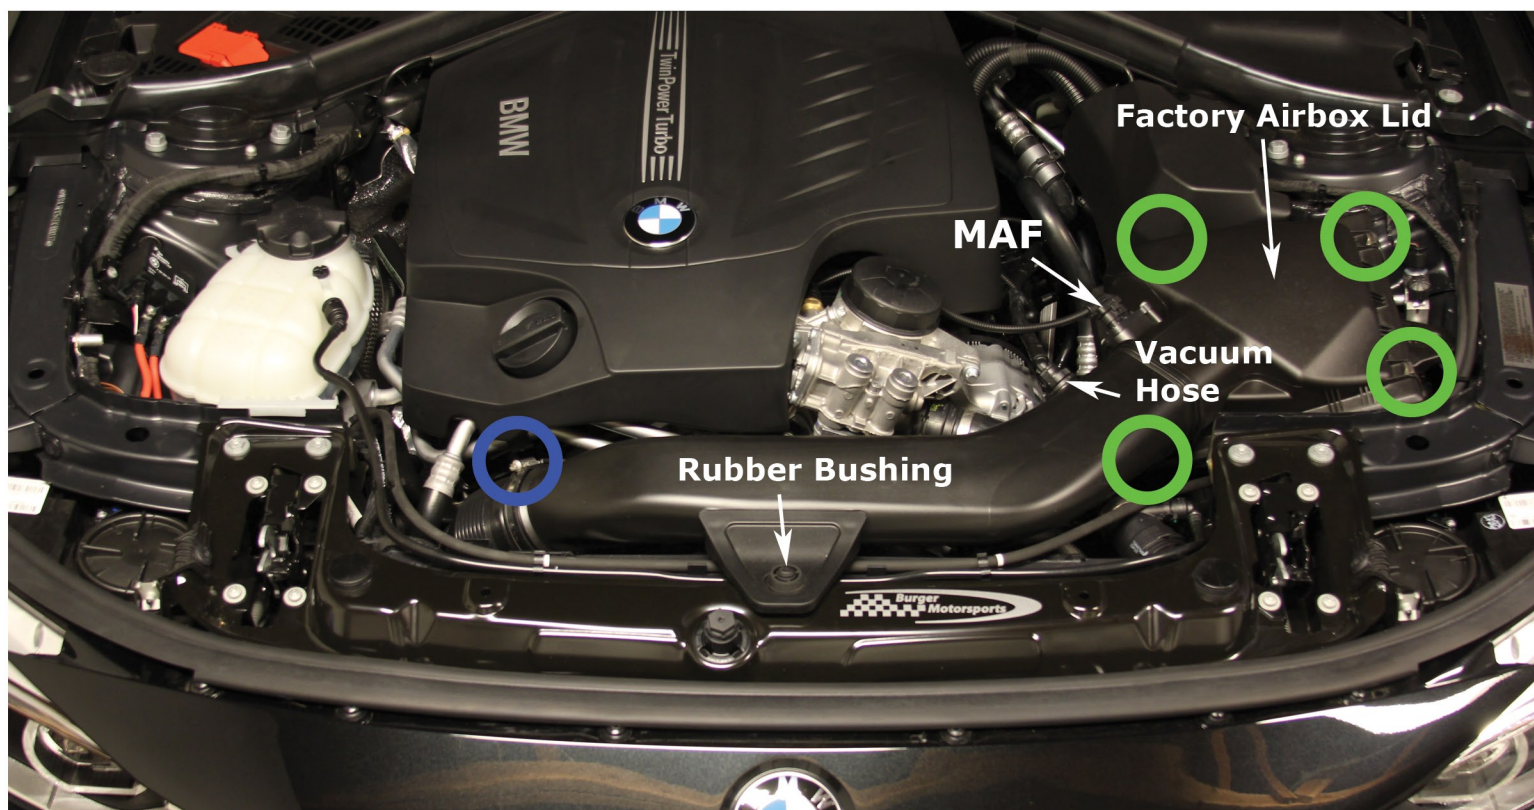

1. Unclip the 4 factory clips on each side of the factory air box lid. They are circled in green in the above photo.
2. With a flat head screwdriver loosen the screw on the hose clamp but do not remove it. It is circled in blue in the above photo.

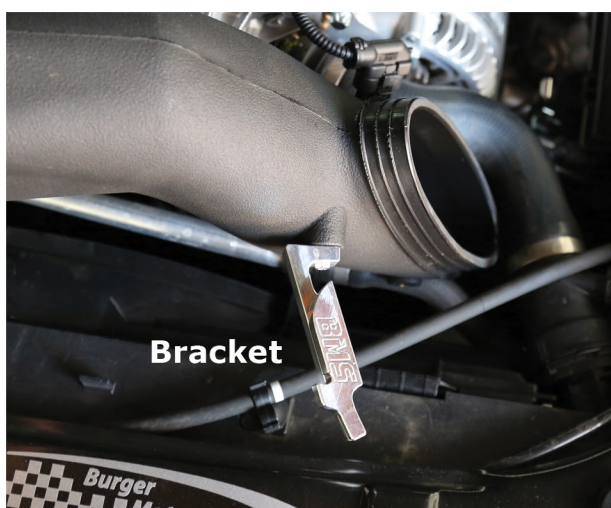


3. Remove the MAF sensor by unscrewing the 2 T20 Torx screws. Remove the vacuum hose to the left of the MAF sensor by squeezing the outer ring and pulling it off. Then carefully pull directly up on the intake. Once off remove the rubber bushing and transfer it to the BMS Performance Intake.


T20 Torx



4. Carefully Place the air filter on the BMS Performance intake tube with the hose clamp underneath. Hand tighten the filter clamp with a screwdriver until the filter is secure. **Hand tighten only. Do not over tighten or the tube will distort!** Attach the bracket as shown in the above photo to the front of the intake tube with the provided screw.


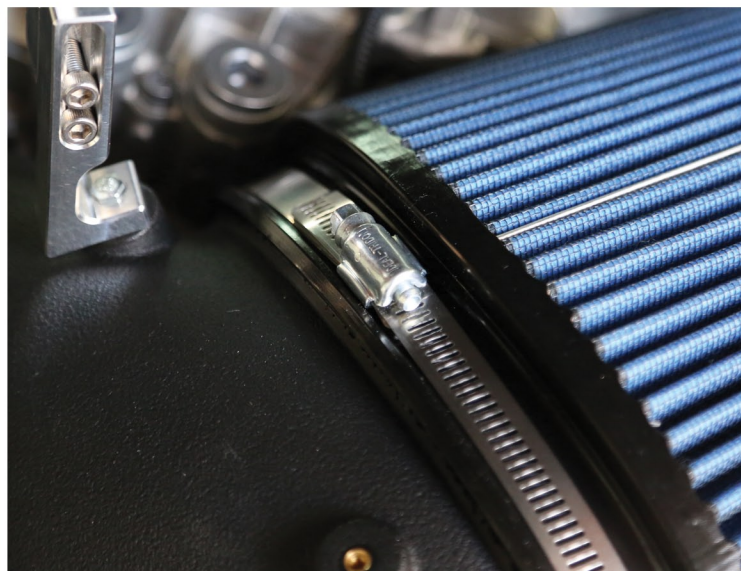


BMS F30 F32 N55 Intake Install Instructions:

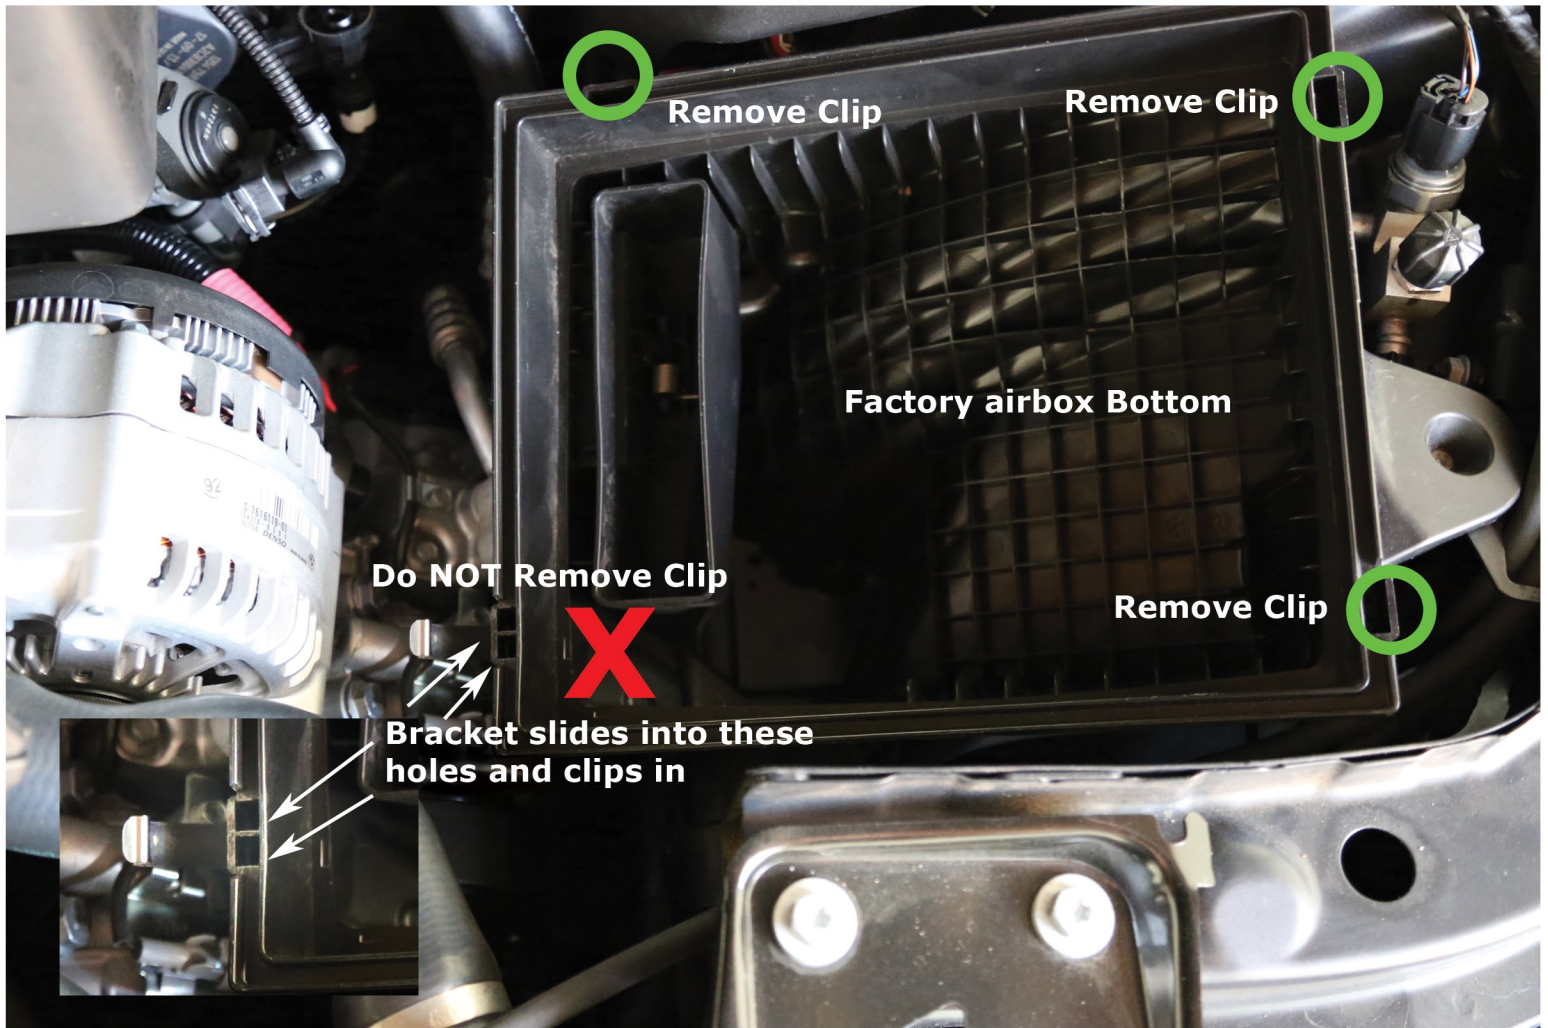


5. Remove the 3 factory clips circled in green in the above photo. To remove the factory clips you must push in and down. You can remove the factory airbox bottom by pulling up on it if needed. Keep them in a safe place.

6. Place the BMS Performance intake on the car by sliding the BMS bracket into the airbox like the photo to the right. You can adjust the height of the intake if you want but is not necessary.

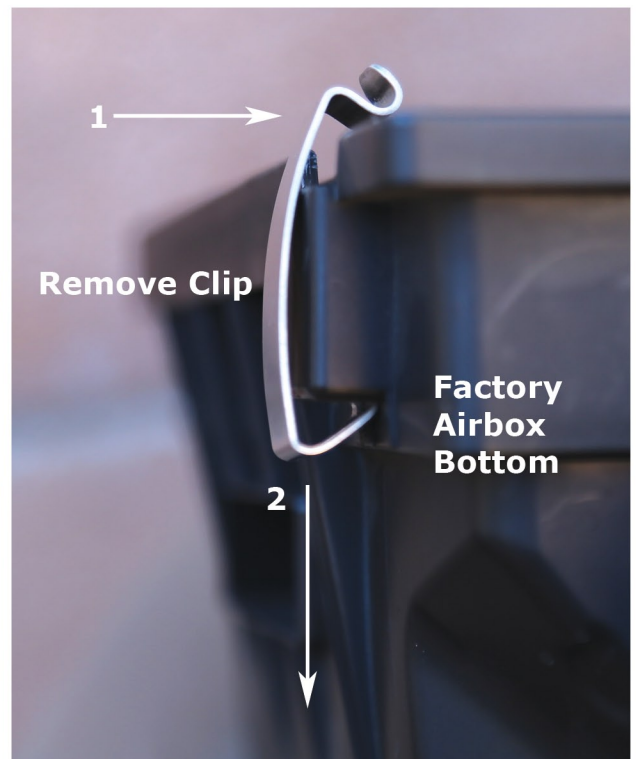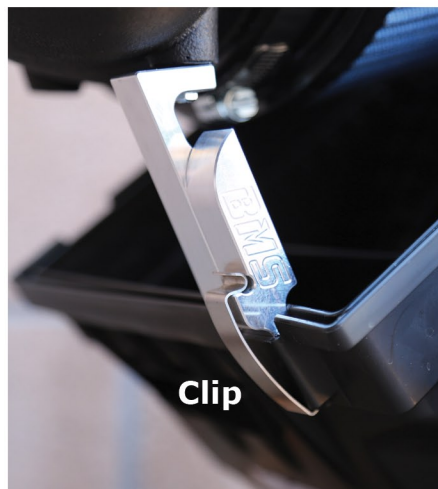

BMS F30 F32 N55 Intake Install Instructions:

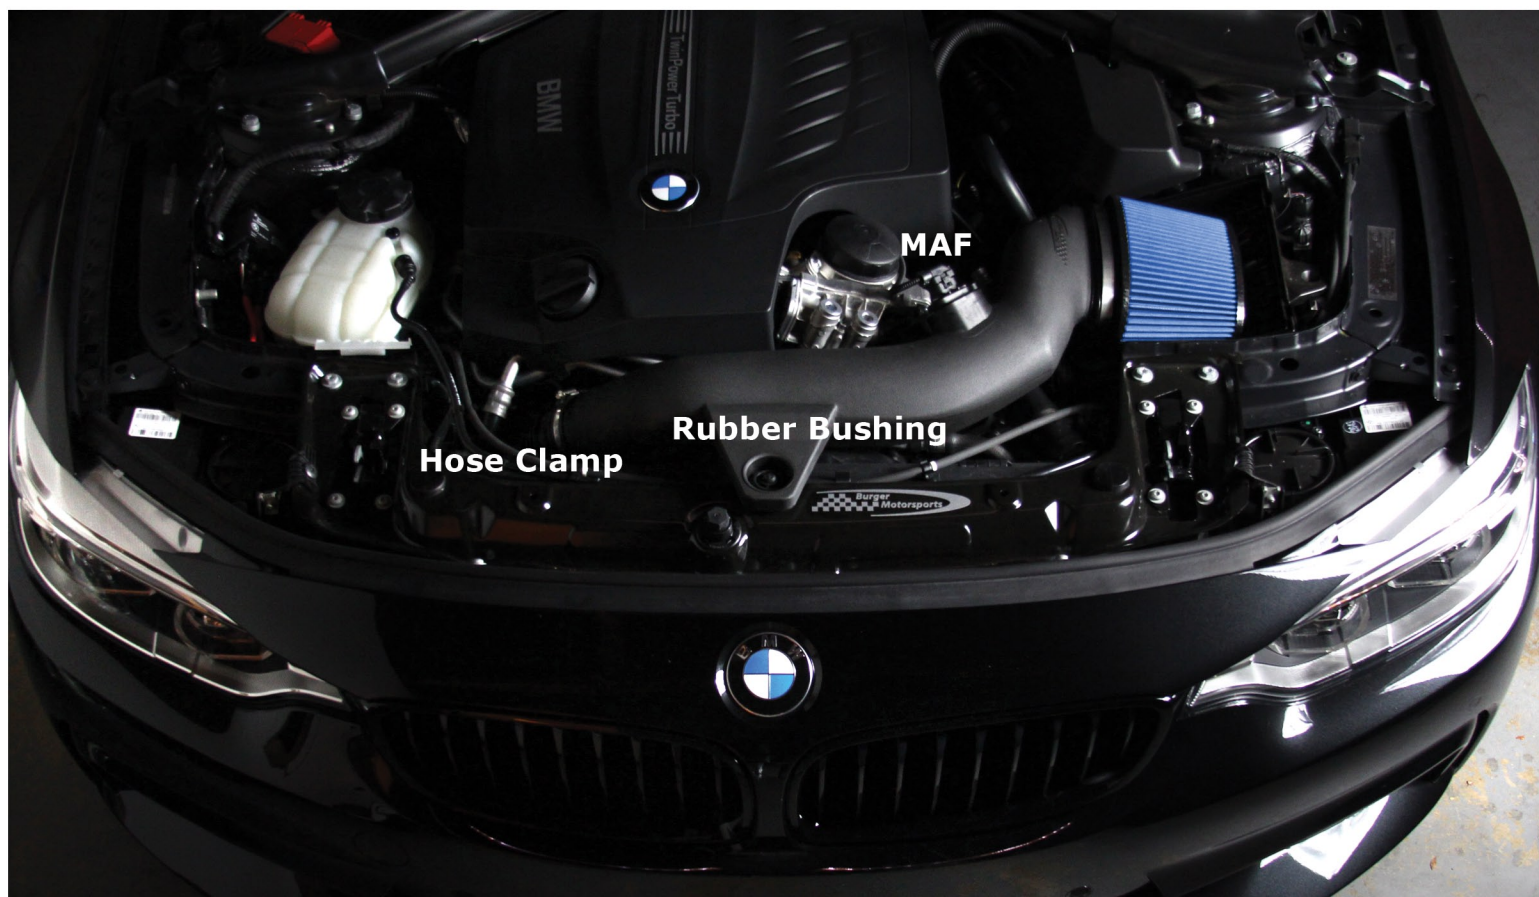

5. Attach the intake outlet to the hose and tighten the hose clamp. Pay special attention to this and make sure the hose is securely seated and the hose clamp is tight and straight.

6. Attach the MAF to the car with the provided Phillips head screws. Then attach the vacuum hose. Make sure it is clipped in and secure. (automatic Transmissions only). Manual transmissions leave this hole plugged with the supplied vacuum cap. You are done. Enjoy Better performance and sound.

