



Wardrobe Lift Assembly Instruction

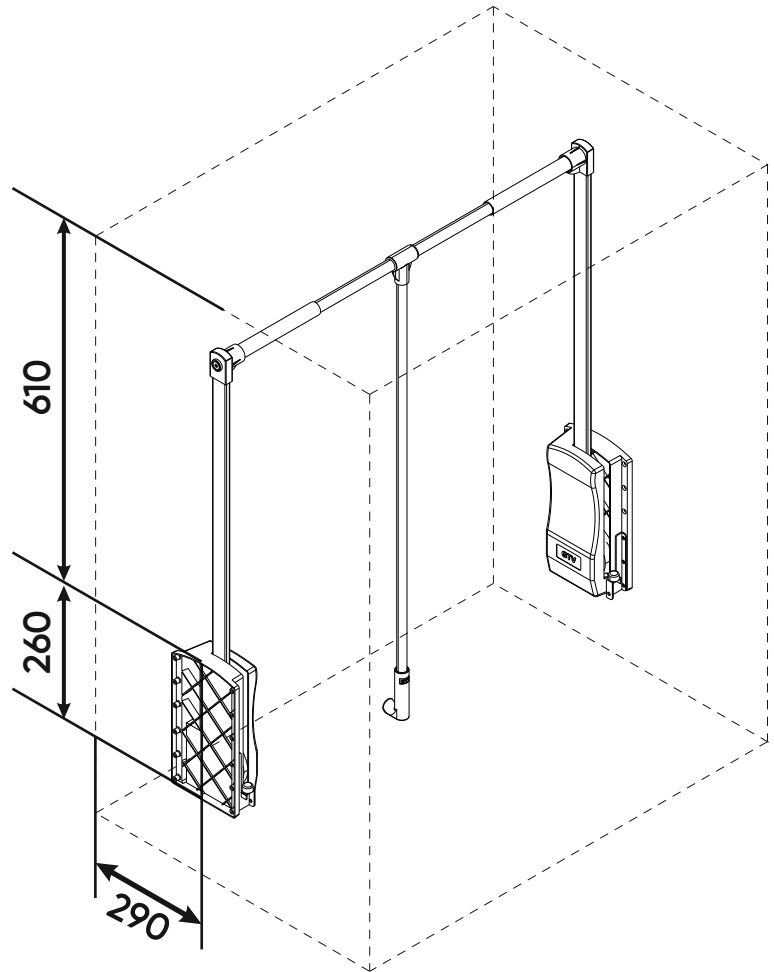

Fix the supplied template in place using Tesa tape. Ensure the following distances: 290mm from the cabinet back wall and 610mm from the cabinet top.

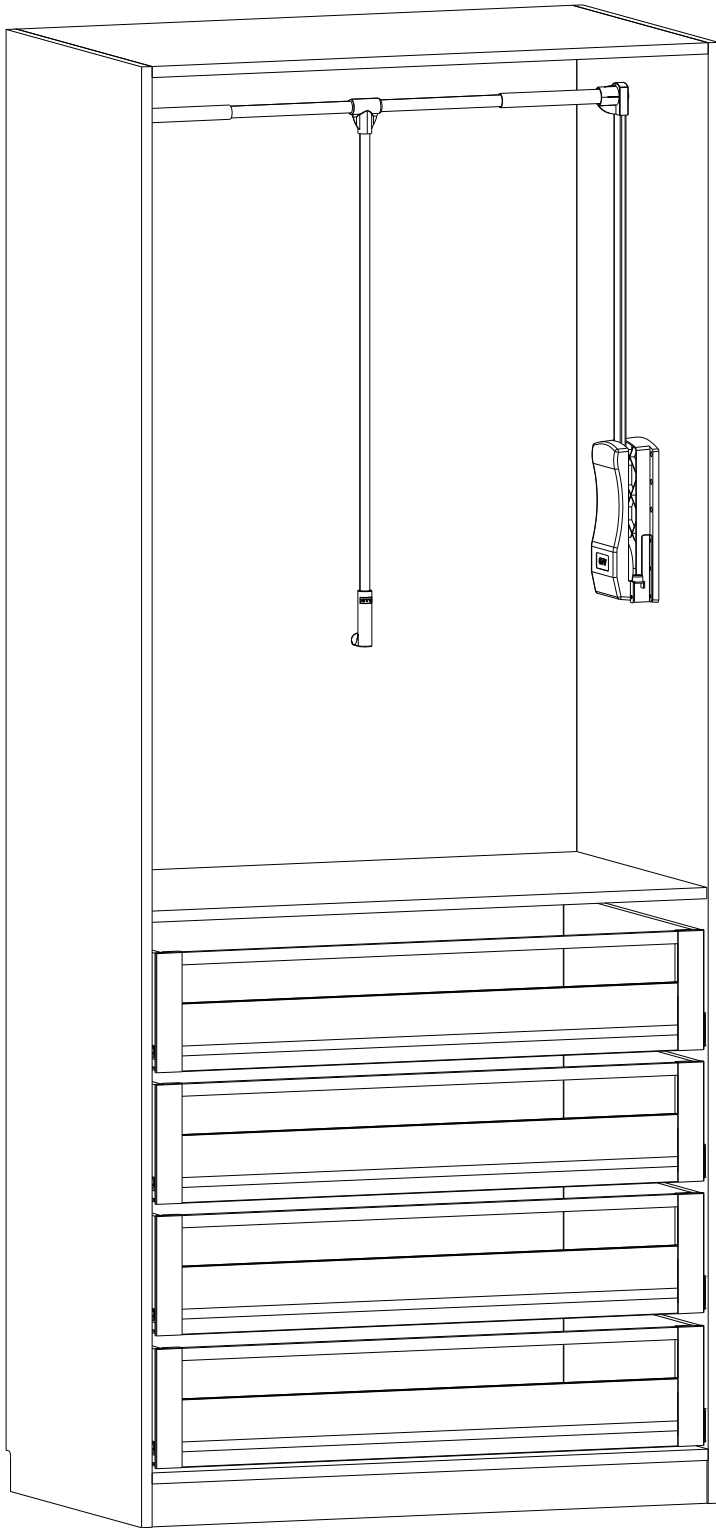