



PORSCHE FOILER™ WIND DIFFUSER INSTALLATION GUIDE

Thank you for purchasing the **AWE Tuning Foiler™ Wind Diffuser**. For up-to-the-minute **Porsche** fitment information, be sure to visit www.AWE-Tuning.com.

As always, AWE Tuning Performance Specialists are standing by for any questions, at 215-658-1870, or performance@AWE-Tuning.com.

PARTS LIST


FOILER™ WIND DIFFUSER


- 1 Driver side Foiler™
- 1 Passenger side Foiler™
- 2 Late model adapter
- 2 Early model adapter
- 2 Attachment screw

TOOLS REQUIRED

- Flat trim removal tool
- Phillips head screwdriver
- T-15, T-20 & T-30 Torx bits
- 10mm wrench


STEP 1

 Always refer to the manufacturer service manual for precise torque specifications on all OEM fasteners.

 **Climate Warning:** Plastic becomes brittle in colder climates and can break easily if mishandled.

Using a flat trim removal tool, remove the interior triangle trim piece on the door panel shown at the arrow in **Figure 1**. Start at the bottom and pry upwards.

Once the part is free, there will be a “J-hook” visible holding it in place, which is very flexible. Rotate the trim piece toward the front of the car while gently pulling upwards to remove it from the door.

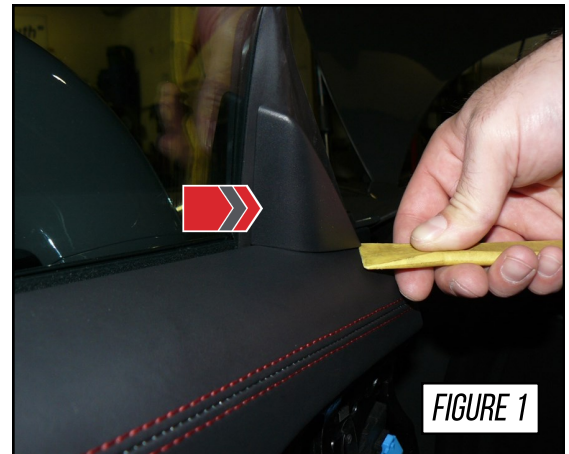

STEP 2

Click on the image below that represents what you see. The remaining instructions will be uploaded to correctly install your **AWE Tuning Foiler™ Wind Diffuser**.



[“Visible Screw”](#)



[“Hidden Screw”](#)