




MAP EVOX-PSR

Install Instructions

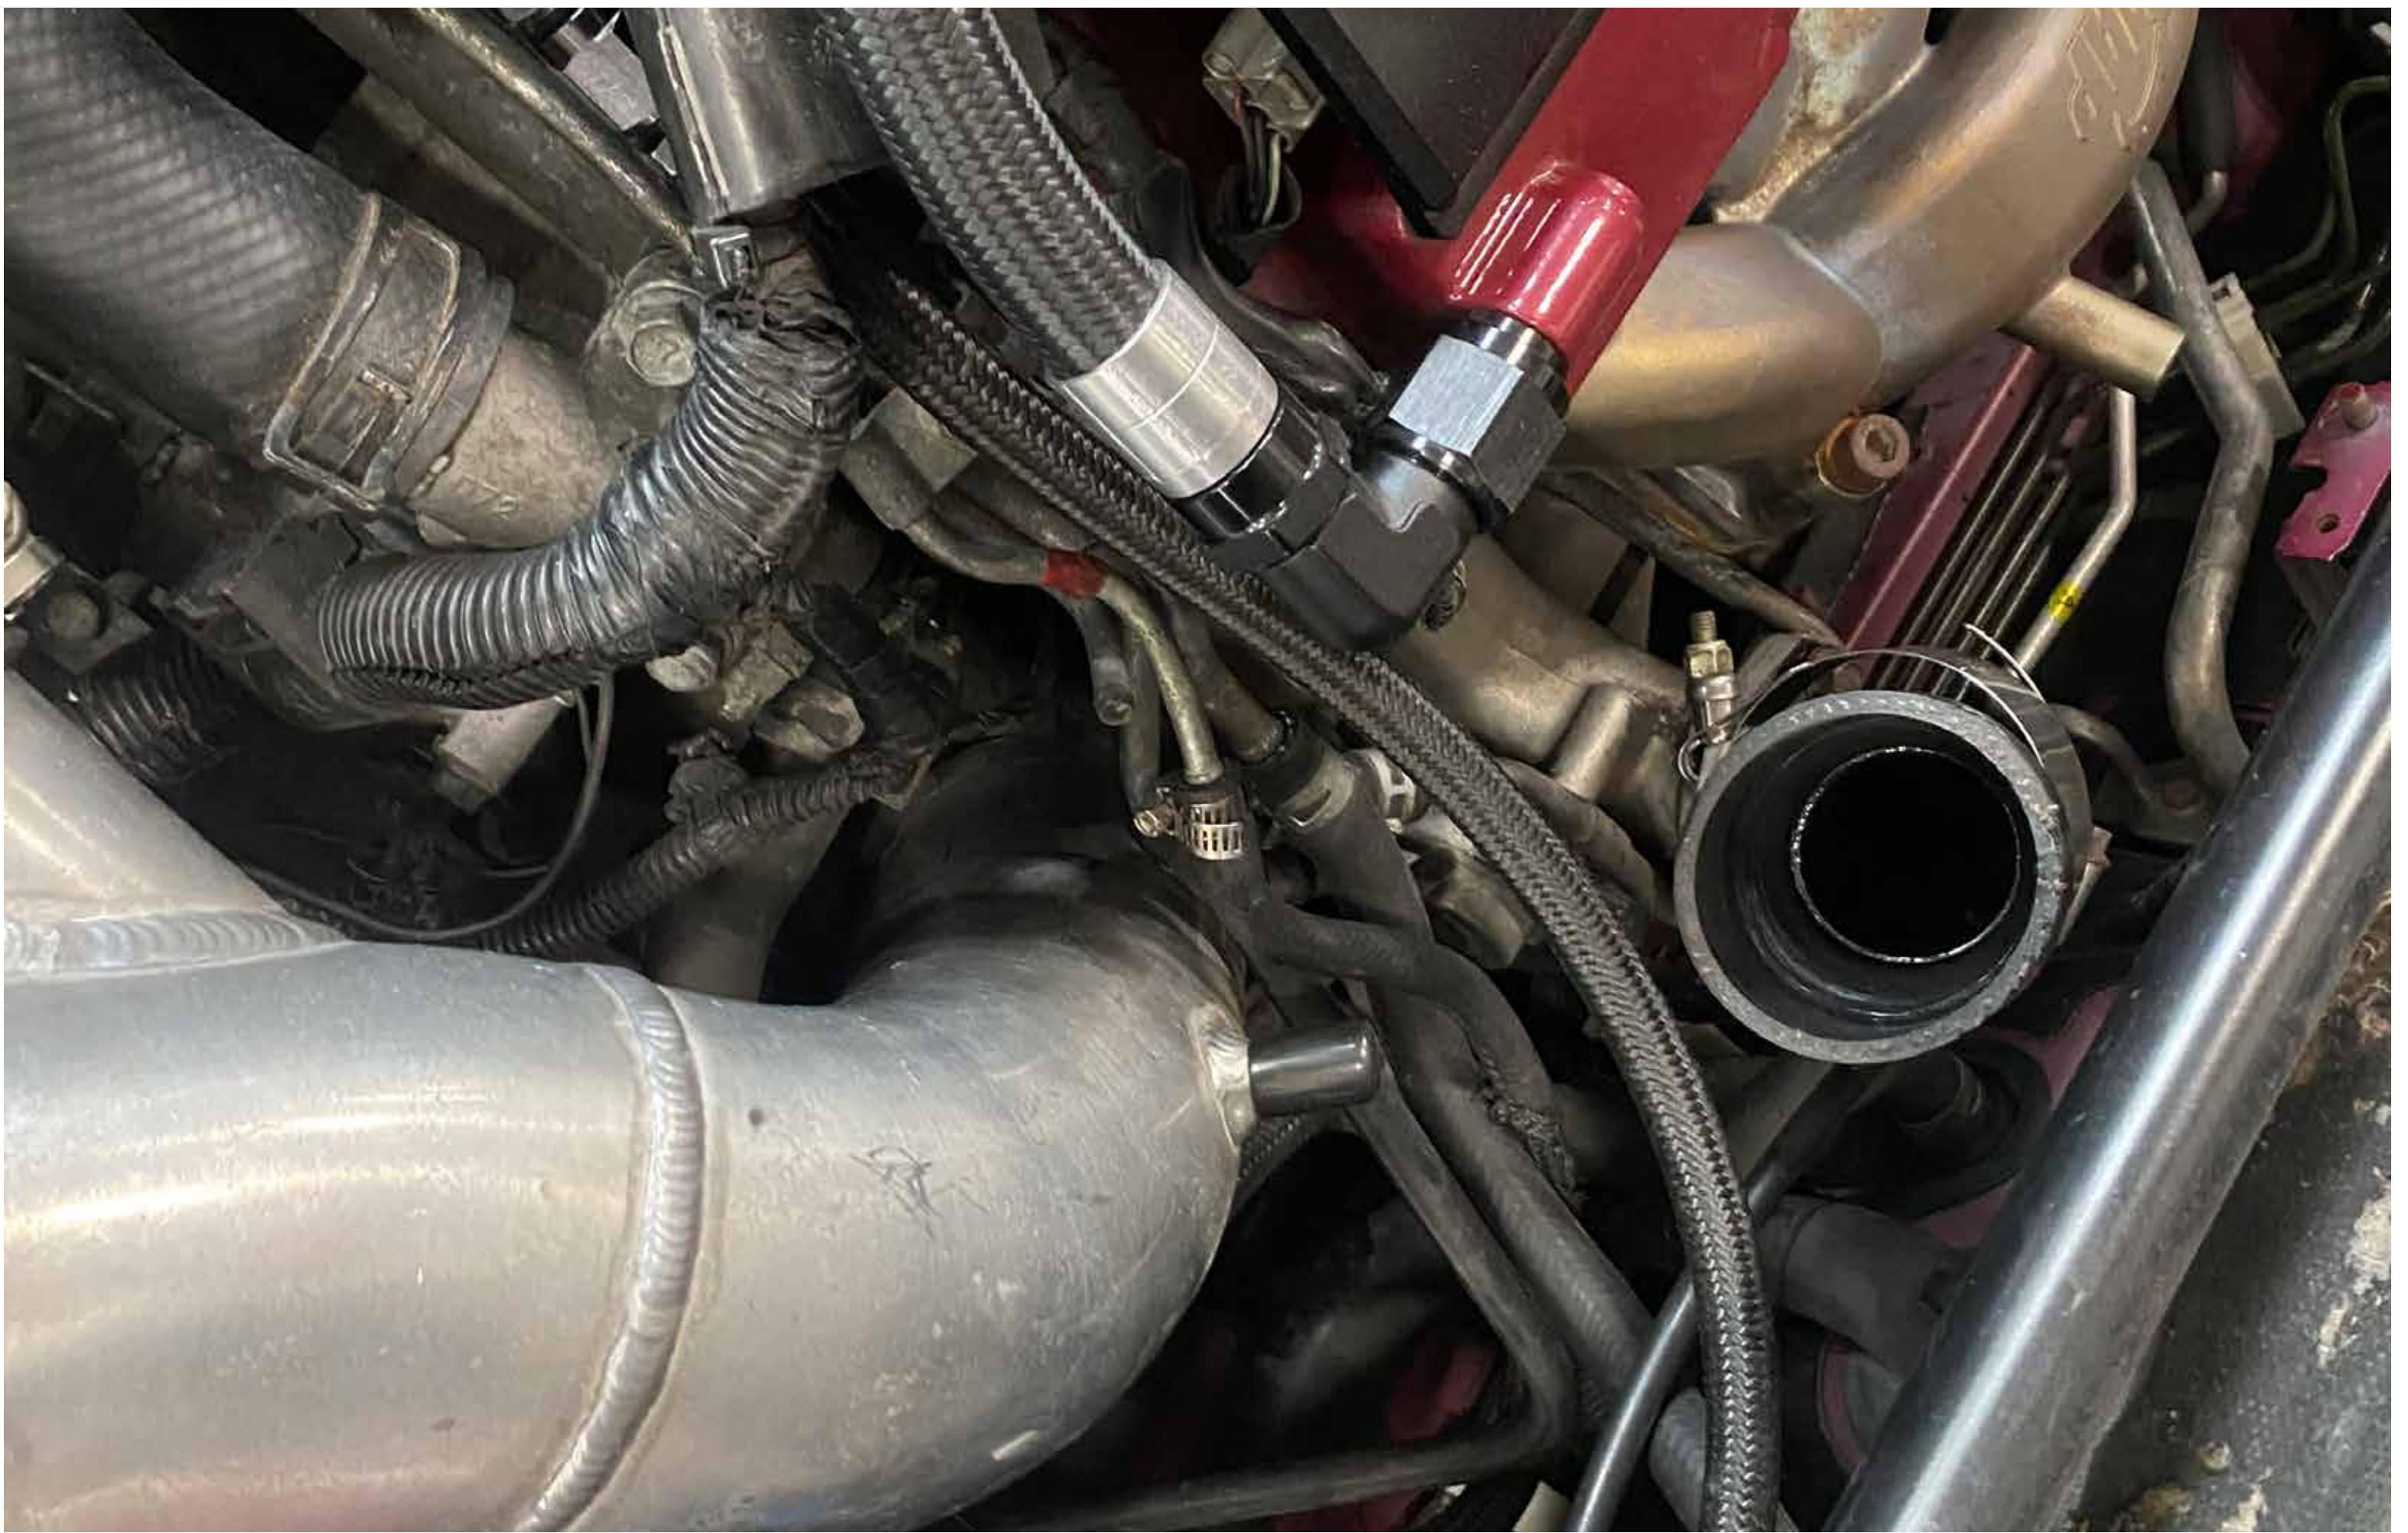

What's in the box?

1x MAP Billet power steering tank assembled with all fittings and screen
2x M6 stainless hold-down Allen head flange bolts.


Tools needed



You will need:


- Needle nose pliers
- 5mm allen wrench
- 10mm socket

Step 1

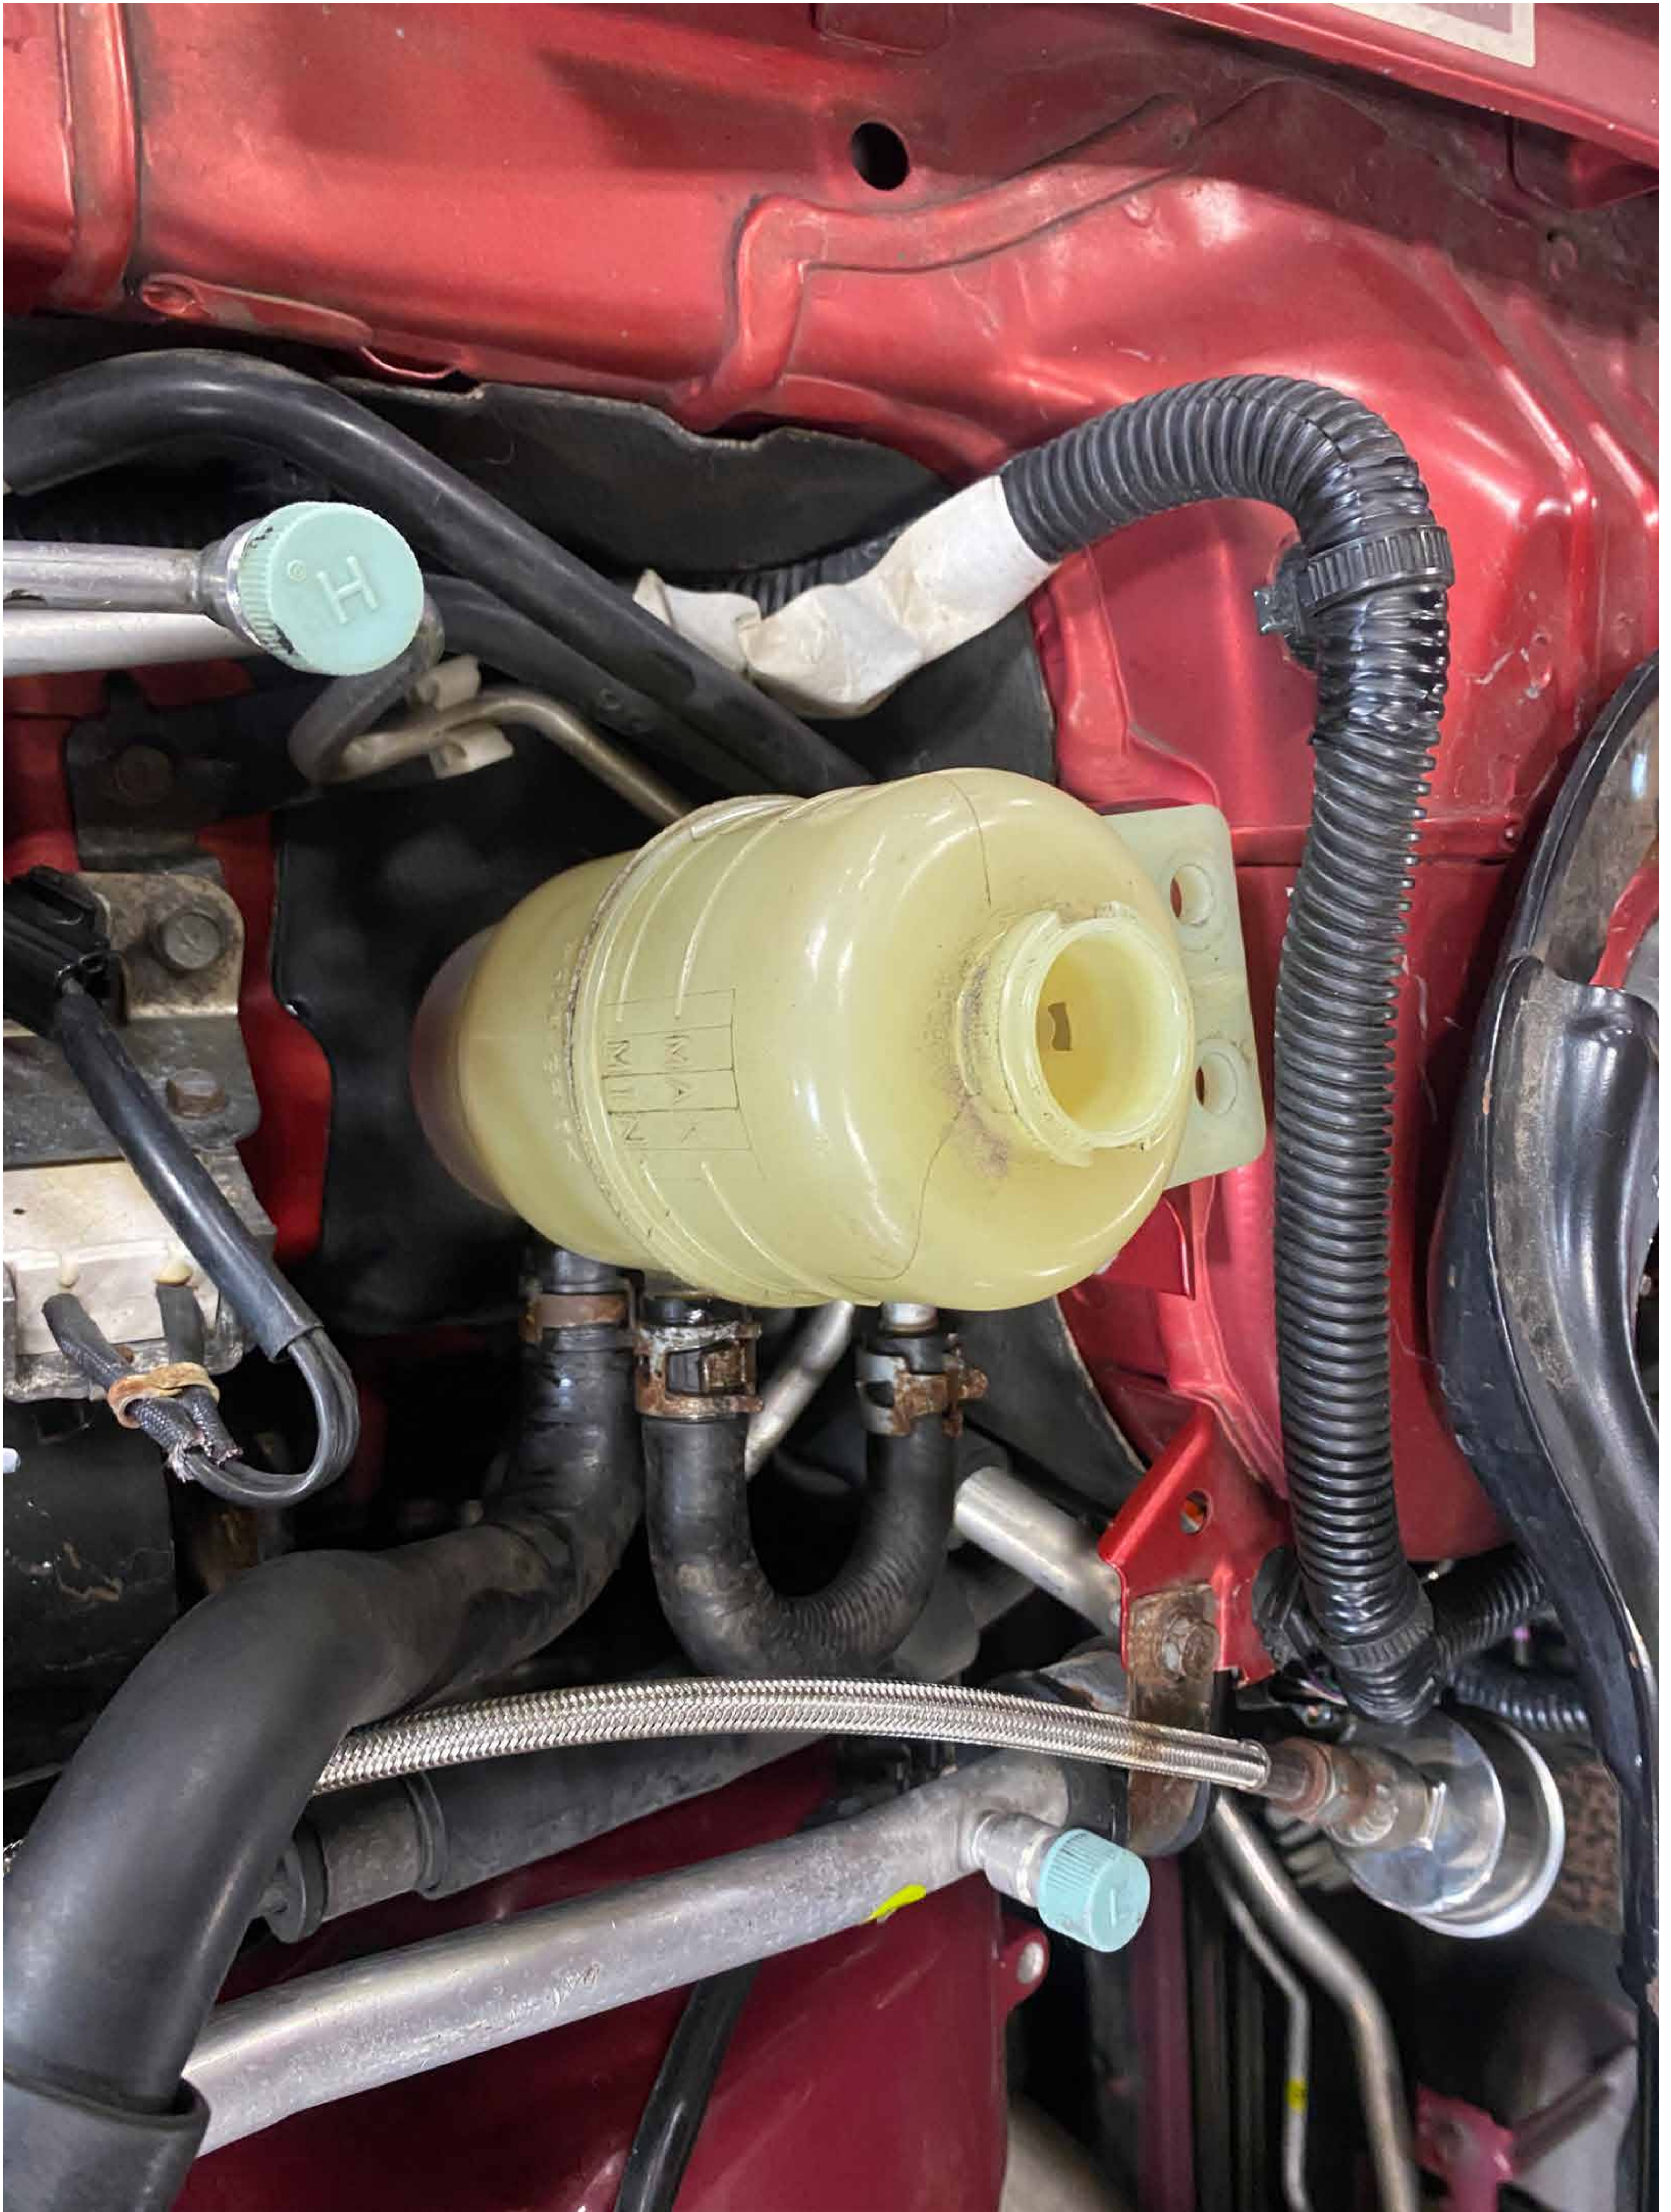

Remove 2 10mm bolts holding factory power steering reservoir to the vehicle

Step 2

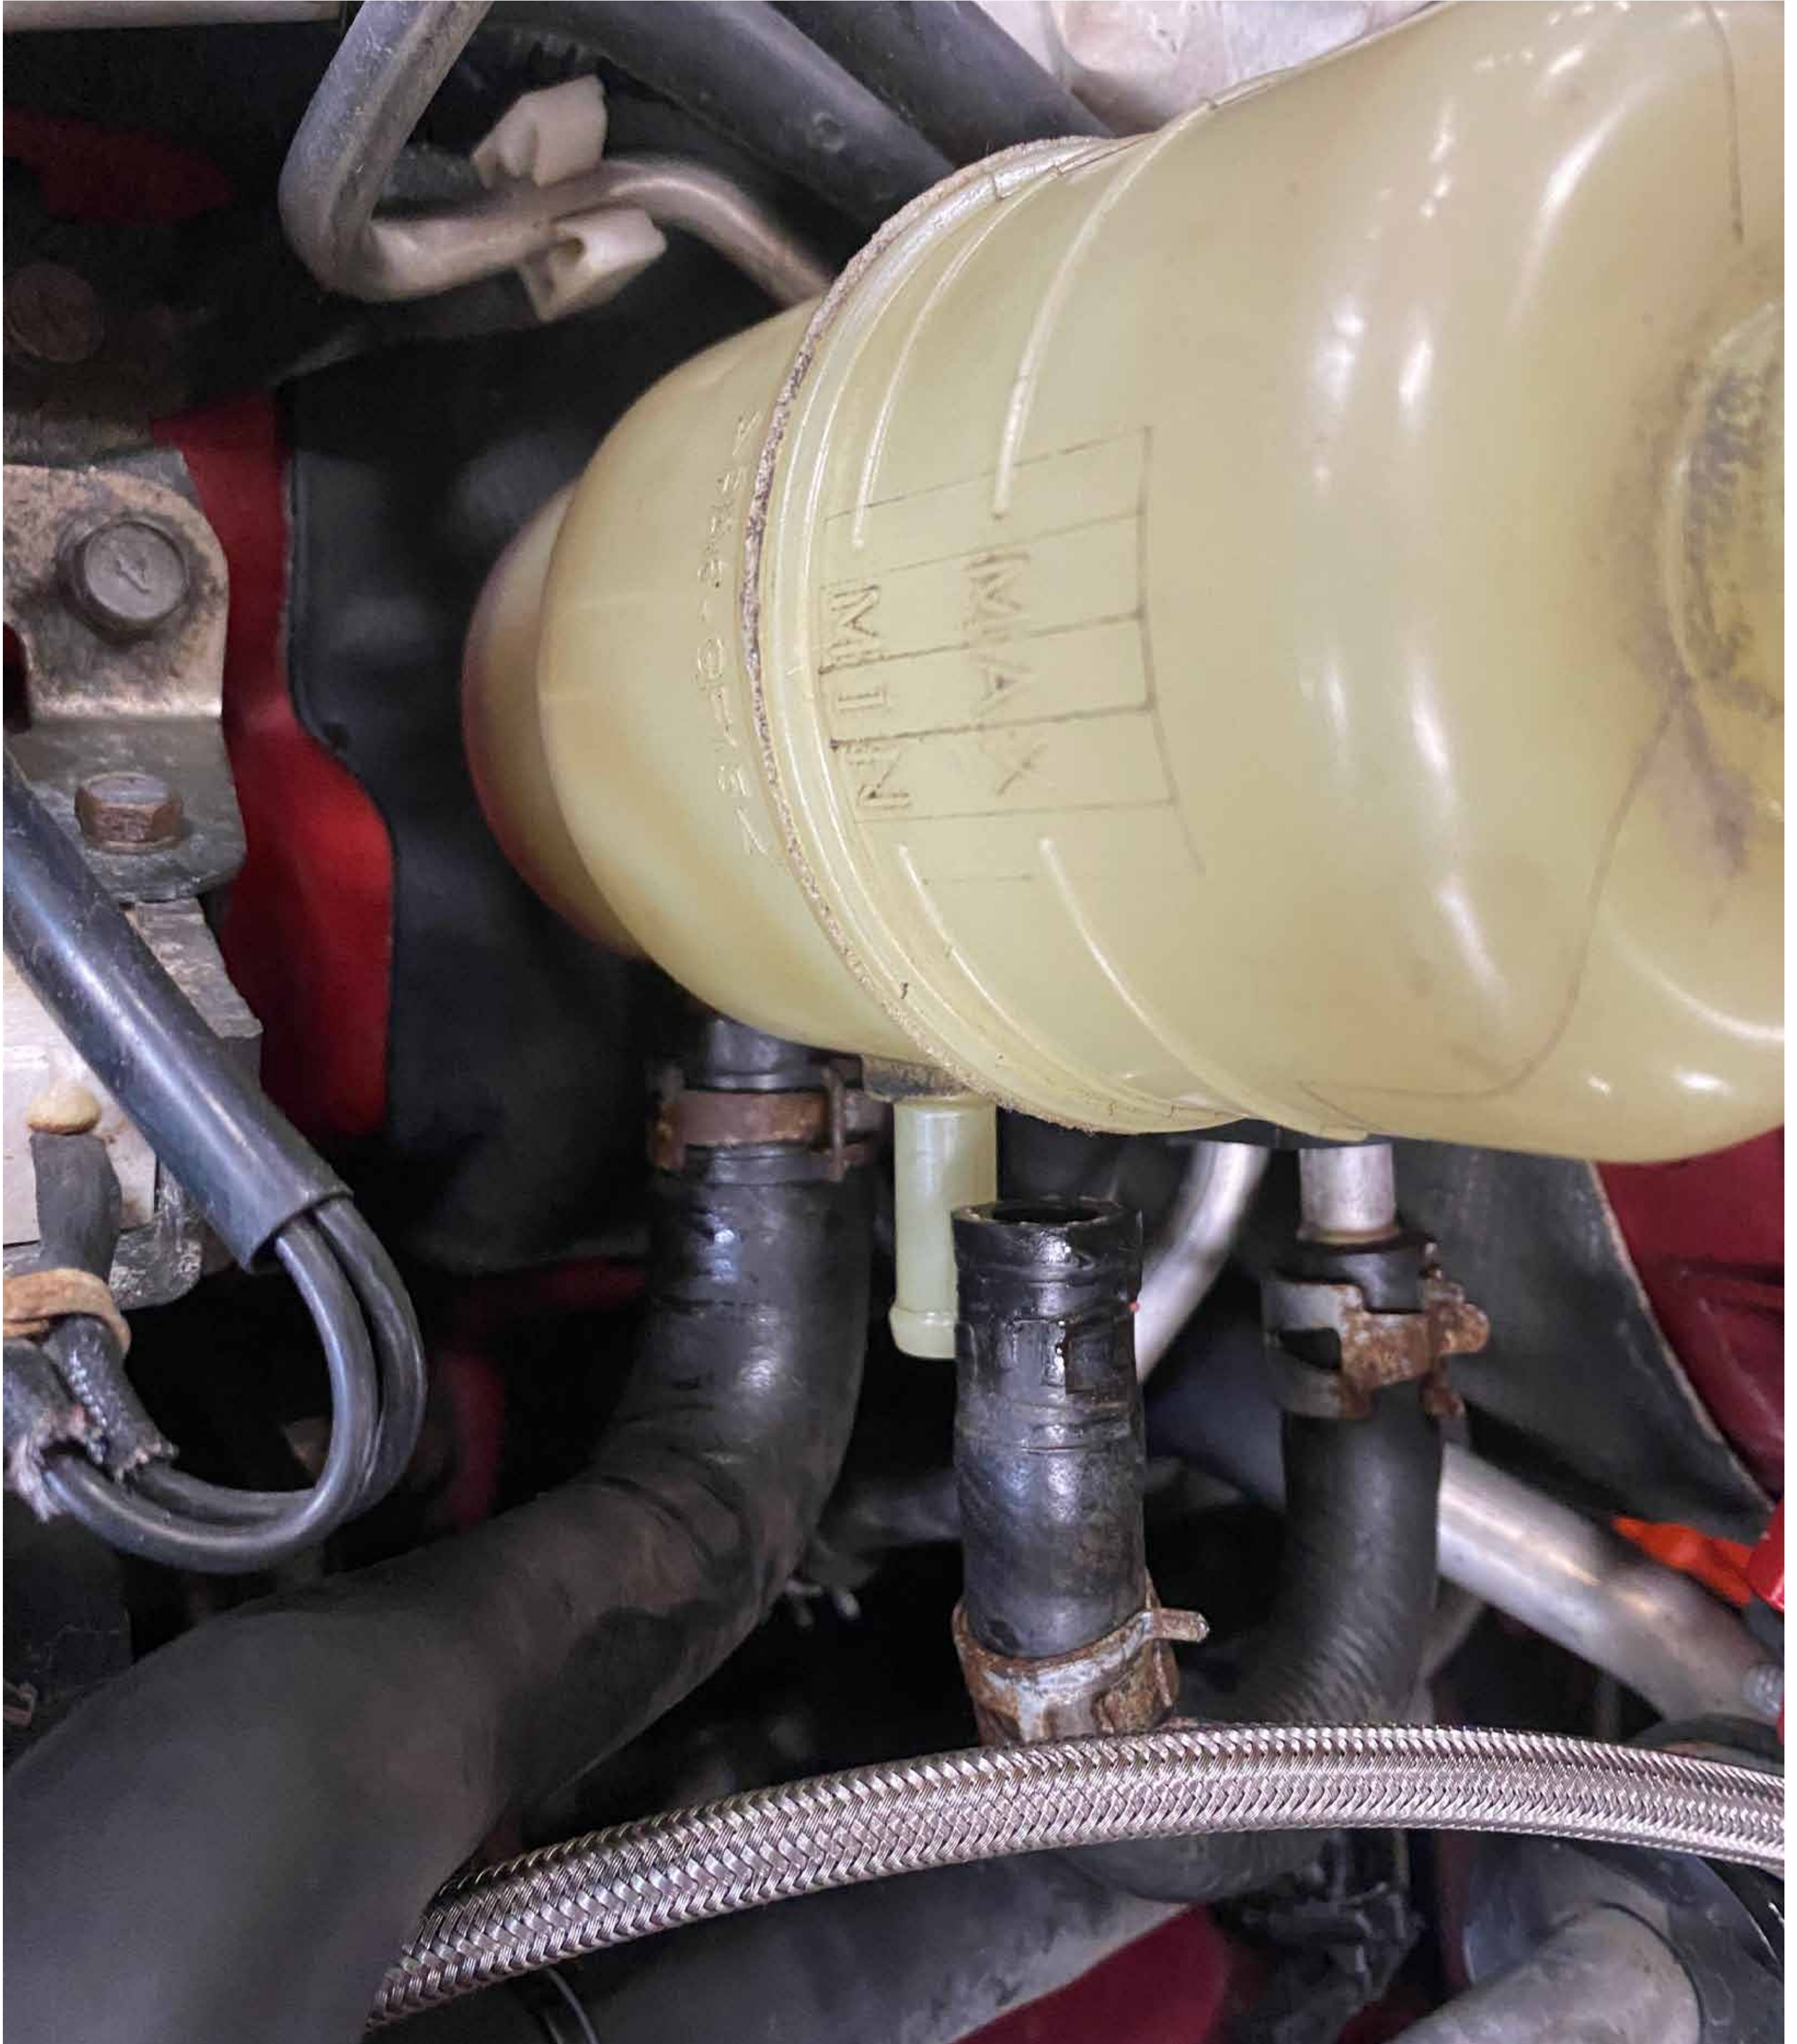

Remove upper power steering reservoir hose from the reservoir. *If you own a fluid suction pump now would be the time to remove as much of the power steering fluid in the reservoir as possible*

Step 3




Move reservoir to the side and remove the lower hose

Step 4




Attach lower hose to MAP evox power steering reservoir

Step 5

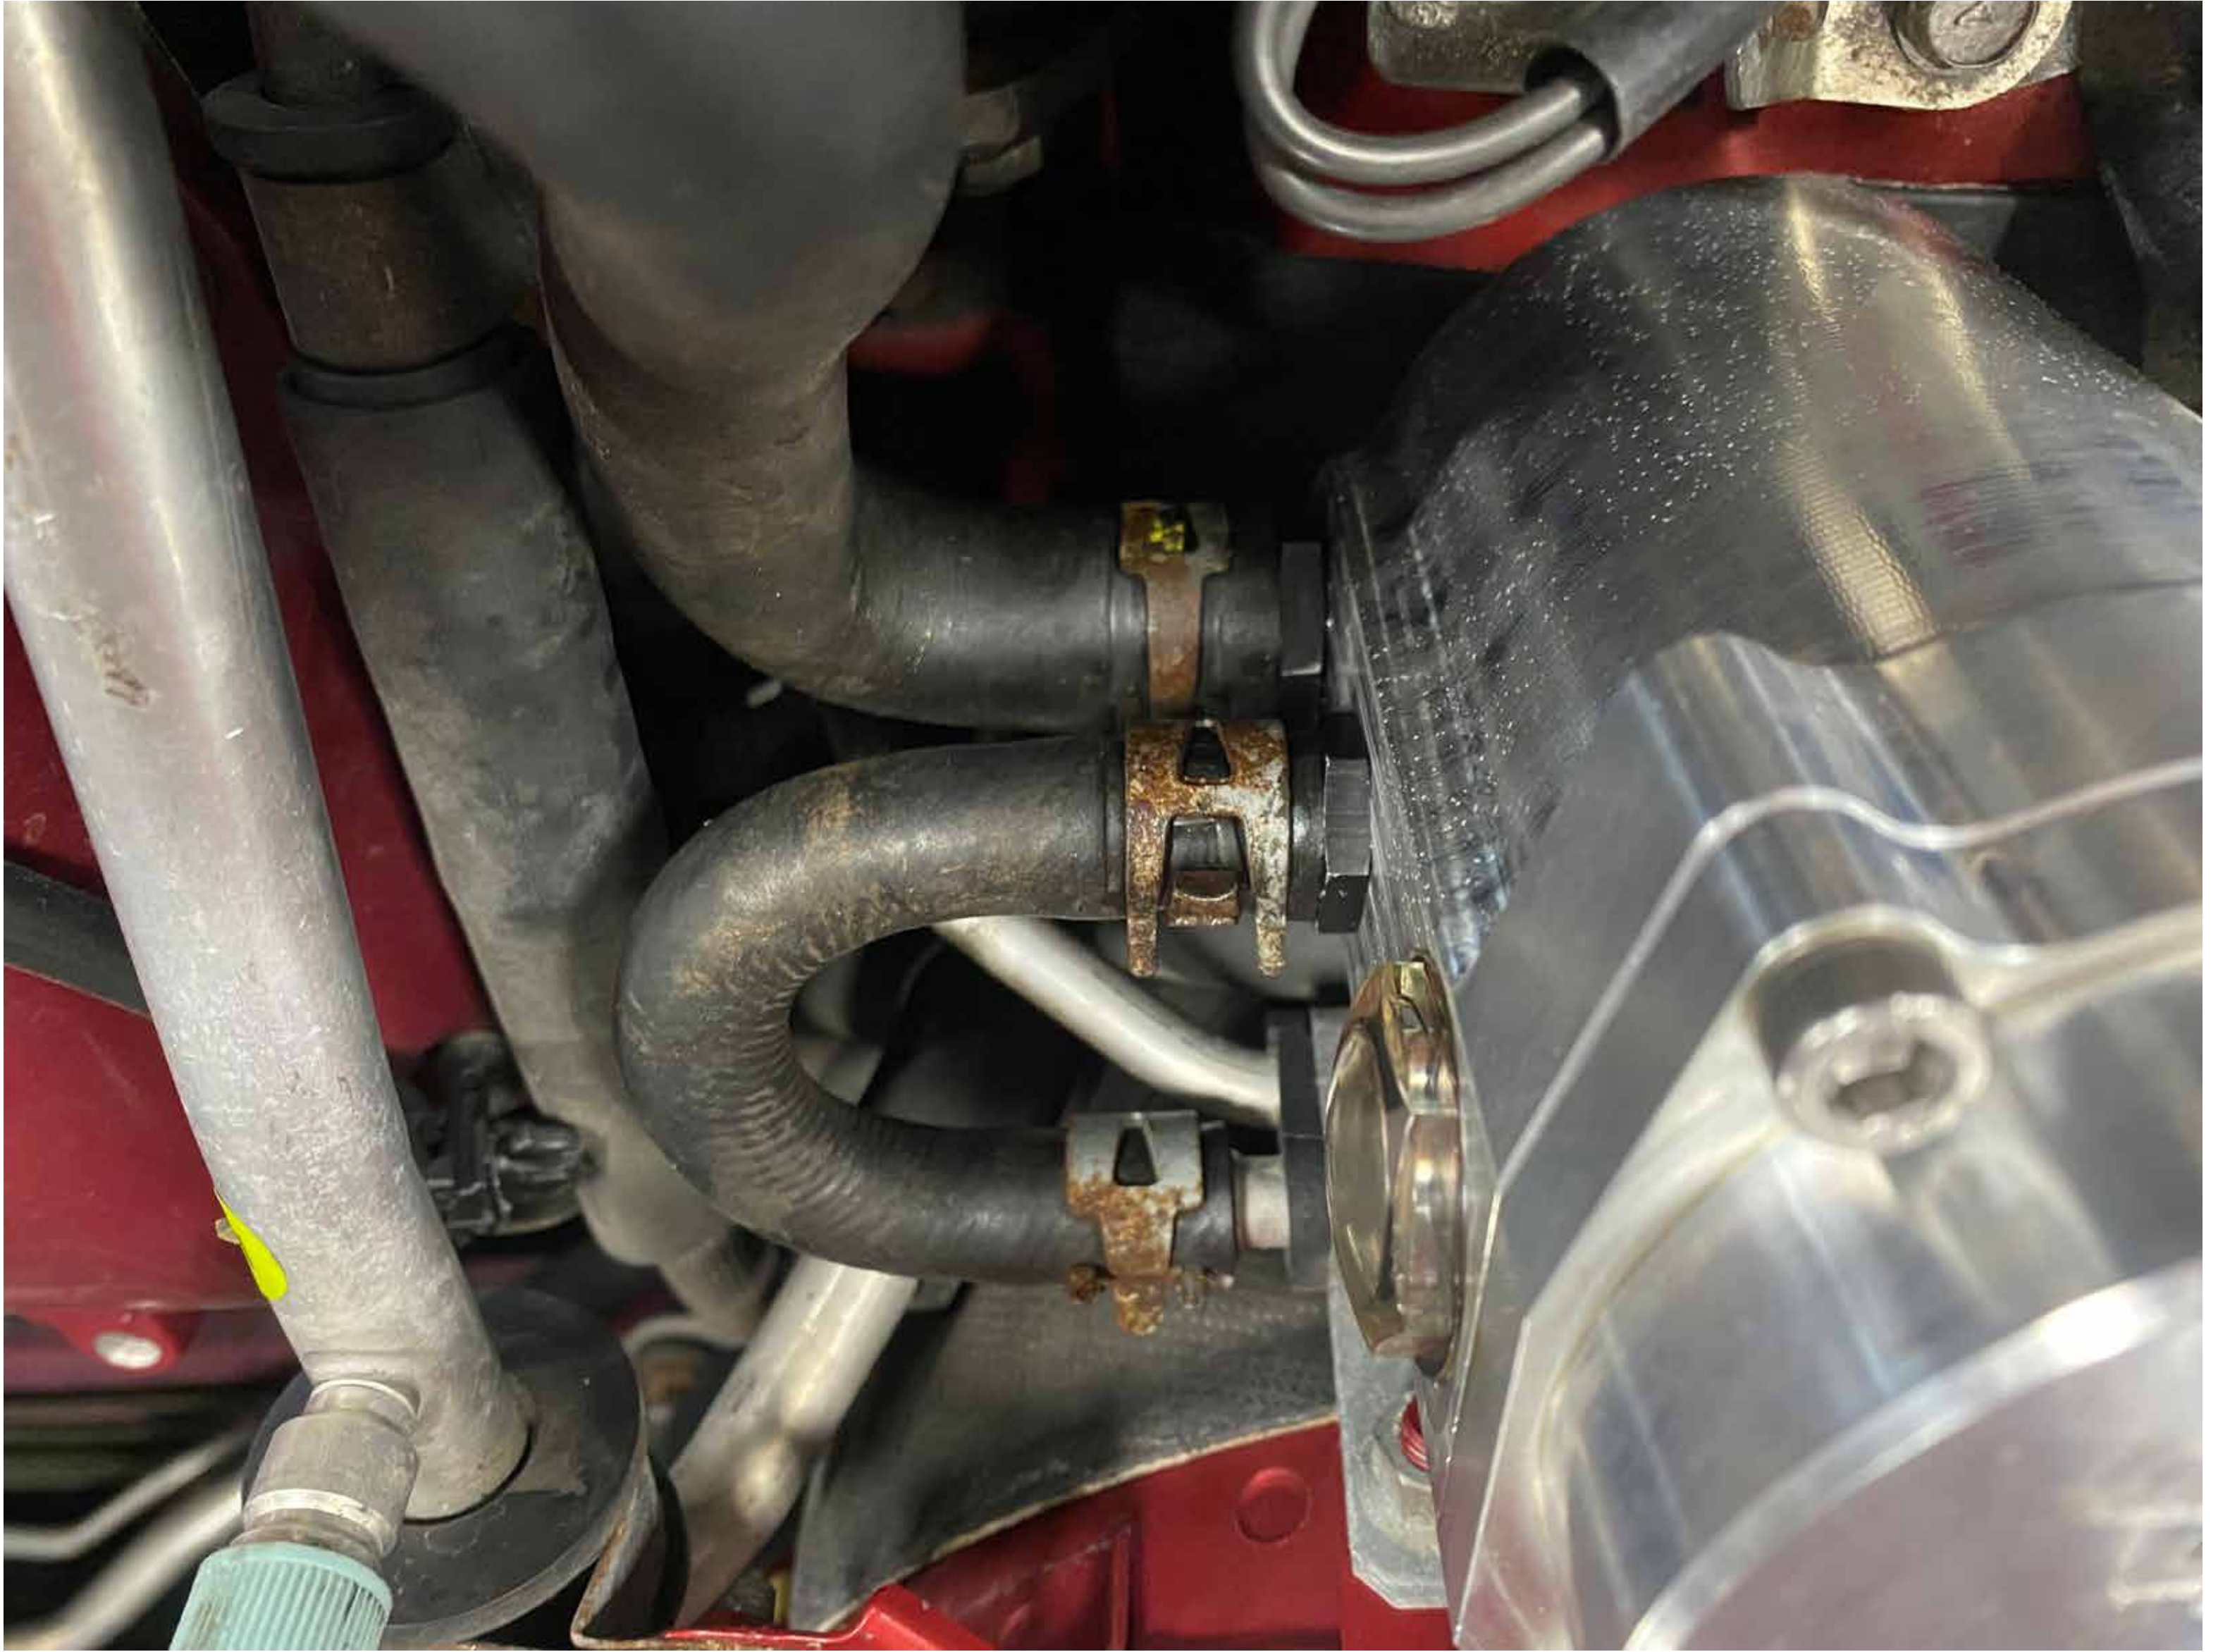

Attach upper hose to MAP evox power steering reservoir

Step 6

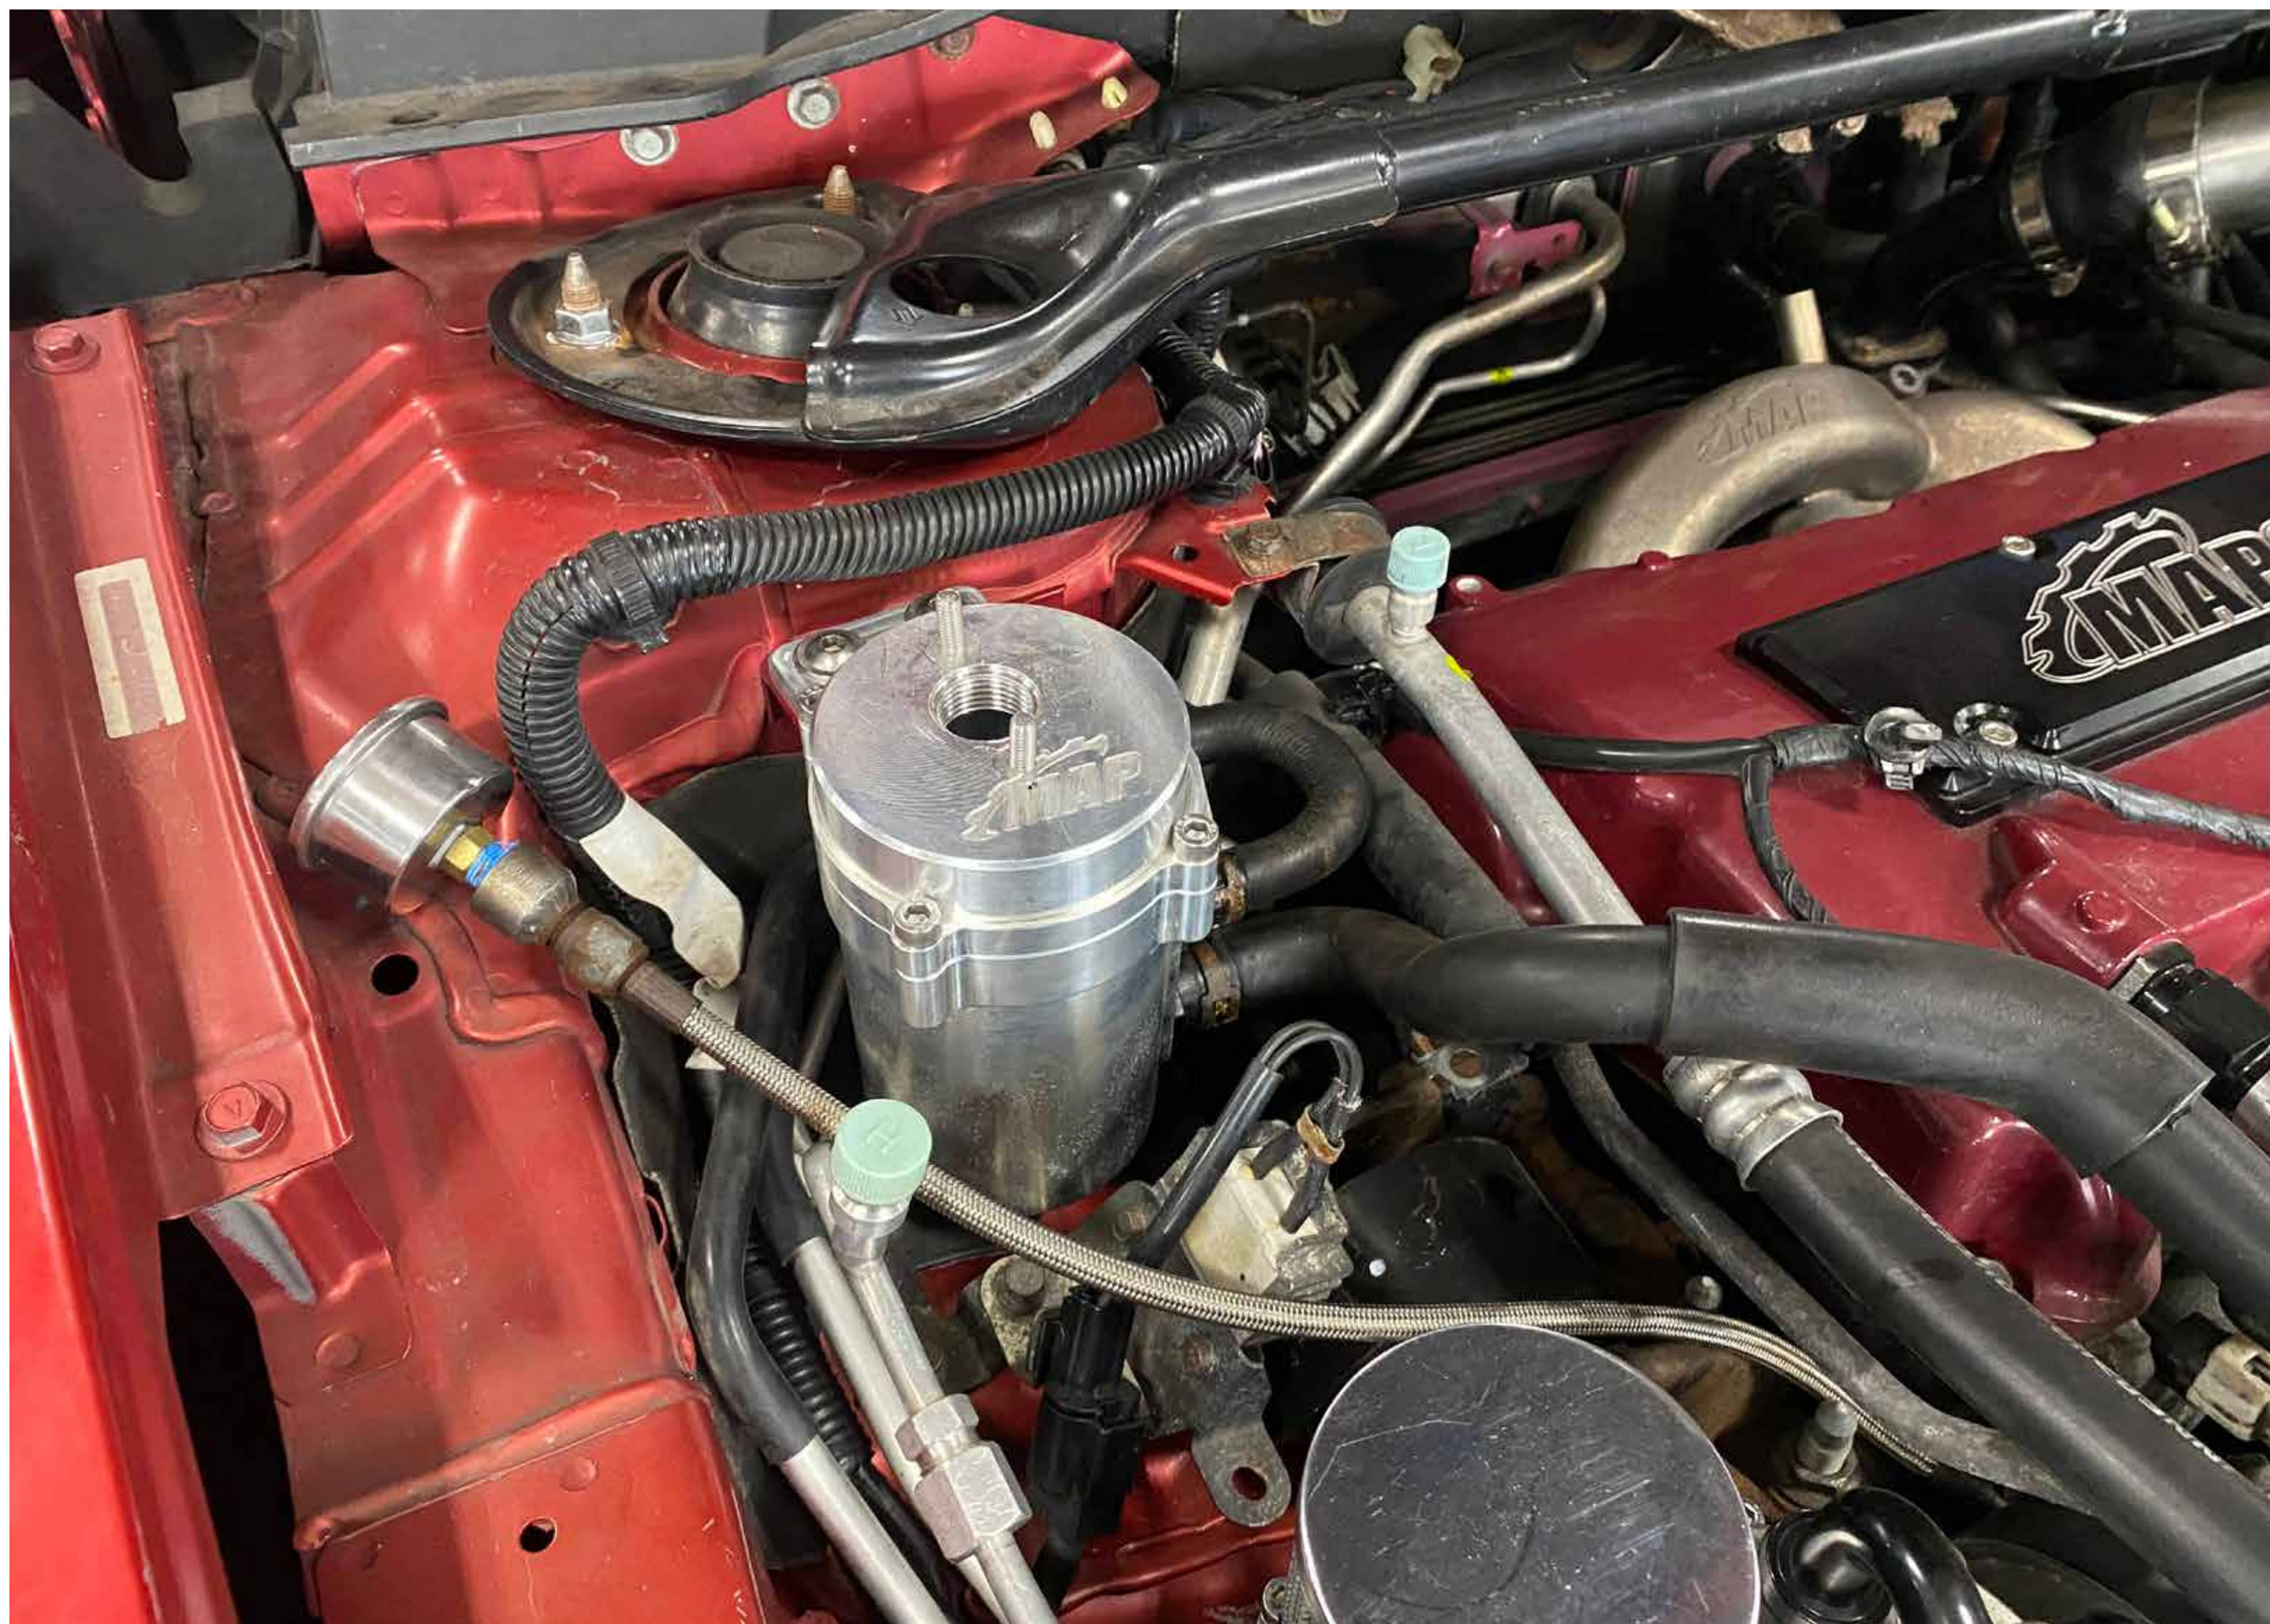

Attach MAP evox PSR to the factory reservoir mounting bracket using uncluded 5mm allen head bolts

Step 7




Fill PSR to the halfway point in the sightglass. *It is important after install that you start the car, move the wheel side to side a few times and recheck the level to ensure the system is full.*

We hope you enjoy your purchase! Reach out to us with any issues or concerns.



1-888-627-3736

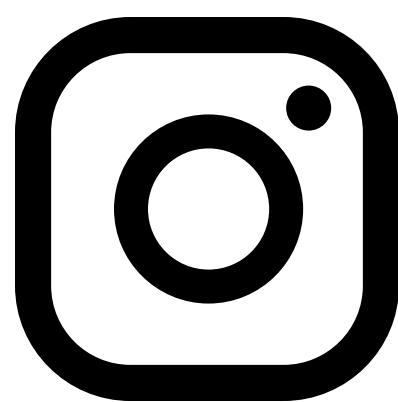

@maperformance



support@maperformance.com



www.facebook.com/modernautomotive-performance/

